



Assembly Instructions SYNE K2210CRTG-86 Pushback Recliner SKU# 10622187

Manufactured for Rooms To Go

Version#1 creation date 2025-12-18

*****CAUTION: The item is heavy, assembly should be performed by two people in soft surface**

PARTS LIST			
Front wood Leg 2 pieces		Rear wood Leg 2 pieces	

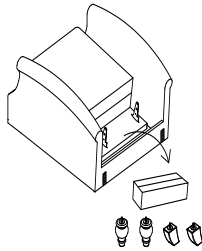


Figure 1


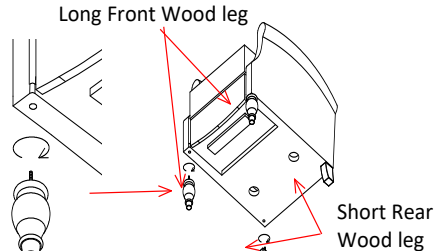





Figure 2

1. The Wooden Legs are located in a box underneath the seat, remove all the Legs from the box. Attach each wooden leg to the corresponding pre-drilled hole by turning them in a clockwise direction until they are tight.

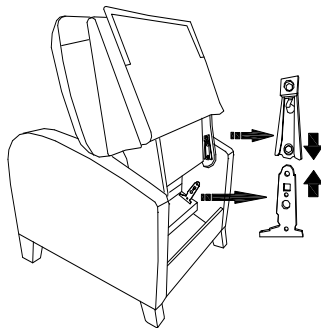


1. Align the metal brackets of the back with metal brackets of the seat.


2. Press both sides of the back firmly downward until it's locked into place. Note: make sure the tabs on the brackets are engaged.

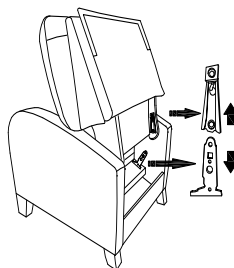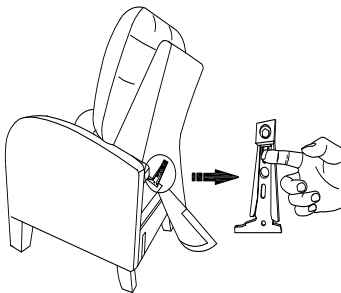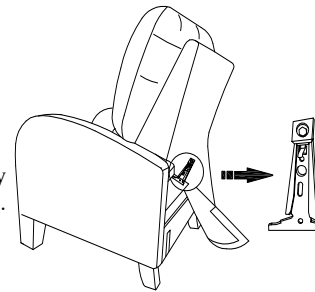


3. To remove the back, lift the tabs that are located in each bracket of the back and pull straight up.

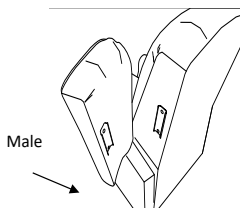

5. KD Wings (If applicable)
Insert the male KD bracket into the slot of the female bracket pressing firmly downward until the frame is tight.

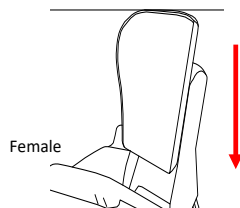

4. To make the chair easier to recline, tip it on its back and turn the tension adjusters counter clockwise. Turn them clockwise to increase the resistance needed to recline. Note: to keep the chair tension balanced, turn both sides in equal amounts.

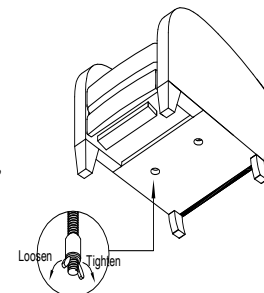

Note: There are no tension adjusters on mechanisms #1632, #1671, #1672, #2032, #2034, or #2072. But mechanisms #8550, #2000, 7550 or #8546 have the tension adjusters and you can get the mechanism numbers from the side of the mechanism. Follow point 5 above to adjust the tension.

