

LEG ASSEMBLY INSTRUCTIONS 1012 ACCENT CHAIR

5

1

2

4





SKU: 10661230 10661292

INCLUDED HARDWARE



2 BACK WOOD LEGS

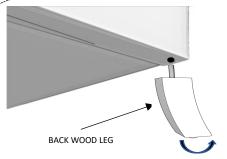

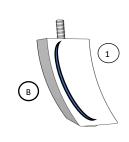

- Side B nust be facing the front part of the frame.
- Locate the hole in the bottom part of frame and insert the bolt of the front wood leg. Turn leg to the right until completely tight.

PERFORATION TURN LEG TO THE RIGHT IN ORDER TO TIGHTEN FRONT WOOD LEG Locate the hole in the bottom part of frame and insert the bolt of the front wood leg. Turn leg to the right

Back WOOD BACK

Side Brust be facing the front part of the frame.

2 Side Aust be facing the back part of the

until completely tight.

