



 
Manufactured for Rooms To Go

Assembly Instructions

SYNE K2702-52PHR SKU#11127025 11127037

***CAUTION: The item is heavy, assembly should be performed by two people.

PARTS LIST

Front Wood Leg (2 pieces)		Plastic Leg (2 pieces)	
Rear Wood Leg (2 pieces)		Transformer	

Step 1



The wood and plastic legs along with the transformer (P) are located in a box at the rear of the seat. Place the transformer aside for later and remove the legs from the box.

Each leg needs a plastic washer; slide the washers onto the bolt of each leg.

Step 2


Attach each leg to the corresponding pre-drilled holes by turning them in a clockwise direction until they are tight.

Note: Do not over-tighten the legs, as damage could occur.

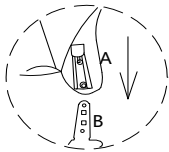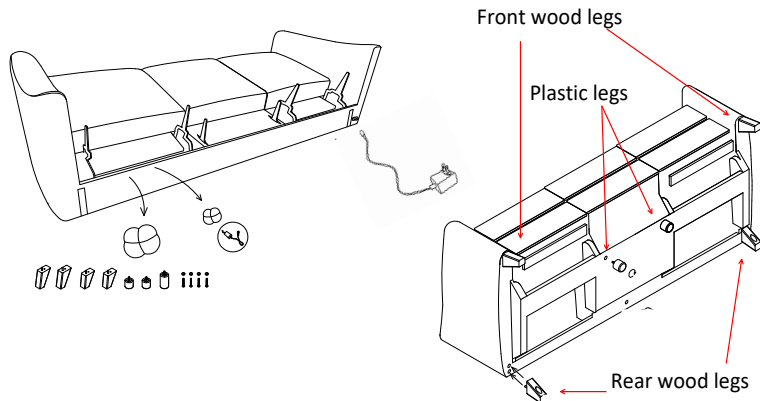

Step 3

Slide the metal receiver (A) over the metal post (B) to connect the seat back. Press both sides of the back firmly downward until the back is locked in place over the metal post.

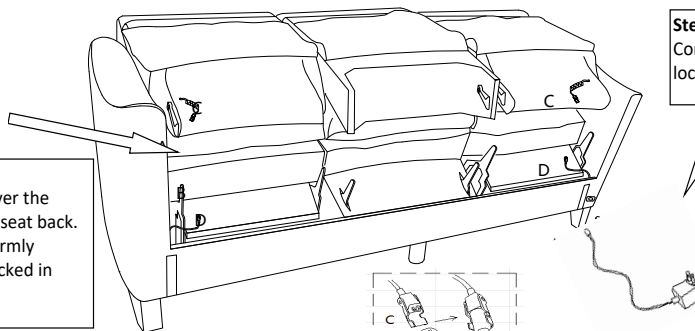

Step 4

Locate the power cord C attached to the bottom back and connect it to plug D located at the rear of the seat.

Step 5

Connect the transformer (P) to the DC port located at the rear of the arm.

Note: Make sure all plugs and cords are connected on the product before plugging the power cord into power outlet. Otherwise, damage can occur.

The USB ports (where applicable) are designed with working voltage of 5V, and can NOT be used to supply power for laptop computers (neither PC or Mac). Plugging a laptop computer into the USB port may end up damaging either the computer or the USB port due to unmatched working voltage.

WARNING
Misuse can result in FIRE or DEATH by ELECTRICAL SHOCK.

Read all instructions before using this furnishing.

DANGER – To reduce the risk of electric shock

1. Always unplug this furnishing from the electrical outlet before cleaning or servicing.

WARNING – To reduce the risk of burns, fire, electric shock, or injury to persons:

1. Unplug from outlet before putting on or taking off parts.
2. Never operate this furnishing if it has a damaged electrical cord or plug, if it is not working properly, or if the electrical cord or plug has been damaged or dropped into water. Stop using this furnishing and call a service center for examination and repair.
3. Keep the electrical cord and plug away from heated surfaces and other heat sources.
4. To disconnect, turn all controls to the off position, then remove plug from outlet.
5. When operating, ensure that electrical cord is not under the base, legs, or motion mechanism to avoid damage to electrical cord or plug.
6. Do not strain or stretch electrical cord.
7. Do not use extension cords or power strips.
8. Keep out of reach of children. This is not a toy.

WARNING
El mal uso puede provocar INCENDIO o MUERTE por DESCARGA ELÉCTRICA.

Leer todas las instrucciones antes de usar este mobiliario.

PELIGRO – Para reducir el riesgo de descarga eléctrica:

1. Siempre desenchufe este accesorio de la toma de corriente eléctrica antes de limpiarlo o repararlo.

ADVERTENCIA: Para reducir el riesgo de quemaduras, incendios, descargas eléctricas o lesiones a personas:

1. Desenchufe del tomacorriente antes de colocar o quitar partes.
2. Nunca opere este accesorio si tiene un cable o enchufe eléctrico dañado, si no funciona correctamente, o si el cable o el enchufe eléctrico se ha dañado o se ha caído al agua. Deje de usar este equipamiento y llame a un centro de servicio para que lo examinen y lo reparen.
3. Mantenga el cable eléctrico y el enchufe lejos de superficies calientes y otras fuentes de calor.
4. Para desconectar, gire todos los controles a la posición de apagado, luego retire el enchufe del tomacorriente.
5. Al operar, asegúrese de que el cable eléctrico no esté debajo de la base, las patas o el mecanismo de movimiento para evitar dañar el cable eléctrico o el enchufe.
6. No fuerce ni estire el cable eléctrico.
7. No utilizar cables de extensión o tomas de corriente.
8. Mantener fuera del alcance de los niños. Esto no es un juguete.