

Assembly Instructions

SYNE K5021-52PHR Reclining sofa with power

SKU: 11150238/11150226/11150214

Parts and Hardware List


NO.	Description	Image	Qty
A	Body		1
В	power cord into DC	320	1

Note: Make sure all PLUGS are connected on the product before plugging power cord into power outlet. If not damage can occur.

The USB ports (where applicable) are designed with working voltage of 5V, and can NOT be used to supply power for laptop computers (neither PC or Mac). Plugging a laptop computer to the USB port may end up damaging either the computer or the USB port due to unmatched working voltage.


STEP 1.


- 1. Slide the metal post over metal receiver, press both sides until locked in place.
- 2. Connect the reading lights wire G with H in the rear of the seat.
- 3. Connect the wireless charger E with F in the rear of the seat.
- 4. Connect the headrest wire A with wire B in the rear of the seat. (Same as it in left side)

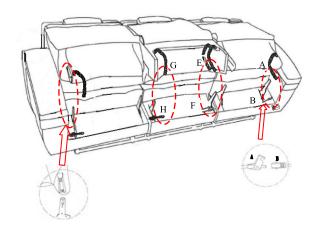


STEP 2.

 Plug the wall power cord into DC port in the rear of the seat, then plug another side into power outlet to operate.

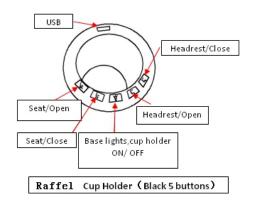

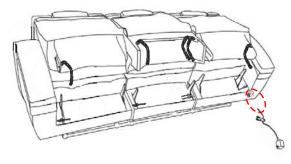



Lift up cover over the adjustable screws. Use screw driver and turn clockwise to tighten if needed.