 

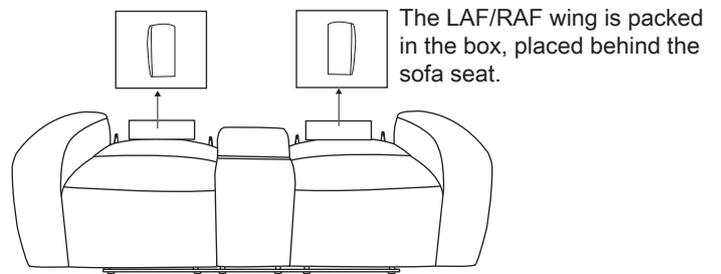


HLLC 9163-54HP DUAL POWER CONSOLE LOVESEAT

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment.


TOOLS REQUIRED : NO TOOLS REQUIRED			
PART LIST			DUAL POWER RECLINER
A	LAF BACK		1
B	CONSOLE BACK		1
C	RAF BACK		1
D	CONSOLE BODY		1
E	LAF WING		1
F	RAF WING		1
G	CONSOLE THREADED BOLT AND WING NUT		2
H	POWER CABLE		1

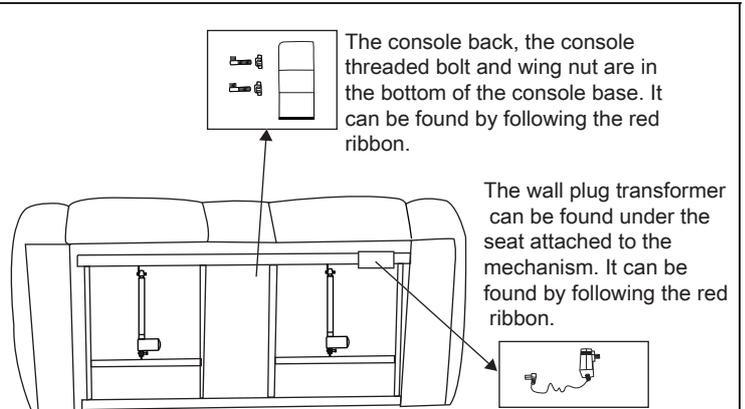

STEP 1 : Attach the Console Back(A)

* Note: The threaded bolts and wing nuts (C) and Console Back(A) are packed together at the top of Console Body(B), and can be located by following the red ribbon.

Attaching the Console Back Insert the threaded bolts into the T-nuts in the bottom of the console back approximately 1/4". Align the threaded bolts (C) in the slots located in the top rear of the console body (B). Firmly push down on the Console Back (A) until it is resting on the top of the Console Body (B). You should be able to visually locate the threaded bolts inside the Console Body (B). Using the wing nuts supplied, thread both wing nuts first then tighten them to securely hold the console back in place. Be careful not to over tighten.

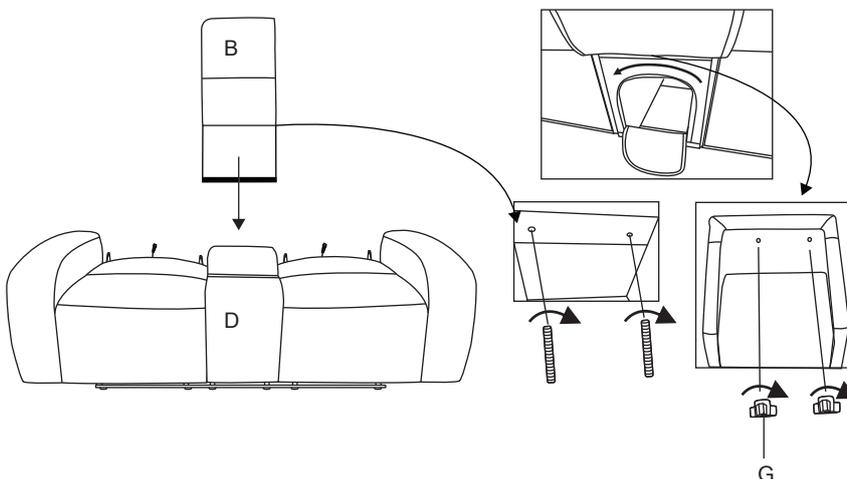

STEP 2 : Attaching the KD backs

Position KD back with the KD receiver positioned over the mechanism post receiver on the back frame, pushing in a downward motion from the top of the back frame until a clicking sound is heard.


STEP 3 : Attaching the lead wires

Attaching the lead wire found at the bottom of each motion back to the lead wire at the rear of each seat. Make sure to close the clip lock to keep the connection from coming loose during use.

STEP 4 : Attach the KD Wings


Position the KD bracket on the wing so it is inside of the KD receiver on the back frame, push in a downward motion from the top of the back frame . Repeat the same step to attach the opposite side wing. See the illustration as right.

*Repeat the the above step to attach the KD backs to all of the sku's.


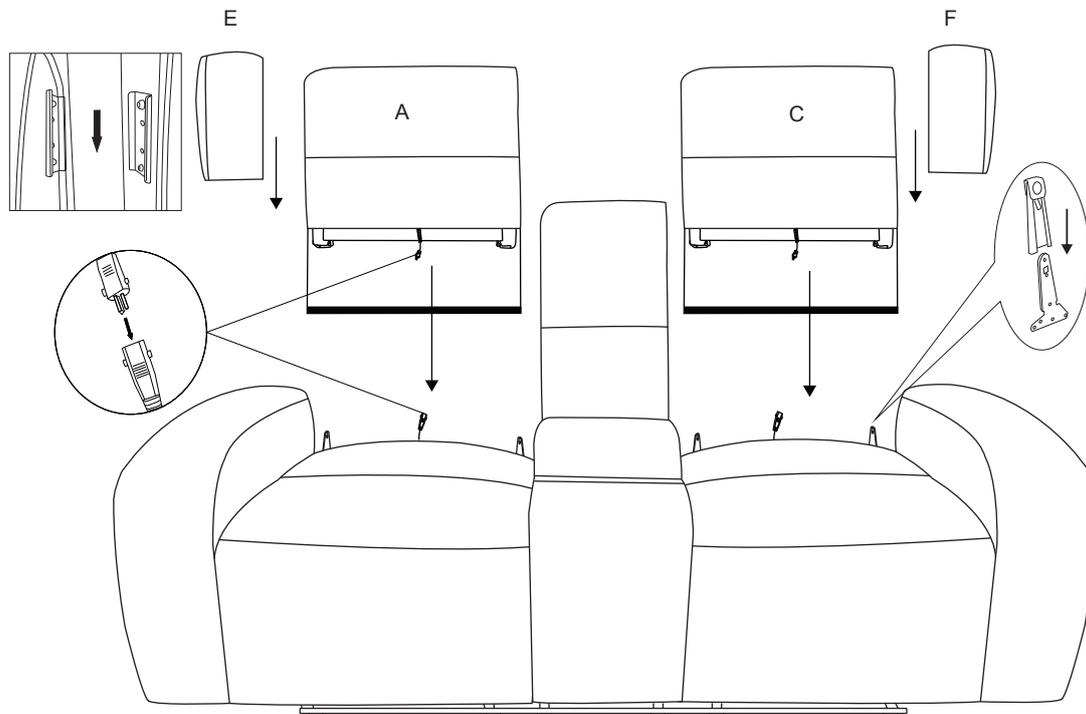


STEP 5: Connecting the Wall Plug Transformer

Attach the matching end of the wall plug transformer power cable to the power inlet located at the rear of each LAF/ RAF dualpower recliner as seen below

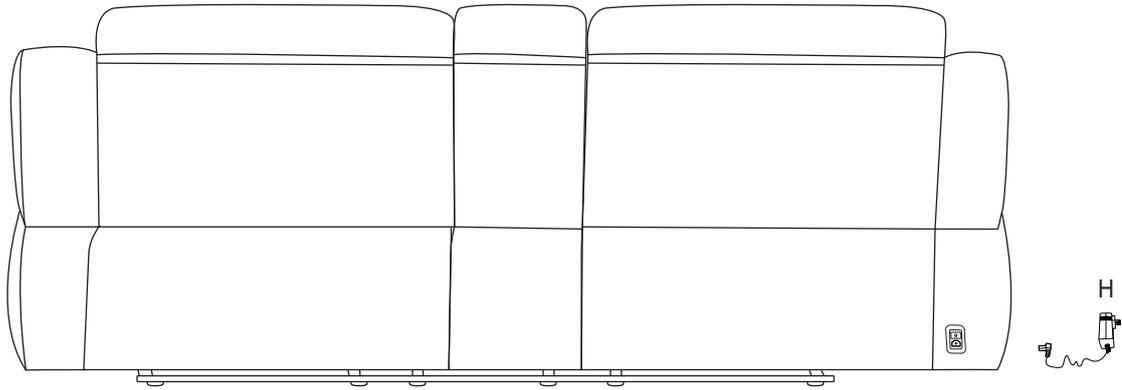


Do Not Plug the power source into a power outlet until your product is completely assembled and position where you intend to use it.

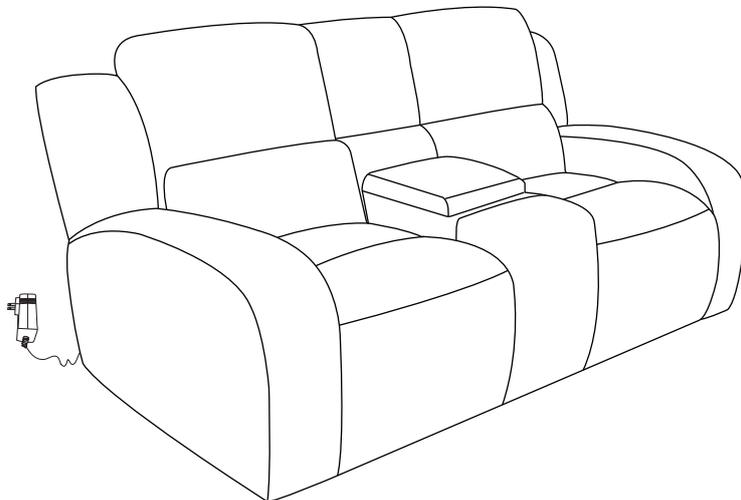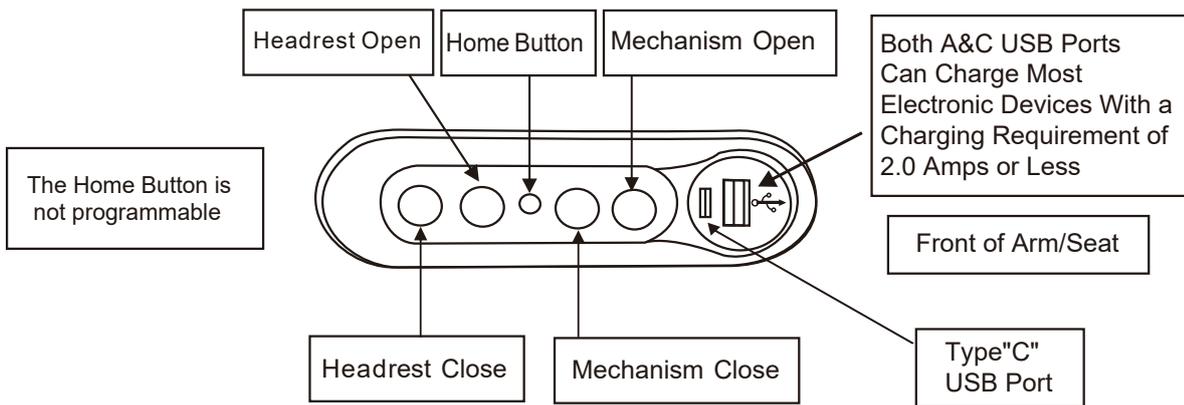

POWER CONNECTIONS


STEP6 :Connect wall plug transformer to DC socket

wall plug transformer to DC socket

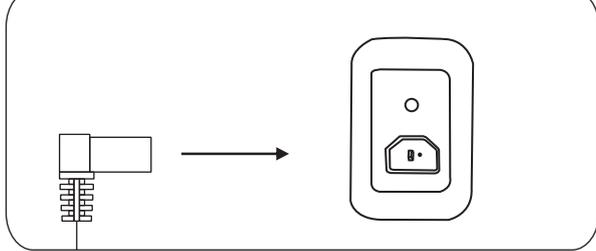



STEP7 :Connect wall plug transformer to outlet.

wall plug transformer to Electrical Outlet

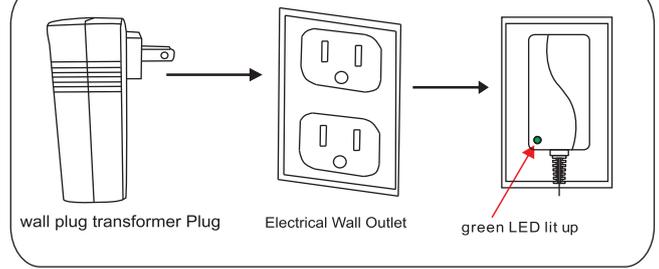

STEP8 :After all connections have been made ,ensure that LED lit up

socket

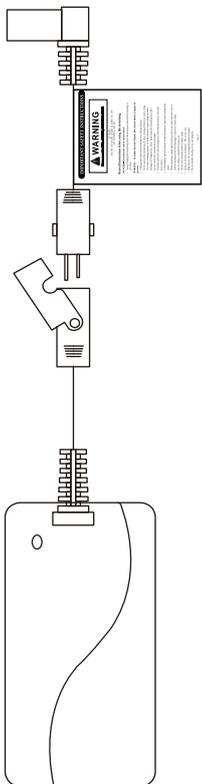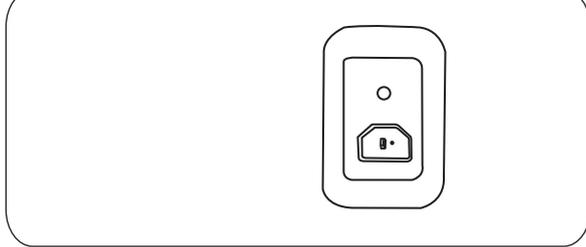

ENGLISH

IMPORTANT SAFETY INSTRUCTIONS

WARNING

Misuse can result in FIRE or DEATH by ELECTRICAL SHOCK

29 VDC2A

JIANGSU MULIN INTELLIGECE ELECTRIC CO., LTD
ML-H290020A-C-04C(12)

Read all instructions before using this furnishing.

DANGER – To reduce the risk of electric shock:

- Always unplug this furnishing from the electrical outlet before cleaning or servicing.

WARNING – To reduce the risk of burns, fire, electric shock, or injury to persons:

- Unplug from outlet before putting on or taking off parts.
- Never operate this furnishing if it has a damaged electrical cord or plug, if it is not working properly, or if the electrical cord or plug has been damaged or dropped into water. Stop using this furnishing and call a service center for examination and repair.
- Keep the electrical cord and plug away from heated surfaces and other heat sources.
- To disconnect, turn all controls to the off position, then remove plug from outlet.
- When operating, ensure that electrical cord is not under the base, legs, or motion mechanism to avoid damage to electrical cord or plug.
- Do not strain or stretch electrical cord.
- Do not use extension cords or power strips.
- Keep out of reach of children. This is not a toy.
- Plug directly into a compatible electrical socket.
- Do not modify the plug or use any adapters.

SPANISH

INSTRUCCIONES DE SEGURIDAD IMPORTANTES

WARNING

El mal uso puede provocar INCENDIO o MUERTE por DESCARGA ELÉCTRICA

29 VDC2A

JIANGSU MULIN INTELLIGECE ELECTRIC CO., LTD
ML-H290020A-C-04C(12)

Leer todas las instrucciones antes de usar este mobiliario.

PELIGRO – Para reducir el riesgo de descarga eléctrica:


- Siempre desenchufe este accesorio de la toma de corriente eléctrica antes de limpiarlo o repararlo.

ADVERTENCIA: para reducir el riesgo de quemaduras, incendios, descargas eléctricas o lesiones a personas:

- Desenchufe del tomacorriente antes de colocar o quitar partes.
- Nunca opere este accesorio si tiene un cable o enchufe eléctrico dañado, si no funciona correctamente, o si el cable o el enchufe eléctrico se ha dañado o se ha caído al agua. Deje de usar este equipamiento y llame a un centro de servicio para que lo examinen y lo reparen.
- Mantenga el cable eléctrico y el enchufe lejos de superficies calientes y otras fuentes de calor.
- Para desconectar, gire todos los controles a la posición de apagado, luego retire el enchufe del tomacorriente.
- Al operar, asegúrese de que el cable eléctrico no esté debajo de la base, las patas o el mecanismo de movimiento para evitar dañar el cable eléctrico o el enchufe.
- No fuerce ni estire el cable eléctrico.
- No utilice cables de extensión o tomas de corriente.
- Mantener fuera del alcance de los niños. Esto no es un juguete.
- Enchúfelo directamente a una toma de corriente compatible.
- No modifique el enchufe ni utilice adaptadores.


WARNINGS

*Clearance to the wall 4.5 inches

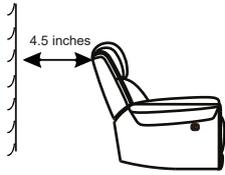

*Avoid placing unit in areas where unit can be exposed to direct sunlight other powerful light sources,
*Keep unit at least 24" from all heat sources.


as fading or discoloration may occur.

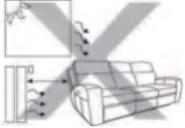


*Do not reach under seat when mechanism is operating or serious injury may occur.
*Reclining mechanism should only be operated while seated properly.



Do not sit on arms or backrest
Do not jump or roughhouse on furniture

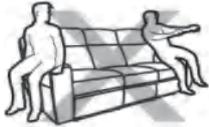

*If unit must be moved, do not drag. Unit must be lifted in order to be moved.

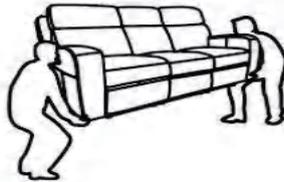

*Do not continuously operate mechanism for more than one minute or unit may go into protection mode by shutting down to prevent overheating.

*Unplug unit from power source prior to cleaning mechanism.

*Do not allow electrical components to come into contact with any liquids.

Trouble Shooting

Problem	Solution
No power	Check all power connections (Step 3.5.6.7.8)
No Reclining	Check all power connections (Step 3.5.6.7.8)
Headrest not working	Make sure headrest power cable is connected to chair cable (Step 3.5.6.7.8)
Lights not working	Check all power connections
USB not charging	Check all power connections (Step 3.5.6.7.8) Verify that USB cable is functioning
Backrest uneven	Ensure that seatback brackets are installed and locked in position(Step 1.3)

This product is manufactured by HLLC for

ROOMS TO GO® 