

78 mm

228 mm



德沃康科技集团有限公司
DewertOKIN Technology Group Co.,Ltd

物料名称/Name:

物料编码/Part No.:

参数规格/Spec:

阶段标记 Static int flat	重量 Weight	比例 Scale	版本 Revision
共 张, 第 张 Total: page, page			

WARNING
El mal uso puede provocar INCENDIO o MUERTE por DESCARGA ELÉCTRICA

29VDC/2A
DewertOkin Technology Group Co., Ltd.
JLDP.10.078.221

Leer todas las instrucciones antes de usar este mobiliario.
PELIGRO – Para reducir el riesgo de descarga eléctrica:

1. Siempre desenchufe este accesorio de la toma de corriente eléctrica antes de limpiarlo o repararlo.
2. Nunca opere este accesorio si tiene un cable o enchufe eléctrico dañado, si no funciona correctamente, o si el cable o el enchufe eléctrico se ha dañado o se ha caído al agua. Deje de usar este equipamiento y llame a un centro de servicio para que lo examinen y lo reparen.
3. Mantenga el cable eléctrico y el enchufe lejos de superficies calientes y otras fuentes de calor.
4. Para desconectar, gire todos los controles a la posición de apagado, luego retire el enchufe del tomacorriente.
5. Al operar, asegúrese de que el cable eléctrico no esté debajo de la base, las patas o el mecanismo de movimiento para evitar dañar el cable eléctrico o el enchufe.
6. No fuerce ni estire el cable eléctrico.
7. No utilice cables de extensión o tomas de corriente.
8. Mantener fuera del alcance de los niños. Esto no es un juguete.
9. Enchúfelo directamente a una toma de corriente compatible.
10. No modifique el enchufe ni utilice adaptadores.

WARNING
Maluso can result in FIRE or DEATH by ELECTRICAL SHOCK

29VDC/2A
DewertOkin Technology Group Co., Ltd.
JLDP.10.078.221

Read all instructions before using this furnishing.
DANGER – To reduce the risk of electric shock

1. Always unplug this furnishing from the electrical outlet before cleaning or servicing.

WARNING – To reduce the risk of burns, fire, electric shock, or injury to persons:

1. Unplug from outlet before putting on or taking off parts.
2. Never operate this furnishing if it has a damaged electrical cord or plug, if it is not working properly, or if the electrical cord or plug has been damaged or dropped into water. Stop using this furnishing and call a service center for examination and repair.
3. Keep the electrical cord and plug away from heated surfaces and other heat sources.
4. To disconnect, turn all controls to the off position, then remove plug from outlet.
5. When operating, ensure that electrical cord is not under the base, legs, or motion mechanism to avoid damage to electrical cord or plug.
6. Do not strain or stretch electrical cord.
7. Do not use extension cords or power strips.
8. Keep out of reach of children. This is not a toy.
9. Plug directly into a compatible electrical socket.
10. Do not modify the plug or use any adapters.

标记 Marker	处数 Numbers	Change record		编辑 Edit	年月日 yy/mm/dd
设计 Design	签名 Signature	年月日 yy/mm/dd	设计 Design	签名 Signature	年月日 yy/mm/dd
标准化 Standardization			审核 Audit		
工艺 Craft			批准 Approval		




Assembly Instructions


SYNE 2275-10 Stationary Loveseat SKU# 15422758/15422760

Manufactured for Rooms To Go


*****CAUTION:** The item is heavy, assembly should be performed by two people.

Parts and Hardware List

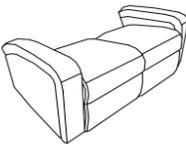
No	Description	Image	Qty	No	Description	Image	Qty
A	LSF Back Cushion		1	B	RSF Back Cushion		1
C	Plastic Leg		4	D	LSF Wing		1
E	RSF Wing		1		Loveseat Base		

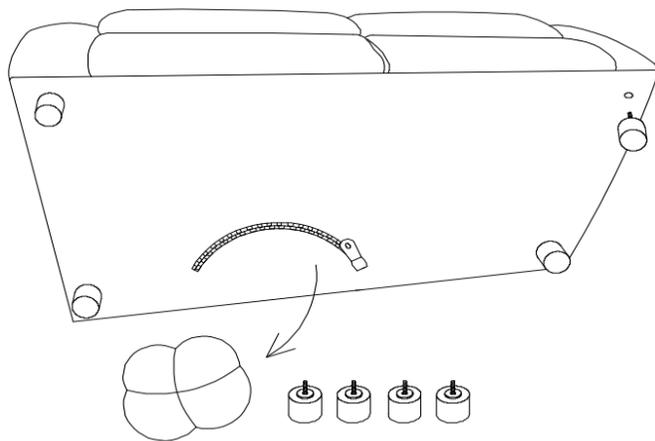

Step 1
The plastic legs are located inside the black dust cover under the loveseat. Unzip the dust cover and remove the legs. Attach each leg to corresponding pre-drilled hole, turning by hand in clockwise

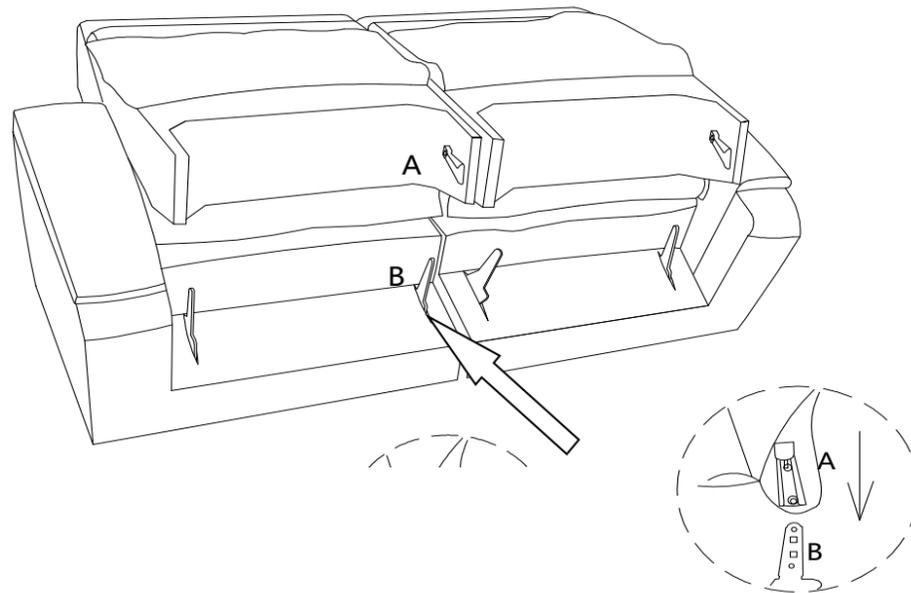

Step 2
Slide metal receiver A over the metal post B. Press both sides of the back firmly downward until it is locked in place.

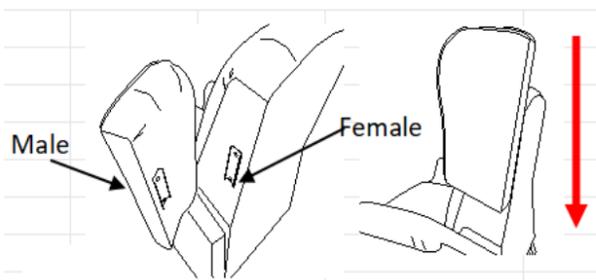

Step 3: Attach the LSF wing and RSF wing by inserting the male KD brackets into the slot of the female brackets, pressing firmly downward until



Assembly Instructions

SYNE 2275-21/22PHR Loveseat - Dual Power Recliner

SKU# 15222754/15222766


Manufactured for Rooms To Go

*****CAUTION:** The item is heavy, assembly should be performed by two people.

Parts and Hardware List


No	Description	Image	Qty	No	Description	Image	Qty
A	LSF Back Cushion		1	B	RSF Back Cushion		1
C	Loveseat Recliner Base		1	D	Transformer		1
A	LSF Wing		1	B	RSF Wing		1

Please remove the cardboard that is stapled to the wood strips attached to the bottom of the furniture. Do NOT use a hammer!

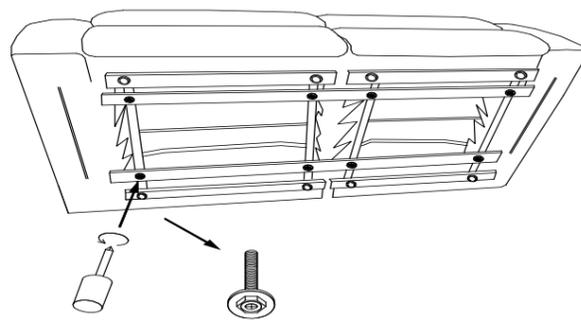



Step 1
Slide metal receiver A over the metal post B. Press both sides of the back firmly downward until it is locked in place.

Step 3
Locate the transformer, which is attached to the bottom of the rail. Connect the transformer to the DC Port, which is located at the rear of the arm.

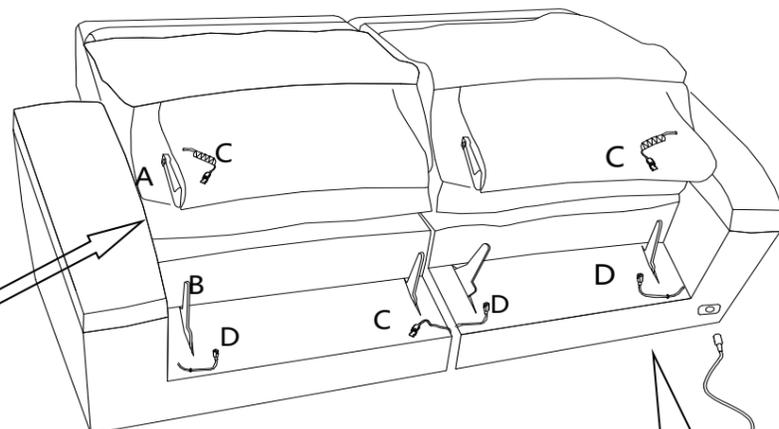

Step 2
Locate the power cord C, which is attached to the bottom back, and connect it to plug D, which is located at the rear of the seat.

Step 4: Attach the LSF wing and RSF wing by inserting the male KD brackets into the slot of the female brackets, pressing firmly downward until the wings are tight and in place.

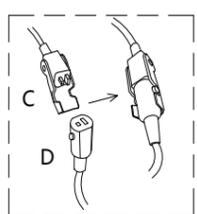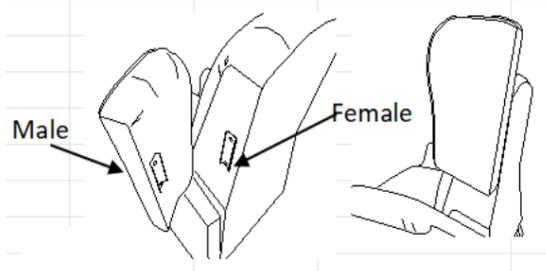

Note: Make sure all plugs are connected on the product before plugging power cord into power outlet. If not, damage can occur. The USB ports (where applicable) are designed with working voltage of 5V, and can NOT be used to supply power for laptop computers (neither PC or Mac). Plugging a laptop computer to the USB port may end up damaging either the computer or the USB port due to unmatched working voltage.





Assembly Instructions



SYNE 2275-55 Console SKU# 15322756/15322768

Manufactured for Rooms To Go

*****CAUTION:** The item is heavy, assembly should be performed by two people.

Parts and Hardware List

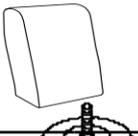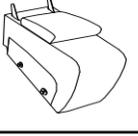No	Description	Image	Qty	No	Description	Image	Qty
A	Back Cushion		1	D	Console Base		1
B	Plastic Leg		4				

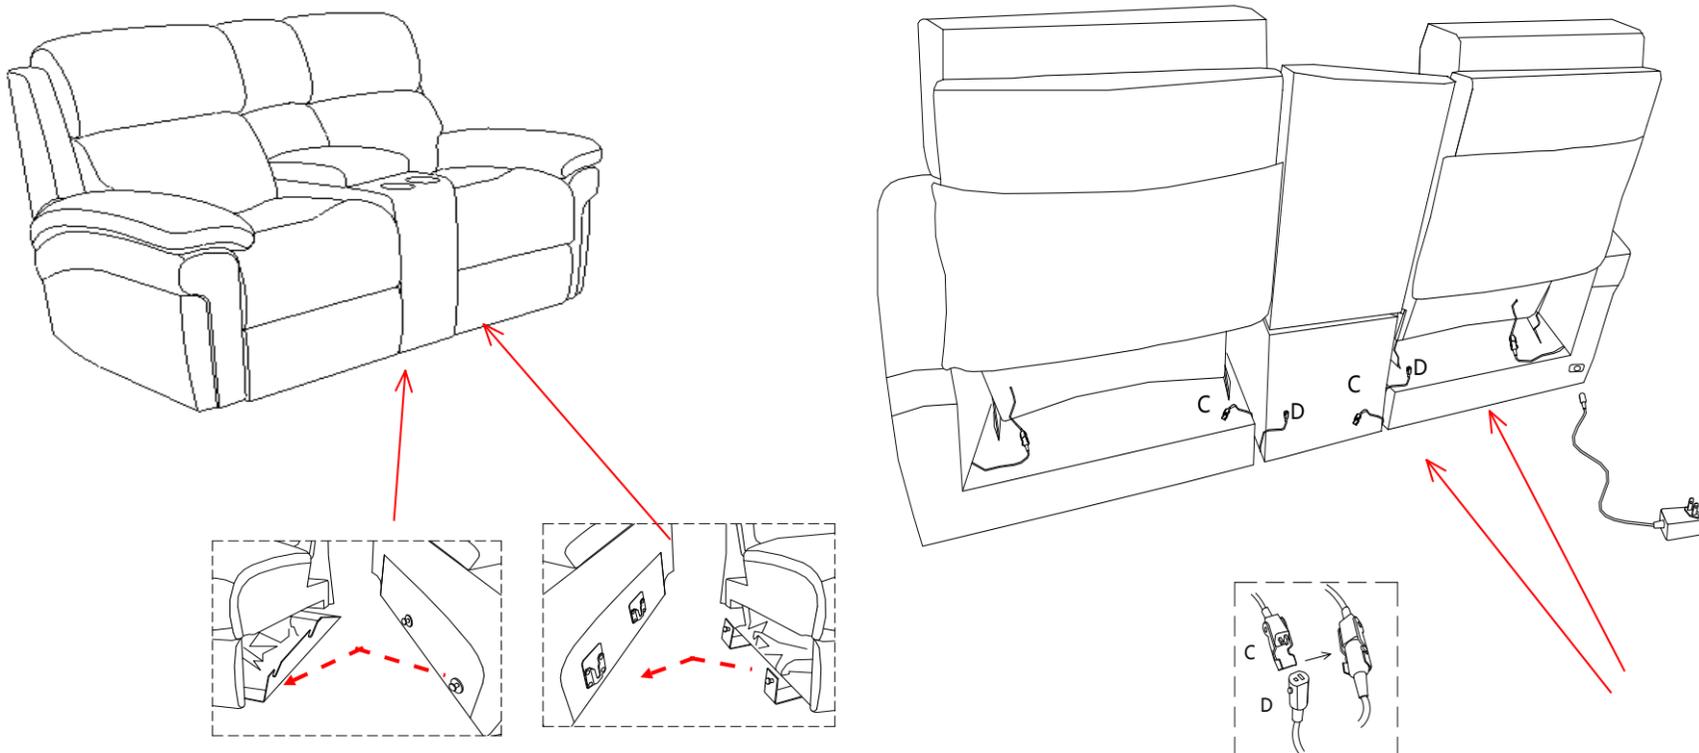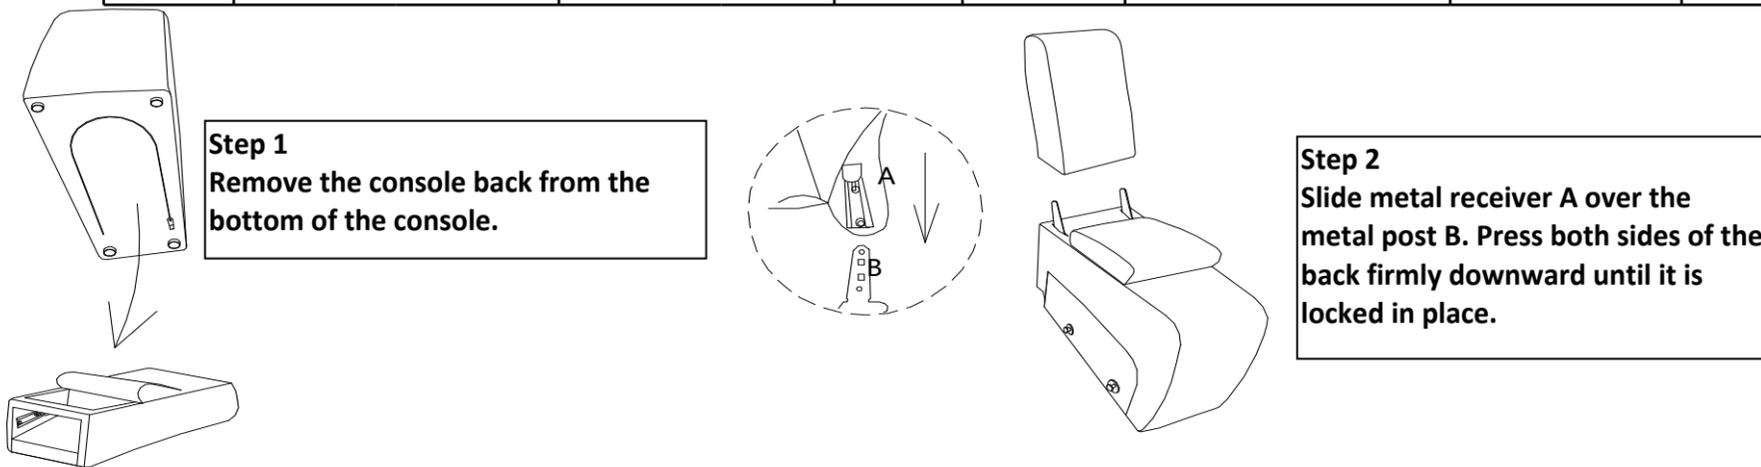

Step 3
Begin with the left arm facing piece of furniture and work from left to right as you connect the modular pieces together.

Step 4
Locate the power cord C, which is attached to the bottom back, and connect it to plug D, which is located at the rear of seat.






Assembly Instructions

SYNE 2275-58 Reclining Sofa SKU# 15122752/15122764


***CAUTION: The item is heavy, assembly should be performed by two people.

  Manufactured for Rooms To Go Parts and Hardware List

No	Description	Image	Qty	No	Description	Image	Qty
A	LSF Back Cushion		1	B	RSF Back Cushion		1
C	Center Back Cushion		1	D	Sofa Recliner Base		1
E	LSF Wing		1	F	RSF Wing		1

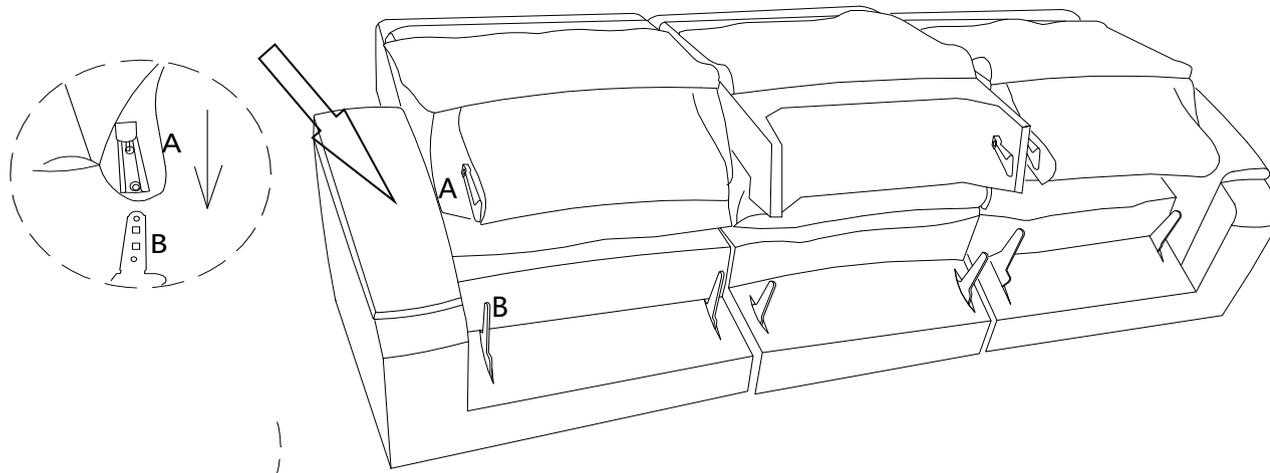

Step 1:
Slide metal receiver A over the metal post B. Press both sides of the back firmly downward until it is locked in place.

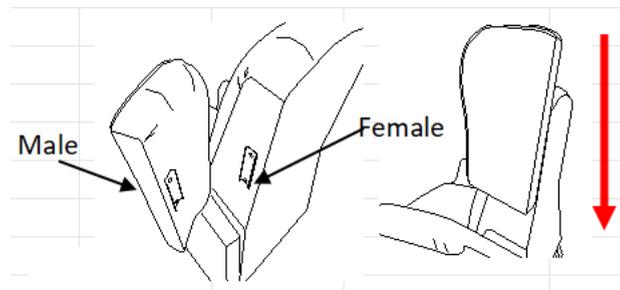

Step 2: Attach the LSF wing and RSF wing by inserting the male KD brackets into the slot of the female brackets, pressing firmly downward until



 


 
Assembly Instructions

SYNE K2275-58PHR Reclining Sofa SKU# 15022750/15022762

Manufactured for Rooms To Go



*****CAUTION:** The item is heavy, assembly should be performed by two people.

Parts and Hardware List

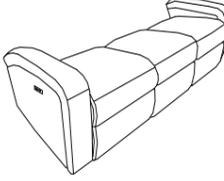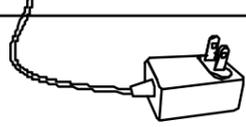No	Description	Image	Qty	No	Description	Image	Qty
A	LSF Back Cushion		1	B	RSF Back Cushion		1
C	Center Back Cushion		1	D	Sofa Recliner Base		1
E	Transformer		1	F	LSF Wing		1
G	RSF Wing		1				

Step 1
Slide metal receiver A over the metal post B. Press both sides of the back firmly downward until it is locked in place.

Step 2
Locate the power cord C, which is attached to the bottom back, and connect it to plug D, which is located at the rear of seat.

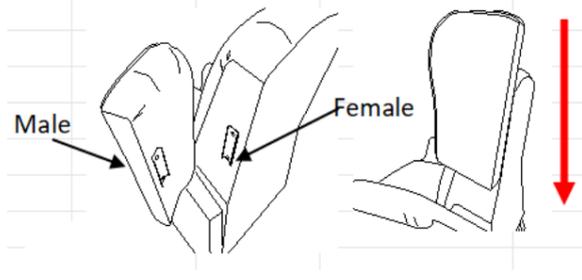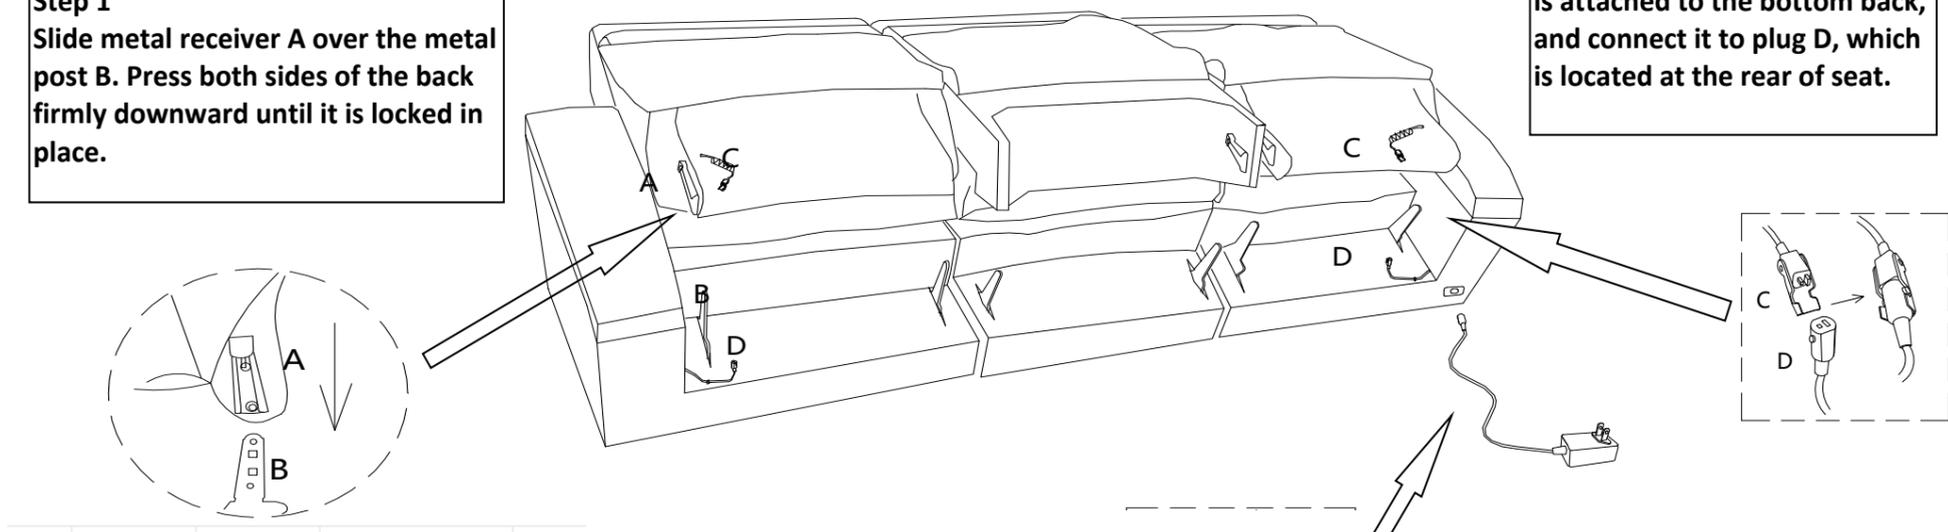

Step 4: Attach the LSF wing and RSF wing by inserting the male KD brackets into the slot of the female brackets, pressing firmly downward until

Step 3
Locate the transformer, which is attached to the bottom of the rail. Connect the transformer to the DC Port, which is located at the rear of arm.

Note: Make sure all plugs are connected on the product before plugging power cord into power outlet. If not, damage can occur. The USB ports (where applicable) are designed with working voltage of 5V, and can NOT be used to supply power for laptop computers (neither PC or Mac). Plugging a laptop computer to the USB port may end up damaging either the computer or the USB port due to unmatched working voltage.






Assembly Instructions


SYNE 2275-85PHR Wall Prox Recliner w/Pwr headrest SKU# 15522750/15522762

Manufactured for Rooms To Go


*****CAUTION:** The item is heavy, assembly should be performed by two people.

 Parts and Hardware List

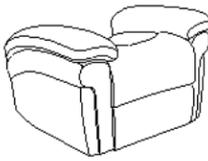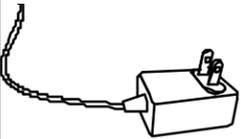

No	Description	Image	Qty	No	Description	Image	Qty
A	Back Cushion		1	B	Recliner Base		1
C	Transformer		1	D	LSF Wing		1
E	RSF Wing		1				

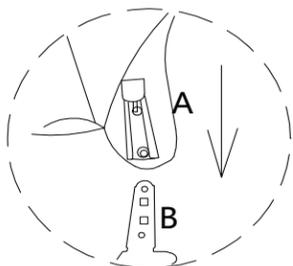

Step 1
Slide metal receiver A over the metal post B. Press both sides of the back firmly downward until it is locked in place.

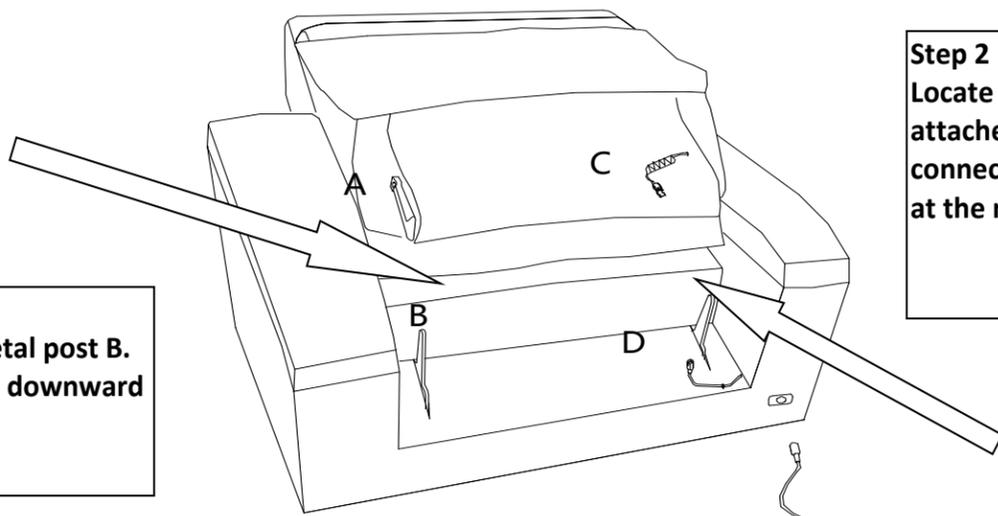

Step 2
Locate the power cord C, which is attached to the bottom back, and connect it to plug D, which is located at the rear of seat.

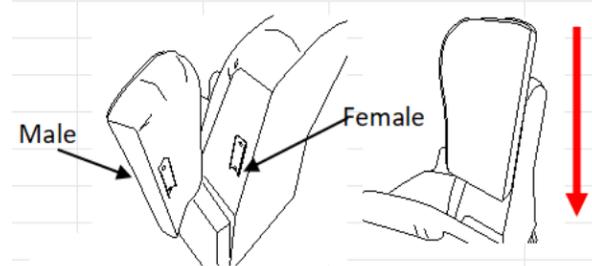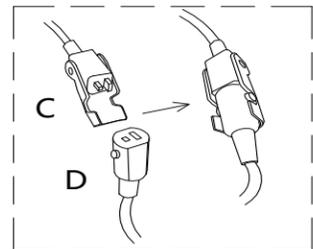

Step 4: Attach the LSF wing and RSF wing by inserting the male KD brackets into the slot of the female brackets, pressing firmly downward until

Step 3
Locate the transformer, which is attached to the bottom of the rail. Connect the transformer to the DC Port, which is located at the rear of arm.

Note: Make sure all plugs are connected on the product before plugging power cord into power outlet. If not, damage can occur. The USB ports (where applicable) are designed with working voltage of 5V, and can NOT be used to supply power for laptop computers (neither PC or Mac). Plugging a laptop computer to the USB port may end up damaging either the computer or the USB port due to unmatched working voltage.