 


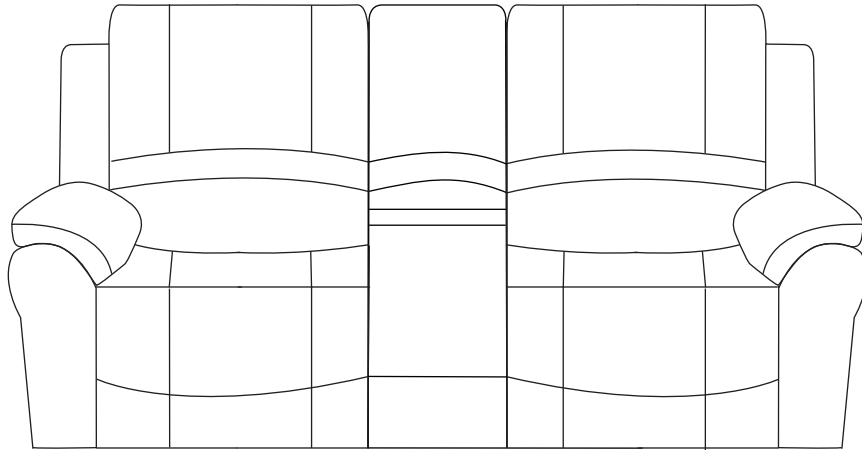

Manufactured for Rooms To Go

 
 

 



MAAH RUEM1070
 PWR CNL RECL LOVESEAT
 SKU 15310749,15310725,15310737,15310751

 


LIST OF PARTS

TOOLS REQUIRED:NO TOOLS REQUIRED

PART LIST

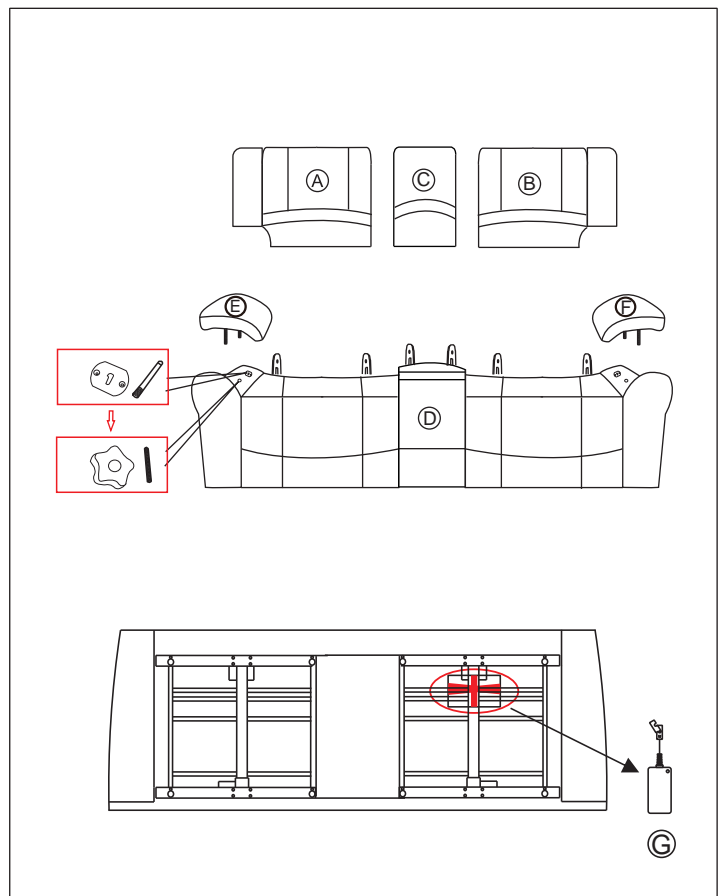


NO	Description	Item	Quantity
A	LAF Backrest		1
B	RAF Backrest		1
C	Console Backrest		1
D	Seat		1
E	LSF Top Arm Pad		1
F	RSF Top Arm Pad		1
G	Wall Plug transformer		1




LIST OF PARTS

TOOLS REQUIRED: NO TOOLS REQUIRED

 PART LIST


NO	Description	Item	Quantity
H	Front threaded rod 8mm*80mm		2
I	Plastic Nut		2
J	Back threaded insert 8mm*70mm		2

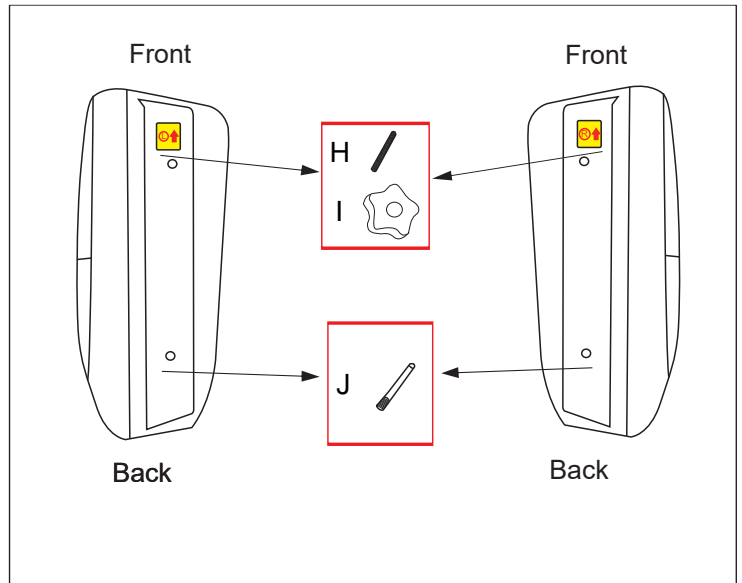 

ASSEMBLY INSTRUCTIONS


STEP 1. Install the LSF Top Arm pad and RSF Top Arm pad

 - Insert the Front threaded rod (H) on the front hole of Arm, the Back threaded insert (J) lock on the back hole of Top Arm.
 - Position the Top Arm pad into the Arm.
 - Lock the Plastic Nut (I) to the Front threaded rod (H) from the bottom of the Arm.
- Install the LSF Top Arm pad (E) and RSF Top Arm pad (F) in the same process.

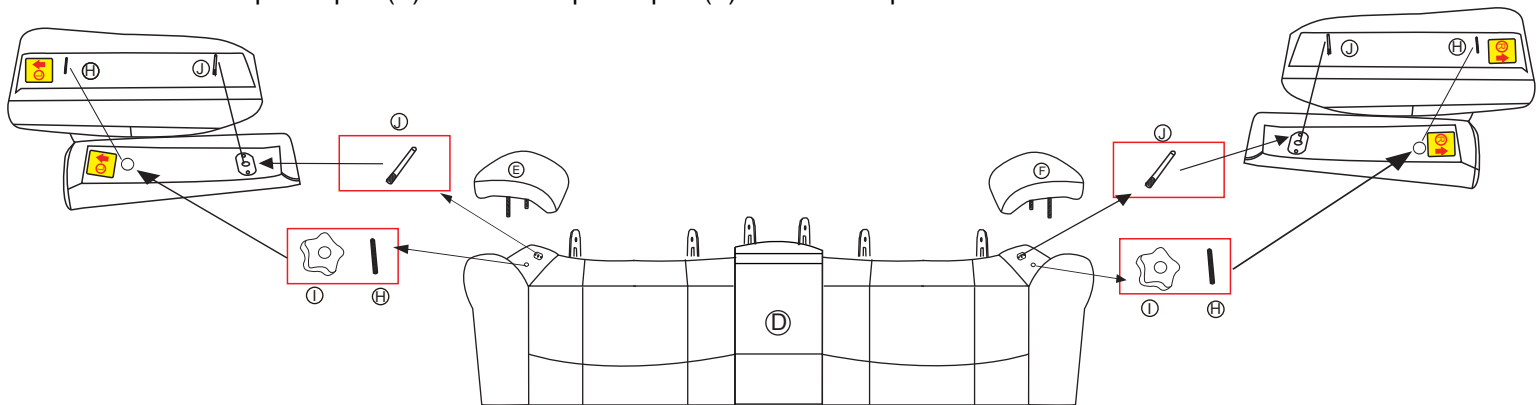


STEP 2. Attaching the KD Backs

 Position the back of Glider Recliner with the KD connectors positioned over the mechanism. Check to assure the mechanism are positioned inside of the KD connectors on the back frame, pushing in a downward motion from the top of the back frame until a clicking sound is heard.

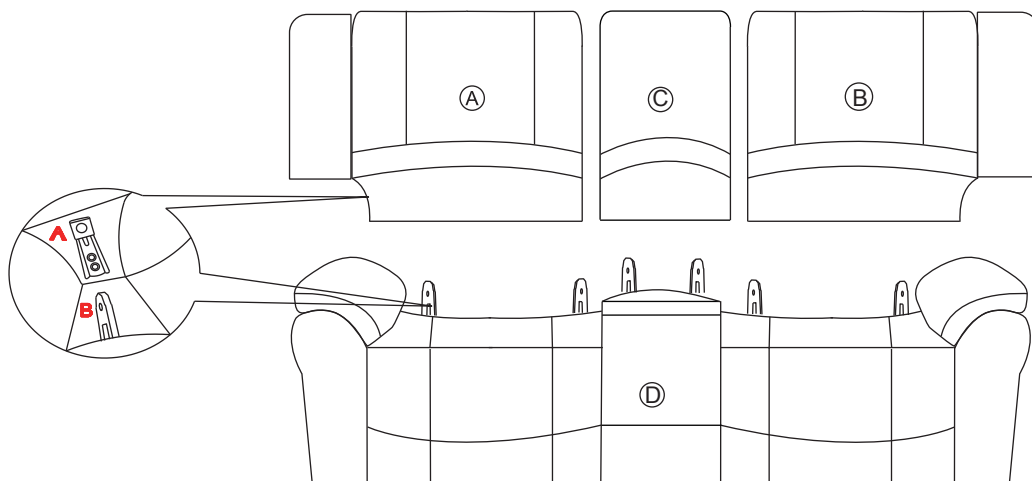


POWER CONNECTIONS

 
STEP 3: Connect wall plug transformer to adaptor.

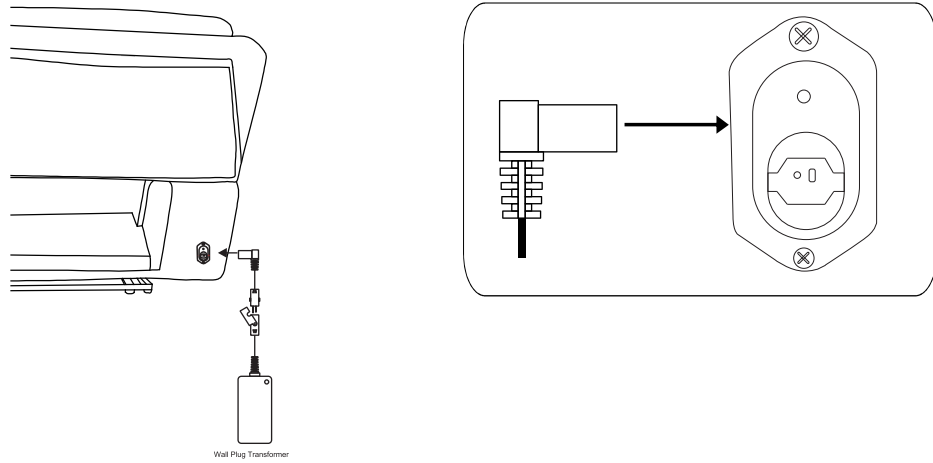

 
STEP 4: Connect wall plug transformer to outlet.

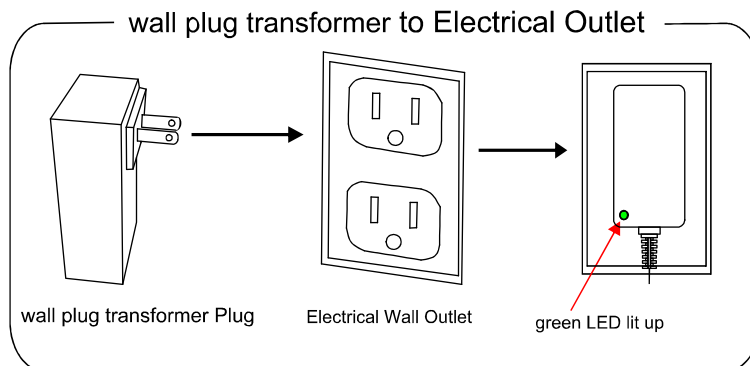

 STEP 5: After all connections have been made, ensure that LED light is lit on.

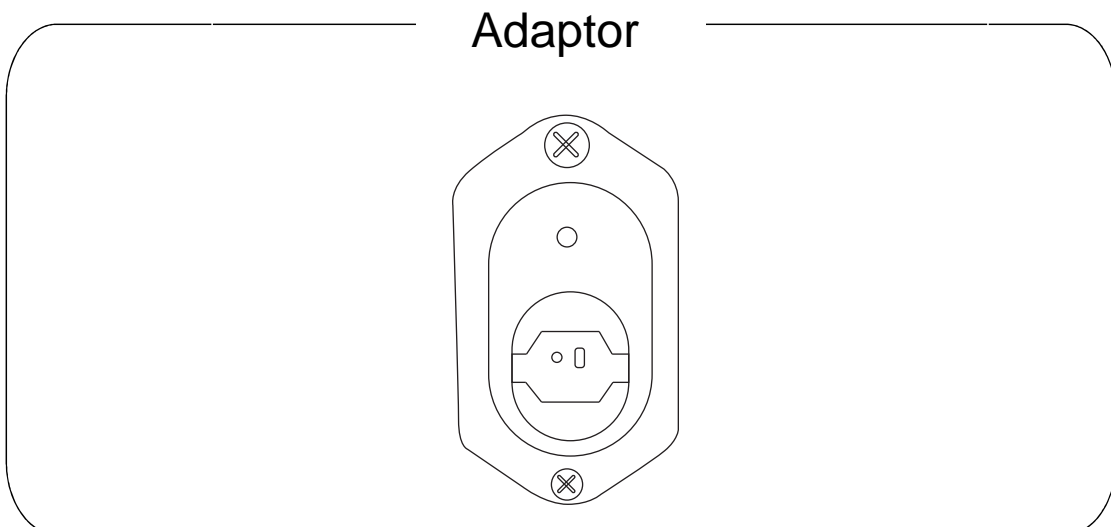

POWER CONNECTIONS

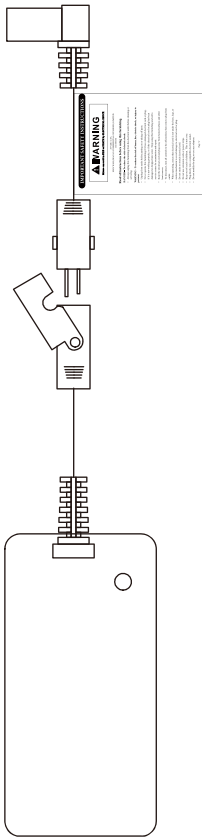 

ENGLISH

IMPORTANT SAFETY INSTRUCTIONS

⚠ WARNING

Misuse can result in **FIRE** or **DEATH** by **ELECTRICAL SHOCK**

29 VDC/ 2.0A
MAN WAH (MACAO COMMERCIAL OFFSHORE) LIMITED
141600654

Read all instructions before using this furnishing.

DANGER – To reduce the risk of electric shock:

- Always unplug this furnishing from the electrical outlet before cleaning or servicing.

WARNING – To reduce the risk of burns, fire, electric shock, or injury to persons:

- Unplug from outlet before putting on or taking off parts.
- Never operate this furnishing if it has a damaged electrical cord or plug, if it is not working properly, or if the electrical cord or plug has been damaged or dropped into water. Stop using this furnishing and call a service center for examination and repair.
- Keep the electrical cord and plug away from heated surfaces and other heat sources.
- To disconnect, turn all controls to the off position, then remove plug from outlet.
- When operating, ensure that electrical cord is not under the base, legs, or motion mechanism to avoid damage to electrical cord or plug.
- Do not strain or stretch electrical cord.
- Do not use extension cords or power strips.
- Keep out of reach of children. This is not a toy.
- Plug directly into a compatible electrical socket.
- Do not modify the plug or use any adapters.

SPANISH

INSTRUCCIONES DE SEGURIDAD IMPORANTES

⚠ WARNING

El mal uso puede provocar **INCENDIO** o **MUERTE** por **DESCARGA ELÉCTRICA**

29 VDC/ 2.0A
MAN WAH (MACAO COMMERCIAL OFFSHORE) LIMITED
141600654

Leer todas las instrucciones antes de usar este mobiliario.

 
PELIGRO – Para reducir el riesgo de descarga eléctrica:

- Siempre desenchufe este accesorio de la toma de corriente eléctrica antes de limpiarlo o repararlo.

ADVERTENCIA: para reducir el riesgo de quemaduras, incendios, descargas eléctricas o lesiones a personas:

- Desenchufe del tomacorriente antes de colocar o quitar partes.
- Nunca opere este accesorio si tiene un cable o enchufe eléctrico dañado, si no funciona correctamente, o si el cable o el enchufe eléctrico se ha dañado o se ha caído al agua. Deje de usar este equipamiento y llame a un centro de servicio para que lo examinen y lo reparen.
- Mantenga el cable eléctrico y el enchufe lejos de superficies calientes y otras fuentes de calor.
- Para desconectar, gire todos los controles a la posición de apagado, luego retire el enchufe del tomacorriente.
- Al operar, asegúrese de que el cable eléctrico no esté debajo de la base, las patas o el mecanismo de movimiento para evitar dañar el cable eléctrico o el enchufe.
- No fuerce ni estire el cable eléctrico.
- No utilizar cables de extensión o tomas de corriente.
- Mantener fuera del alcance de los niños. Esto no es un juguete.
- Enchúfelo directamente a una toma de corriente compatible.
- No modifique el enchufe ni utilice adaptadores.

ELECTRICAL CONTROLS

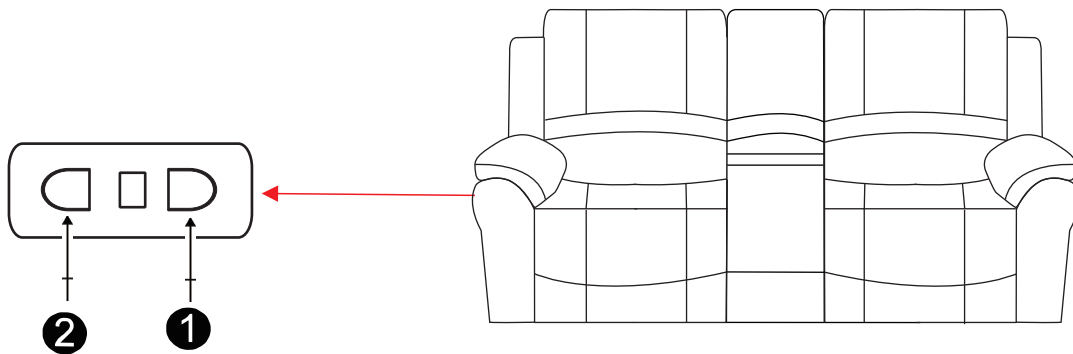


1. Press button **1** to recline the chair to desired position.

2. Press button **2** to raise the chair to the upright position.


WARNINGS

 *Clearance to the wall 30 cm

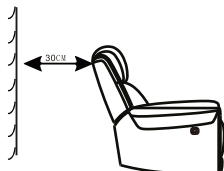


*Avoid placing unit in areas where unit can be exposed to direct sunlight other powerful light sources,
*Keep unit at least 24" from all heat sources.

 as fading or discoloration may occur.

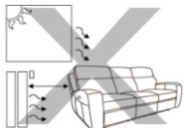


*Do not reach under seat when mechanism is operating or serious injury may occur.

 *Reclining mechanism should only be operated while seated properly.

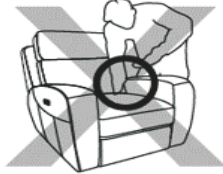

 Do not sit on arms or backrest
Do not jump or roughhouse on furniture

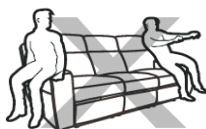

*If unit must be moved, do not drag. Unit must be lifted in order to be moved.



*Do not continuously operate mechanism for more than one minute or unit may go into protection mode by shutting down to prevent overheating.

*Unplug unit from power source prior to cleaning mechanism.

*Do not allow electrical components to come into contact with any liquids.

CARE AND CLEANING

*Upholstered furniture is packaged tightly to protect it during transit. This packaging can sometimes cause creases or misshaped cushions when the furniture comes out of the packaging. These issues will correct themselves over time as the fibers of the cushions are exposed to air. However, shaping the cushions with your hands can alleviate the creases and compressed fibers more quickly.



Before shaping



After shaping



*Dust often and use a vacuum cleaner to remove debris from seams and crevasses.

*Use a soft damp cloth to gently clean soiled areas and wipe clean. Do not rub.

*Do not use household cleaners or solvents. Such cleaners may cause damage and/or discoloration.

*Do regularly use dedicated leather care product onto the leather furniture to prevent built up of body oils.