

### Assembly Instructions For Air Massage K2092B-85PHR-AIR

SKU#15329926/15329940/15329938


\*\*\*CAUTION: The item is heavy, assembly should be performed by two people in soft surface.


Parts#	Desc.	Pattern	Q'ty	Parts#	Desc.	Pattern	Q'ty
А	Wash	0	4 pieces	В	Plum nut	Co.	4 pieces
С	Bolt (M8*3.14",18 threads per inch)		4 pieces	D	Transfor mer		1 pieces


- 1) The bolts package with a sticker "hardware" is attached to the bottom of base rail. (See Figure 1)
- 2) Attached each bolt to corresponding pre-drilled holes by hand turning on clockwise direction as figure underneath. (See Figure 2) Please attached to Screw the shorter threaded end of the bolt into the armrest and follow the arrow direction to Insert the longer threaded end of the bolt into the hole in the base (Figure 3).

3) Please place the washers and Plum nut into the bolt as show by hand and then turning in clochwise direction until it is




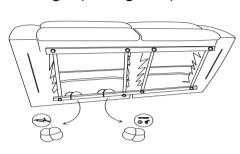

 

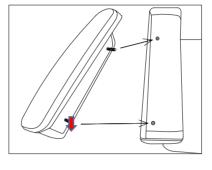



 


 


Figure 1 Figure 2 Figure 3 Figure 4

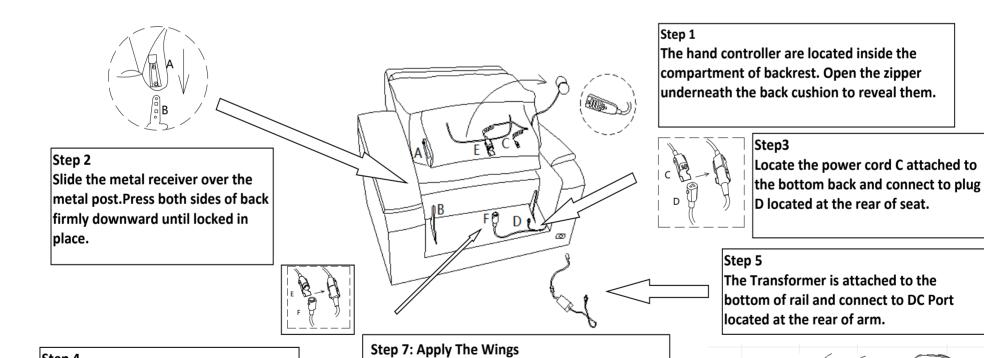

Insert the male KD Bracket into the slot of the

female Bracket pressing firmly downward until

# located at the rear of seat.

bottom back and connect to plug F

Locate the power cord E attached to the

**▲** WARNING fisuse can result in FIRE or DEATH by ELECTRICAL SHOCK

DANGER - To reduce the risk of electric shock 1.Always unplug this furnishing from the electrical outlet before cleaning of

WARNING - To reduce the risk of burns, fire, electric shock, or injury to persons:

Unplug from outlet before putting on or taking off parts.

ead all instructions before using this furnishing

- . Never operate this furnishing if it has a damaged electrical cord or plug, i it is not working properly, or if the electrical cord or plug has been damaged or dropped into water. Stop using this furnishing and call a service center fo examination and repair.
- 3. Keep the electrical cord and plug away from heated surfaces and other heat sources.
- 4. To disconnect, turn all controls to the off position, then remove plug from
- 5. When operating, ensure that electrical cord is not under the base, legs, or otion mechanism to avoid damage to electrical cord or plug. 6. Do not strain or stretch electrical cord.
- 7. Do not use extension cords or power strips.
- 8. Keep out of reach of children. This is not a toy.

## **▲**WARNING

the frame is tight.

El mal uso puede provocar INCENDIO o MUERTE por DESCARGA

Leer todas las instrucciones antes de usar este mobiliario

PELIGRO – Para reducir el riesgo de descarga electrica:

1. Siempre desenchufe este accesorio de la toma de corriente eléctrica ante le limpiarlo o repararlo.

- 1. Desenchufe del tomacorriente antes de colocar o quitar partes.
- 2. Nunca opere este accesorio si tiene un cable o enchufe eléctrico dañado, s no funciona correctamente, o si el cable o el enchufe eléctrico se ha dañado o se ha caído al agua. Deje de usar este equipamiento y llame a un centro de
- ervicio para que lo examinen y lo reparen. Mantenga el cable eléctrico y el enchufe lejos de superficies calientes y otras fuentes de calor.
- 4. Para desconectar, gire todos los controles a la posición de apagado, luego
- retire el enchufe del tomacorriente. 5. Al operar, asegúrese de que el cable eléctrico no esté debajo de la base, las patas o el mecanismo de movimiento para evitar dañar el cable eléctrico
- 6. No fuerce ni estire el cable eléctrico.
- 7. No utilizar cables de extensión o tomas de corriente
- 3. Mantener fuera del alcance de los niños. Esto no es un juguete

**Note:** Make sure all PLUGS are connected on the product before plugging power cord into power outlet. If not damage can occur. The USB ports (where applicable) are designed with working voltage of 5V, and can NOT be used to supply power for laptop computers (neither PC or Mac). Plugging a laptop computer to the USB port may end up damaging either the computer or the USB port due to unmatched working voltage.