MADISON PARK®

ASSEMBLY INSTRUCTIONS

Description: Dexter Accent Chair

Important safety instructions:

- · Please read carefully all instructions before assembly.
- · For your safety and ease, assembly by two or more adults is recommended.
- Keep instructions for future use.

Pre-assembly:

- Do not discard any content until assembly is complete to avoid accidentally discarding small parts or hardware.
- · Take out all parts and hardware from box.

Parts List

Item	Description		QTY
P1	Front Legs	₩	2
P2	Back Legs	-	2
P3	Back Cushion		1
P4	Chair		1

Hardware List

 
Item	Description	QTY	
H1	Plastic washer	₩	4

DISCLAIMER:


WHEN PROPERLY ASSEMBLED, THIS ITEM IS SAFE FOR INTENDED USE. SELLER IS NOT LIABLE FOR ANY DAMAGES RESULTING FROM ITEM BEING IMPROPERLY ASSEMBLED AFTER PURCHASE.

Assembly Procedures:





Step 2. Turn the chair upside down and lay on protective carpet. Screw in the front legs (P1) and back legs (P2) using Plastic Washer (H1) for each. Screw tight to the right angle.

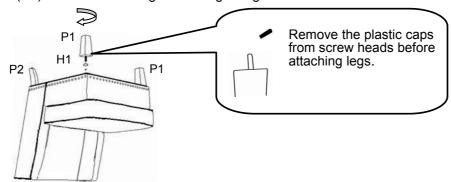

Step 3. Place chair upright on a level surface. Put the back cushion(P3) on it. Assembly is complete.



ADDITIONAL NOTE ABOUT SAFETY: BOLTS MAY LOOSEN DURING NORMAL EVERYDAY USE. THEY SHOULD BE PERIODICALLY INSPECTED AND RE-TIGHTENED TO PREVENT DAMAGE OR INJURY. ALWAYS CHECK TO ENSURE THAT ALL HARDWARE IS KEPT TIGHTENED \cdot