
 
 









# ASSEMBLY INSTRUCTION


## Accent Chair

Parts#	Parts Name	Drawing	Qty
A	Right Front Feet		1
B	Left Front Feet		1
C	Right Back Feet		1
D	Left Back Feet		1
E	Allen wrench		1
F	Flat Washer		12
G	Bolt(size:40*8mm)		12
H	Spring washer		12
I	Chair		1

Step 1. Open the zipper bag at the bottom, and take the legs out of the bag.

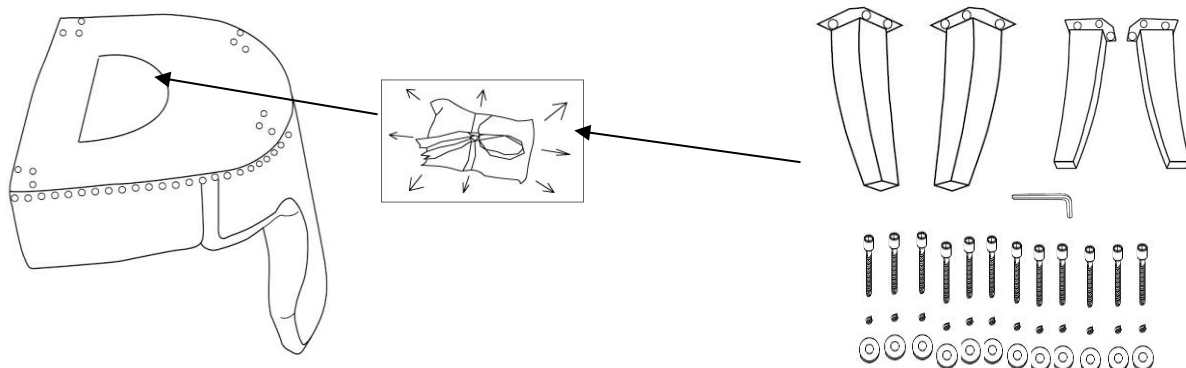

Step 2: Insert the front leg (A&B) and back leg (C&D) to seat frame by using flat washer (F) , spring washer (H), bolt (G). Then tighten the bolts with allen wrench (E).

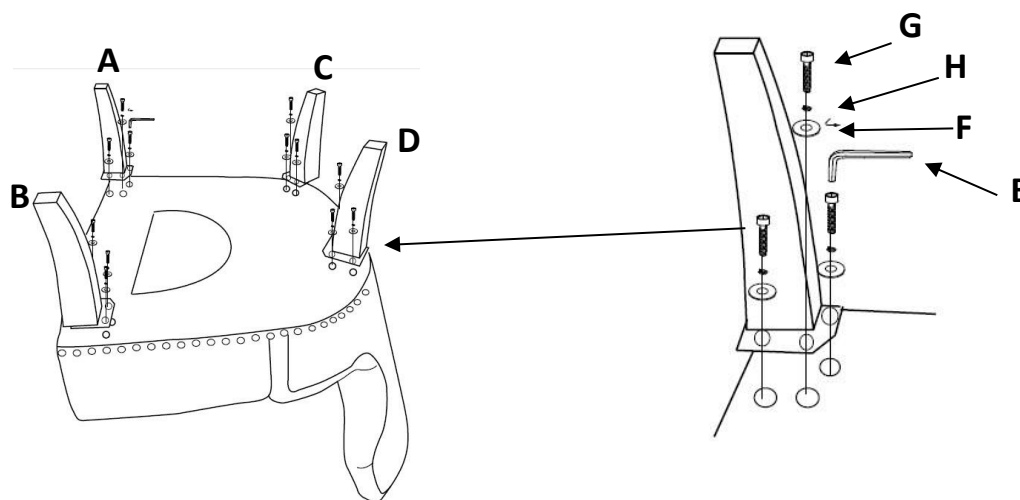

Step 3: Level the chair and place the chair upright on a level surface.

