

Description: Erika Accent Chair

Important safety instructions:

- Please read carefully all instructions before assembling.
- For your safety and ease, assembly by two or more adults is recommended.
- Keep instructions for future use.

Pre-assembly:

- Do not discard any content until assembly is completed to avoid accidentally discarding small parts or hardware.
- Remove all parts and hardware from box along with any protective packaging.


Parts List

Item	Description	QTY
P1	Right Front Feet	1
P2	Left Front Feet	1
P3	Right Back Feet	1
P4	Left Back Feet	1
P5	Chair	1


Hardware List

Item	Description	QTY
H1	Allen Wrench φ5/16"	1
H2	Flat Washers φ5/16"	12
H3	Bolts φ5/16*2-3/8"	12
H4	Lock Washers φ5/16"	12

Step 1. Open the zipper bag at the bottom, and take the legs out of the bag.

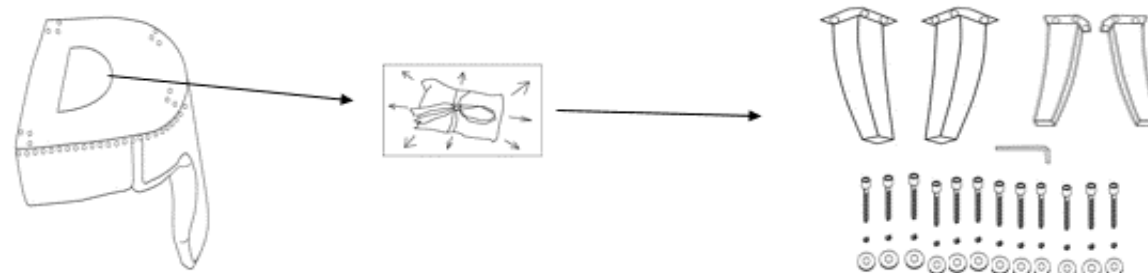

Step 2. Using bolts (H3), lock washers (H4), flat washers (H2) to connect legs (P1, P2, P3, P4) to chair (P5). Tighten bolts (H3) with Allen Wrench (H1).

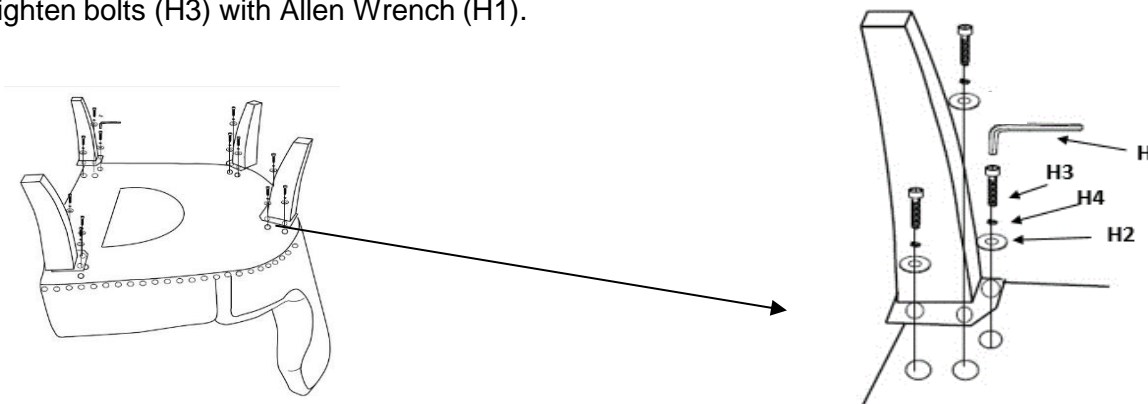

Step 3. Place the chair upright on a level surface. Assemble is complete.



ADDITIONAL NOTE ABOUT SAFETY: BOLTS MAY LOOSEN DURING NORMAL EVERYDAY USE. THEY SHOULD BE PERIODICALLY INSPECTED AND RE-TIGHTENED TO PREVENT DAMAGE OR INJURY. ALWAYS CHECK TO ENSURE THAT ALL HARDWARE IS KEPT TIGHTENED.

Thank you for your purchase