
 
 

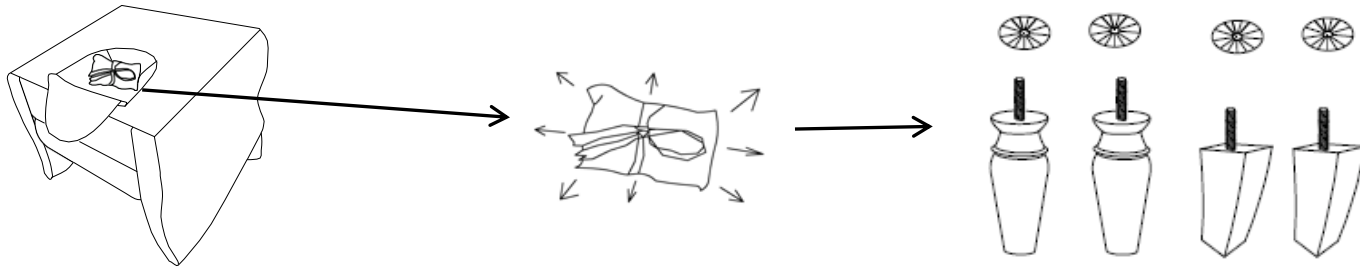


## Assembly Instruction--Accent Chair


PARTS #	PARTS NAME	DRAWING	QTY
P1	FRONT LEGS		2
P2	BACK LEGS		2
P3	CHAIR		1

HARDWARE#	PARTS NAME	DRAWING	QTY
H1	PLASTIC WASHER		4


1. Turn the chair upside down and lay on protective carpet, take out the legs from the bottom.



2. Place washers (H1) on legs (P1, P2) and attach to base by screwing clockwise into corresponding holes.

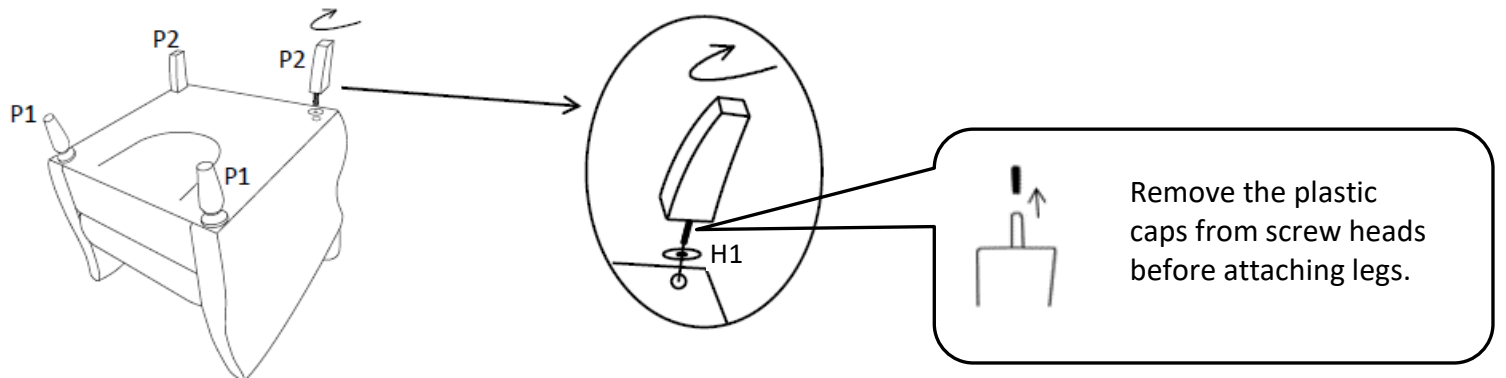

3. Turn the assembled chair to an upright position, adjust the levelers on the bottom of the wood legs if the floor is uneven. Assembly is complete.

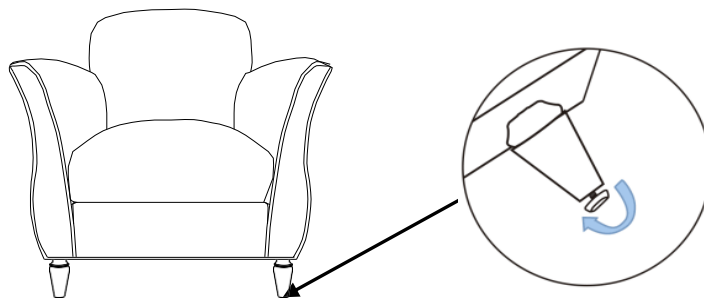

**ADDITIONAL NOTE ABOUT SAFETY: BOLTS MAY LOOSEN DURING NORMAL EVERYDAY USE. THEY SHOULD BE PERIODICALLY INSPECTED AND RE-TIGHTENED TO PREVENT DAMAGE OR INJURY. ALWAYS CHECK TO BE SURE THAT ALL HARDWARE IS KEPT TIGHTENED.**

Thank you for your purchase