 


PARTS LIST / LISTE DES PIÈCES / LISTA DE PIEZAS

 
ITEM NO./NO D'ARTICLE./ARTICULONO: DS-D532-703-1 / 2 / 3

DESCRIPTION/ LA DESCRIPTION/ DESCRIPCIÓN: Channel Wood Frame Chair - Espresso / Flint / Teal /
Fauteuil décoratifs / Silla decorativa

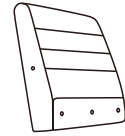


(A)

x1 Chair Back*
x1 Dossier de chaise
x1 Respaldo de silla




(B)

 x1 Chair Seat*
x1 Siège de chaise
x1 Asiento de silla




(C)

 x1 Front stretcher*
x1 Barreau avant
x1 Travesaño delantero

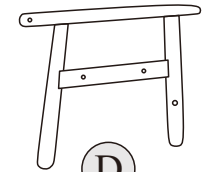

(D)

 x1 Left Arm*
x1 Accoudoir gauche
x1 Brazo izquierdo

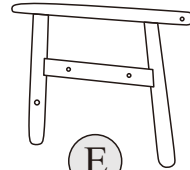


(E)

x1 Right Arm*
x1 Accoudoir droit
x1 Brazo derecho



(F)

 x9 Allen bolt (M6 x 50mm)*
x9 Vis a tete creuse hexagonale (M6 x 50mm)
x9 Perno Allen (M6 x 50mm)



(G)

x2 Allen bolt (M6 x 80mm)*
x2 Vis a tete creuse hexagonale (M6 x 80mm)
x2 Perno Allen (M6 x 80mm)



(H)

x11 Spring Washer M6*
x11 Rondelle à ressort M6
x11 Arandela auto-bloquante M6



 
(I)

x3 Flat Washer M6*
x3 Rondelle Plate M6
x3 Arandela Plana M6



(J)

x1 Allen Wrench*
x1 Clé Hexagonale
x1 Llave Allen



(K)

 
x2 Nut*
x2 Écrou
x2 Tuercas



(L)

x8 Wooden Button Ø14mm*
x8 Botón de madera Ø14mm
x8 Bouton en bois Ø14mm

**Replaceable Part*

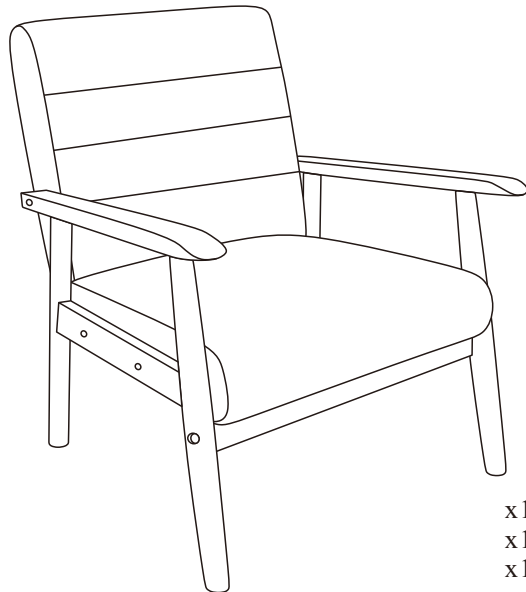

ASSEMBLY INSTRUCTIONS/ NOTICE DE MONTAGE/ INSTRUCCIONES DE MONTAJE


ITEM NO./NO D'ARTICLE./ARTICULO NO: DS-D532-703-1 / 2 / 3

DESCRIPTION/ LA DESCRIPTION/ DESCRIPCIÓN: Channel Wood Frame Chair - Espresso / Flint / Teal /
Fauteuil décoratifs / Silla decorativa

STEP 1

ÉTAPE 1

 
PASO 1

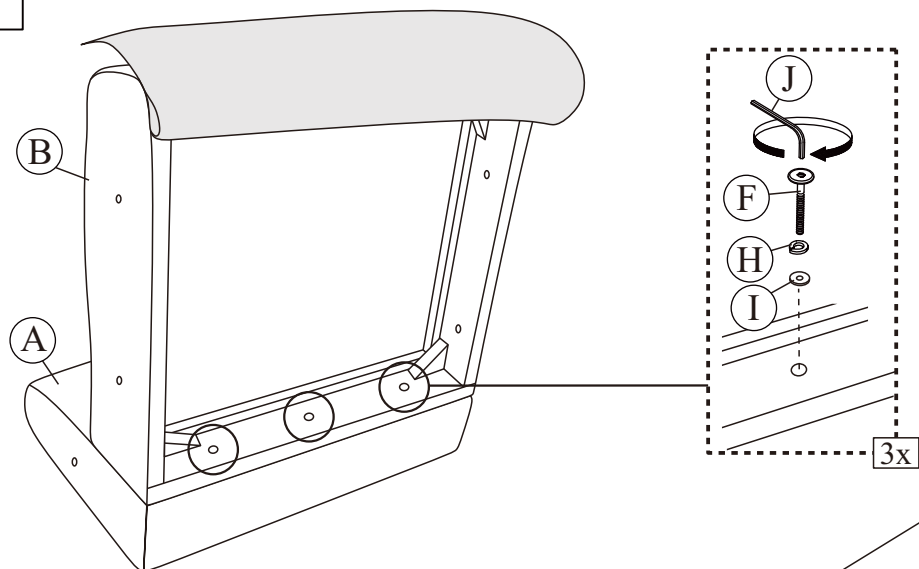

STEP 2

ÉTAPE 2

 PASO 2

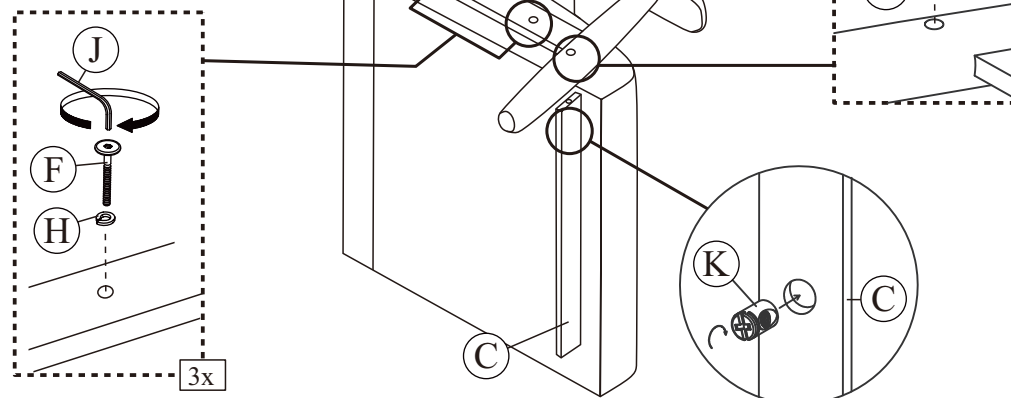

ASSEMBLY INSTRUCTIONS/ NOTICE DE MONTAGE/ INSTRUCCIONES DE MONTAJE


ITEM NO./NO D'ARTICLE./ARTICULONO: DS-D532-703-1 / 2 / 3

DESCRIPTION/ LA DESCRIPTION/ DESCRIPCIÓN: Channel Wood Frame Chair - Espresso / Flint / Teal /
Fauteuil décoratifs / Silla decorativa

STEP 3

ÉTAPE 3

 PASO 3

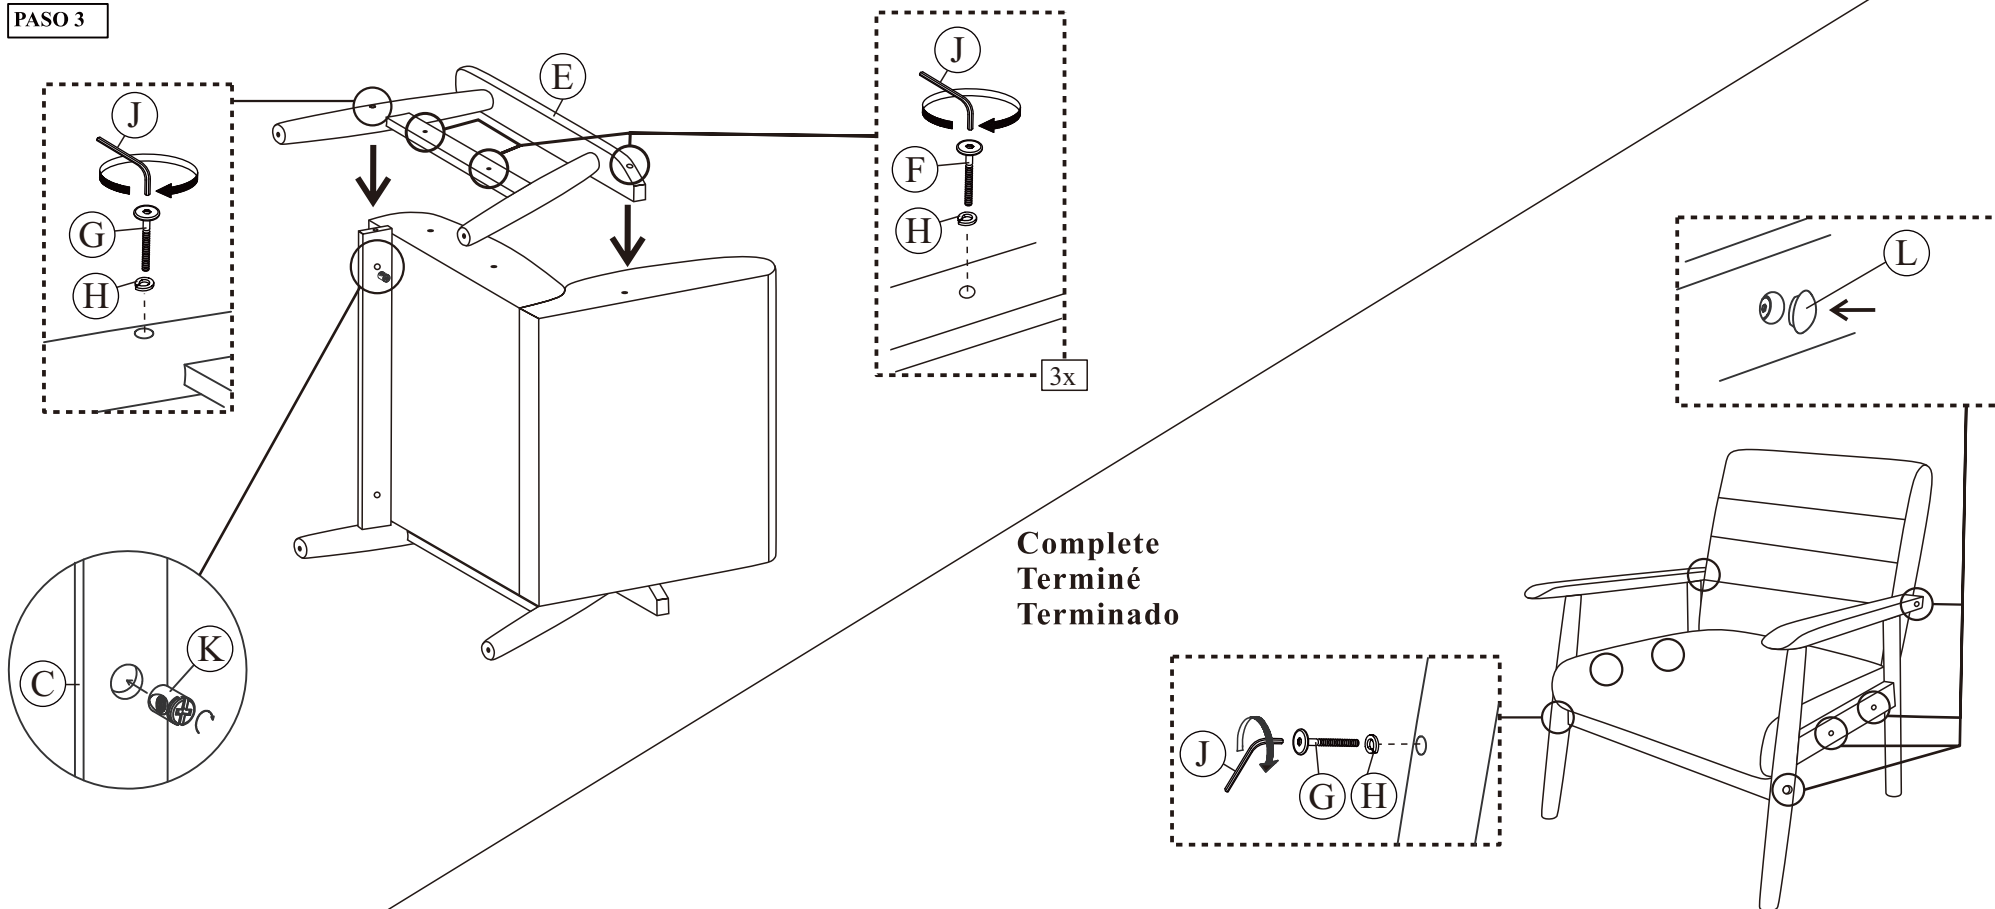

Important Note: Part L (Flat-bottomed Wooden Screw Cap Covers) are optional. If installed, they should be placed over exposed screw hole wells, covered with a cloth to protect chair paint/finish during installation, and gently hammered into place with a rubber mallet.

 
 
Remarque importante: la partie L (couvercles à vis en bois à fond plat) est facultative. S'ils sont installés, ils doivent être placés sur les puits de trous de vis exposés, recouverts d'un chiffon pour protéger la peinture / finition de la chaise pendant l'installation, et martelés doucement en place avec un maillet en caoutchouc.

Nota importante: la parte L (tapas de madera con tapa de rosca de fondo plano) es opcional. Si están instalados, deben colocarse sobre los orificios de los tornillos expuestos, cubrirse con un paño para proteger la pintura / el acabado de la silla durante la instalación y martillarse suavemente en su lugar con un mazo de goma.


REPLACEABLE PART / PARTIE REMPLAÇABLE / PARTE REEMPLAZABLE

ITEM NO./NO D'ARTICLE./ARTICULONO: DS-D532-703-1 / 2 / 3


**DESCRIPTION/ LA DESCRIPTION/ DESCRIPCIÓN: Channel Wood Frame Chair - Espresso / Flint / Teal /
Fauteuil décoratifs / Silla decorativa**

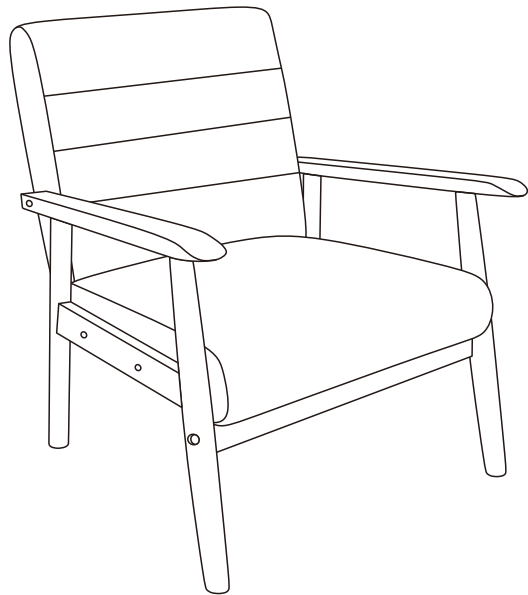

 
x1 RD532-703-1/2/3-FSTRE*
Front stretcher
Barreau avant
Travesaño delantero

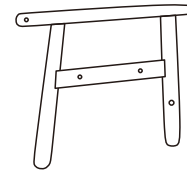

 
x1 RD532-703-1/2/3-LARM*
Left Arm
Accoudoir gauche
Brazo izquierdo

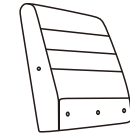

 
x1 RD532-703-1/2/3-BACK*
Chair Back
Dossier de chaise
Respaldo de silla

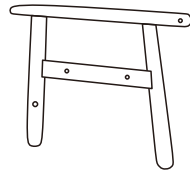

 
x1 RD532-703-1/2/3-RARM*
Right Arm
Accoudoir droit
Brazo derecho



 x2 RD532-703-1/2/3-NUT*
Nut
Écrou
Tuercas



 x1 RD532-703-1/2/3-SEAT*
Chair Seat
Siège de chaise
Asiento de silla



x1 RD532-703-1/2/3-HWKIT*
Hardware Kit
Liste Des Pièces De quincaillerie
Lista del kit de materiales



x8 RD532-703-1/2/3-BUTTON*
Wooden Button Ø14mm
Botón de madera Ø14mm
Bouton en bois Ø14mm

**Replaceable Part*

Protect Your Wood or Laminate Flooring

*This statement applies to any floor without carpet.

If not careful, all furniture including upholstery and case pieces can scratch, scuff and even gouge floors. The recommendation is to have felt, rubber pads or area rugs under furniture on flooring without carpet.

Moving your furniture

Pushing and dragging furniture over floors without carpet can lead to scratches and scuffs. Have someone help when moving the larger pieces of furniture by lifting, try using a dolly or moving pads.

Felt and rubber pads

Applying furniture pads to the feet of furniture helps cushion contact points. Furniture pads can be found at local hardware stores. Felt pads slide easily across the floor, making them ideal for dining chairs and other pieces that move with use. Rubber pads will help furniture stay in place and are perfect for larger pieces, like sofas and loveseats.

Area rugs and rug pads

Using an area rug under furniture is another way to protect your floor from scratches and scuff marks. A rug pad under the area rug will provide extra cushion and added protection.