
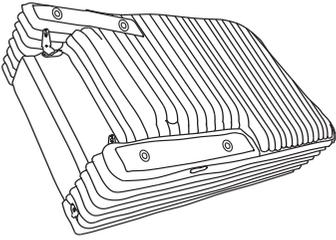
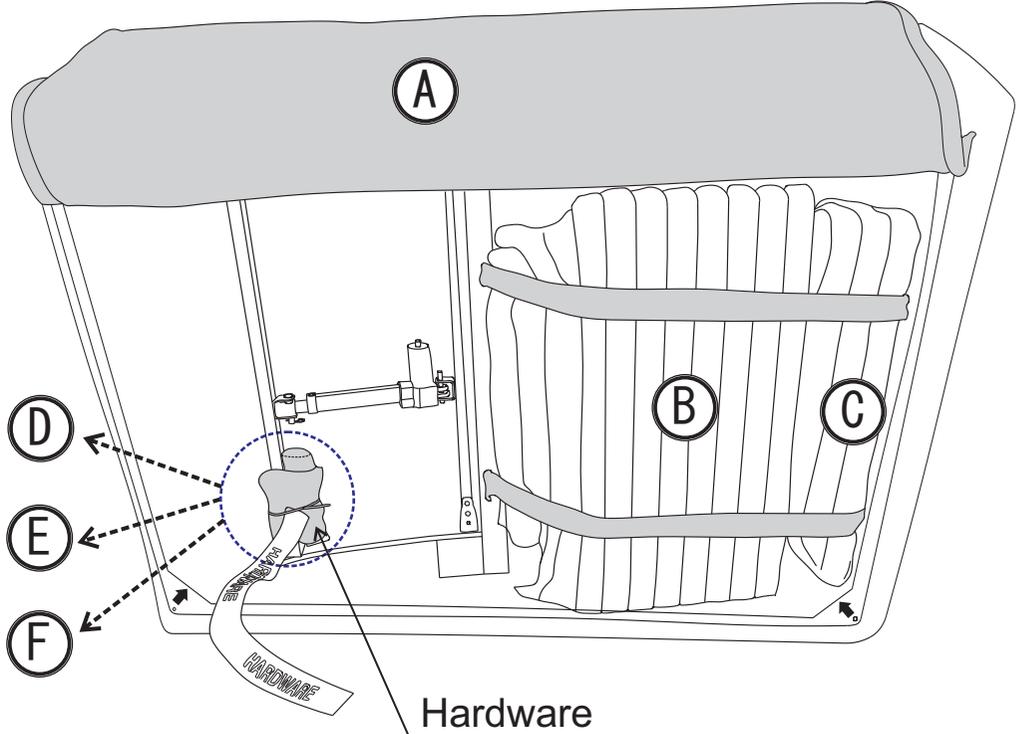
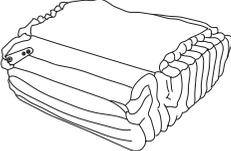
 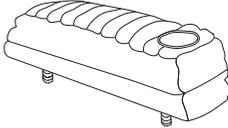
 

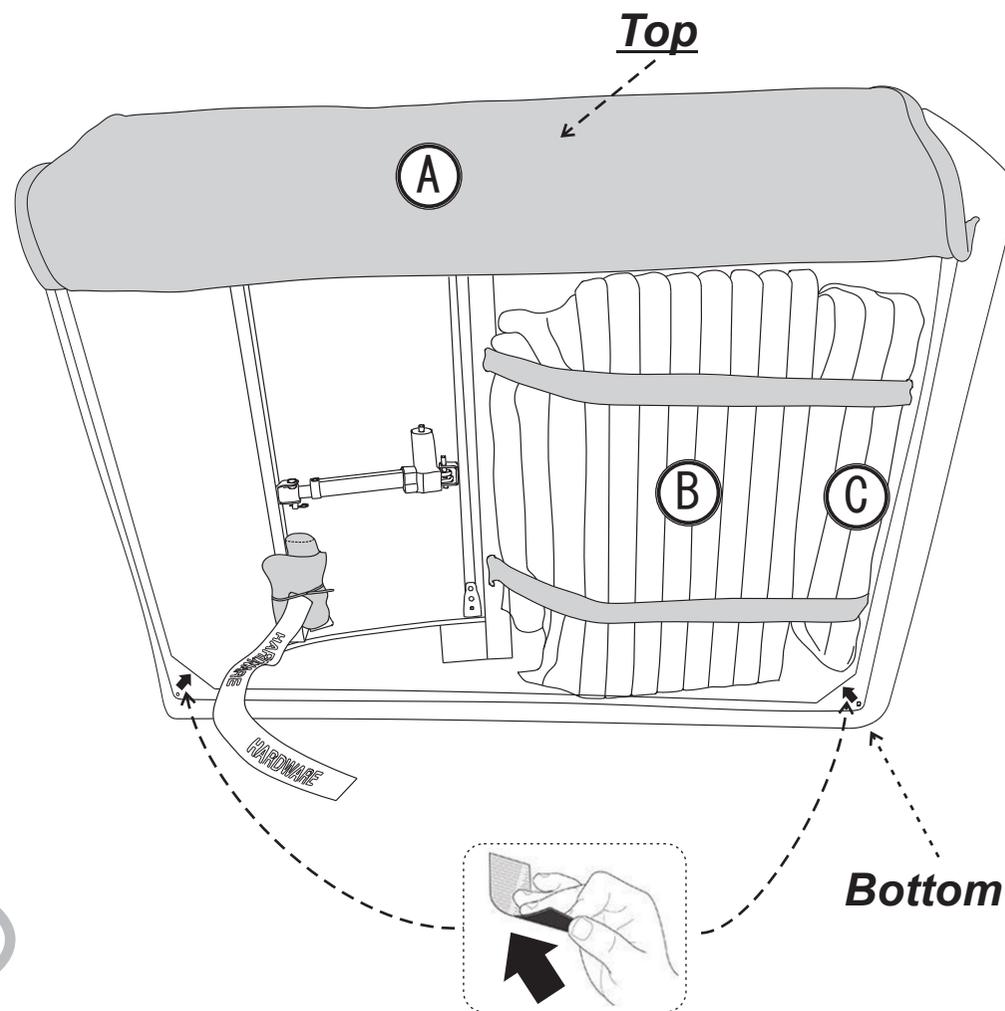


*****CAUTION:** The item is heavy, assembly should be performed by two people.

Parts and Hardware List

No	Description	Image	Qty	NOTICE
(A)	Chaise Lounge Base		1	<p>* Back Cushion (part B) ,Armrest (part C) and Leg (part E) are stored in base of Chaise Lounge Base (part A).</p> 
(B)	Back Cushion		1	
(C)	Armrest		2	
(D)	Star Knob		4	
(E)	Rubber Leg		4	
(F)	Transformer		1	

- STEP1:** A) Lay the chaise lounge on its side on a clean carpeted area.
B) Open the large black fabric panel that is attached with Velcro , pull the panel fabric from the bottom to the top of the chaise lounge .

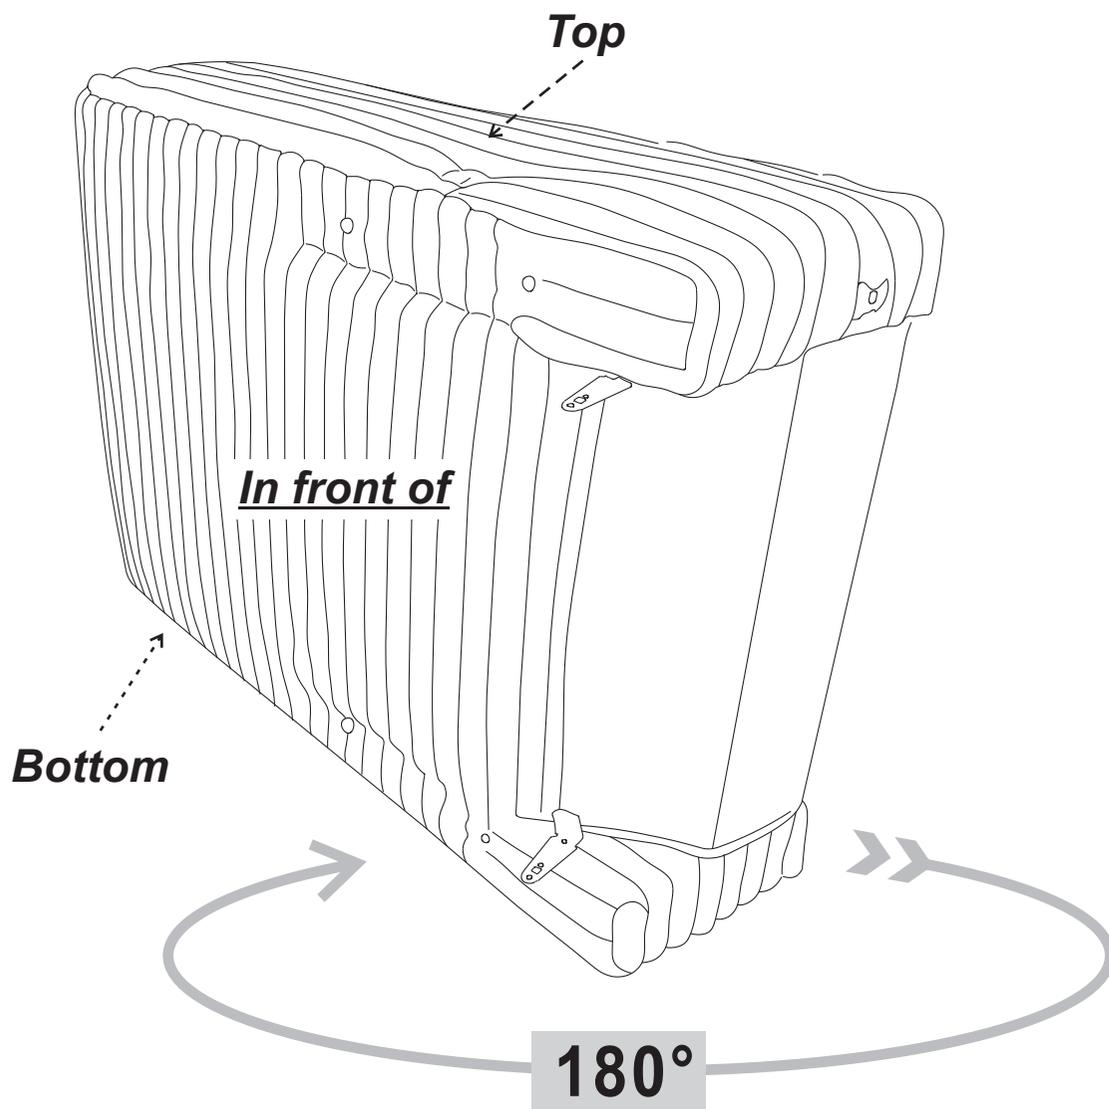


Pull from arrow stickers to open the cloth.


Behind

STEP3: _ Stick the velcro tape together.

_Screw in rubber leg (part E) clockwise into underside of seat (part A).

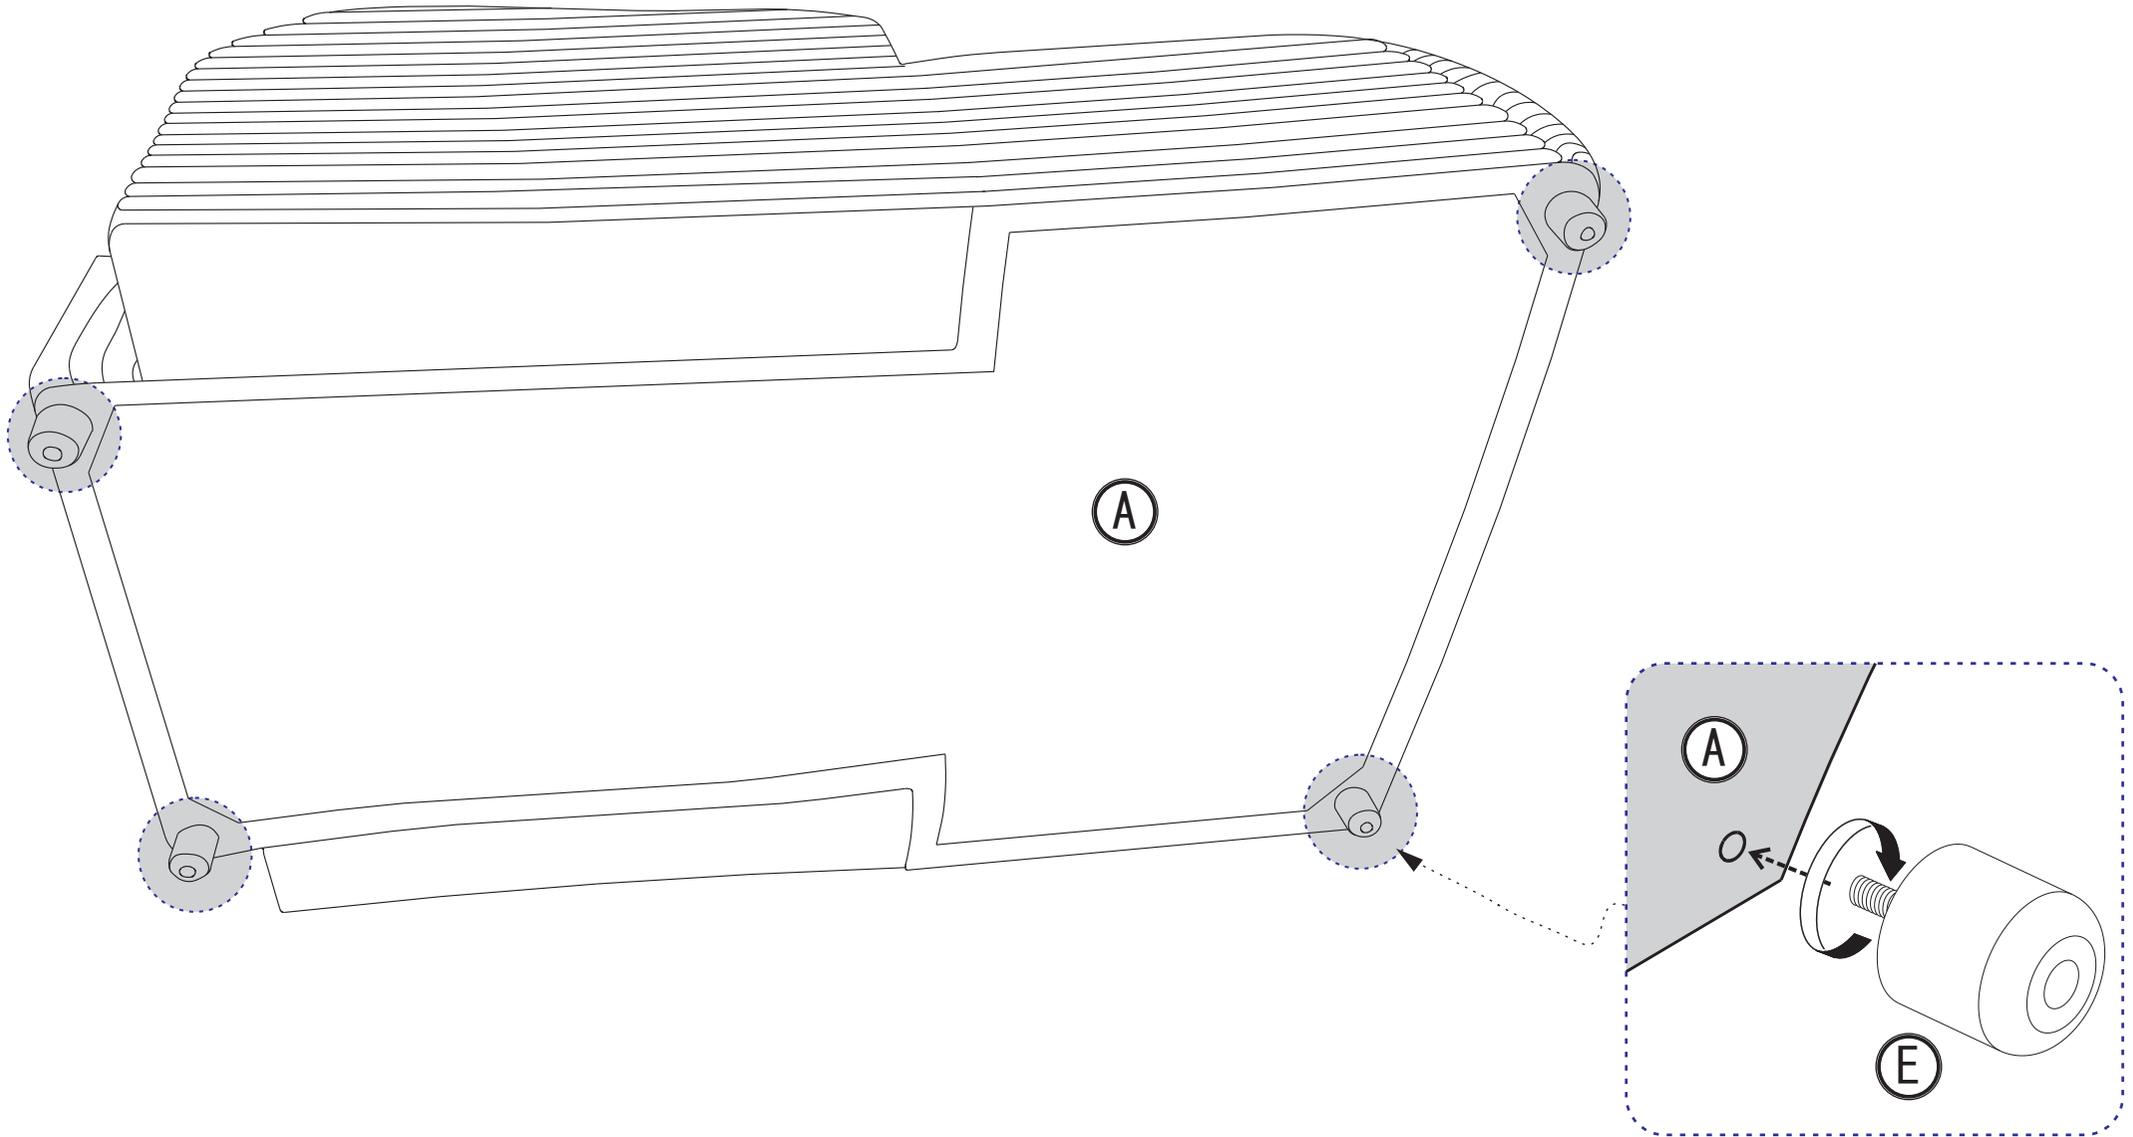


STEP4: _Align seat back (part B) and frame (part A) metallic quick connectors and slide into lace .

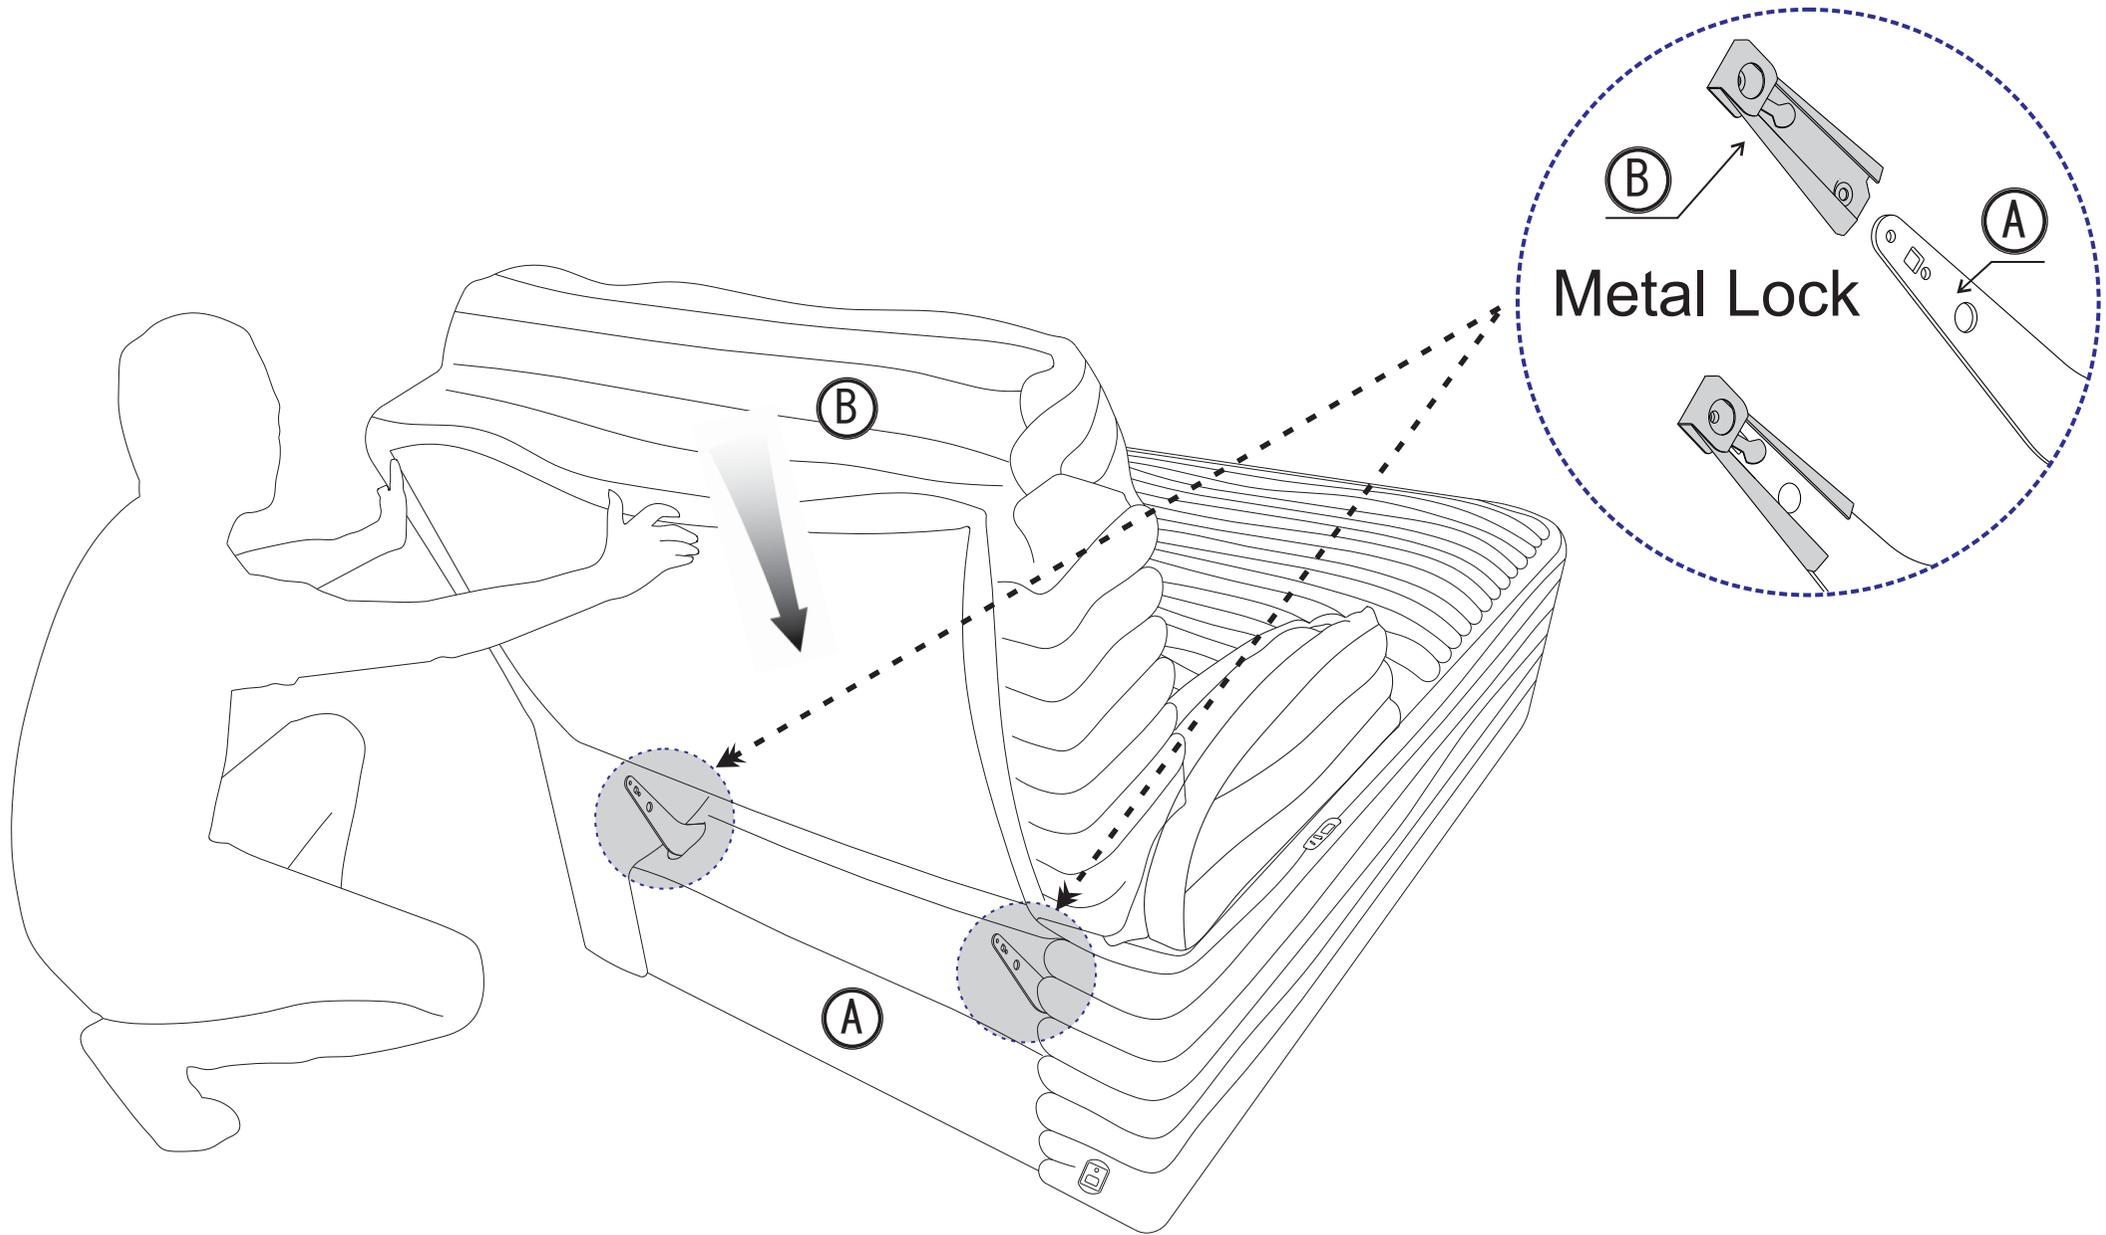

STEP5: _ Stick the velcro tape together.

_ The transformer (F) is attached behind the Chaise Lounge Base (A) and connects to DC Port .



_ Put the plug into the power outlet.

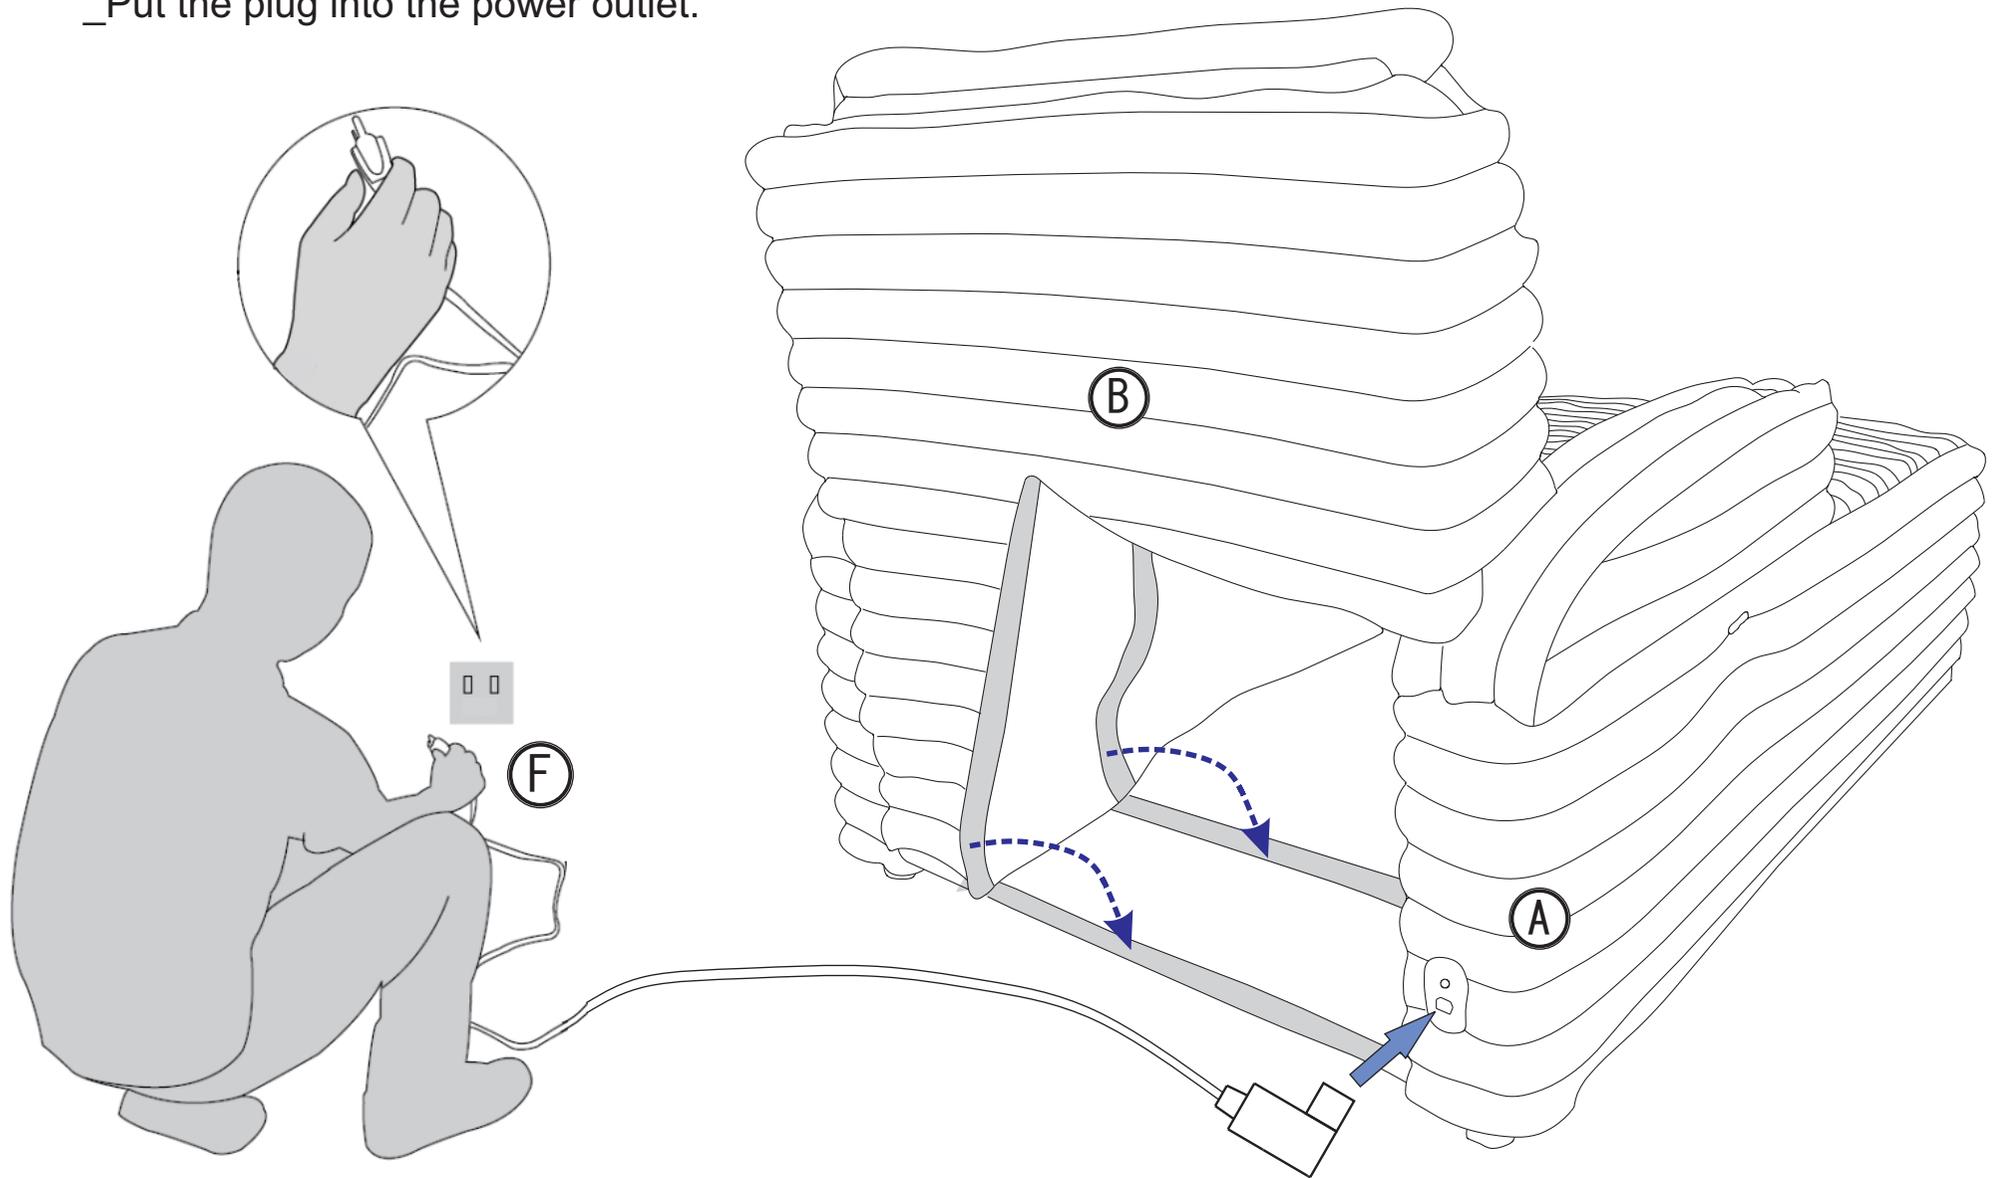

ELECTRICAL CONTROLS


Press Button **1** to recline the chair to desired position .

Press Button **2** to raise the chair to the upright position .

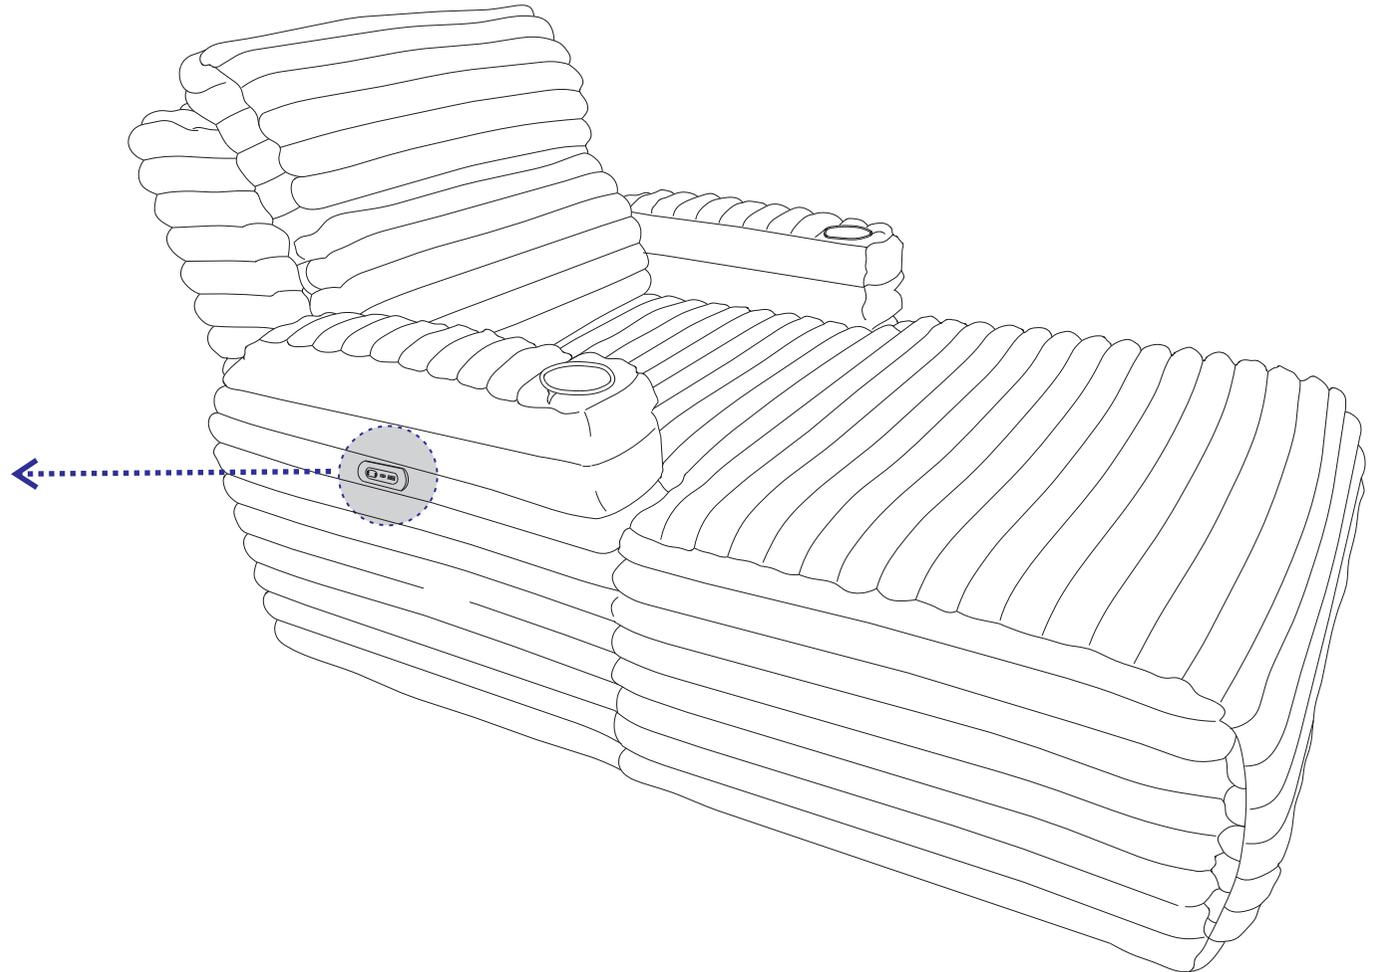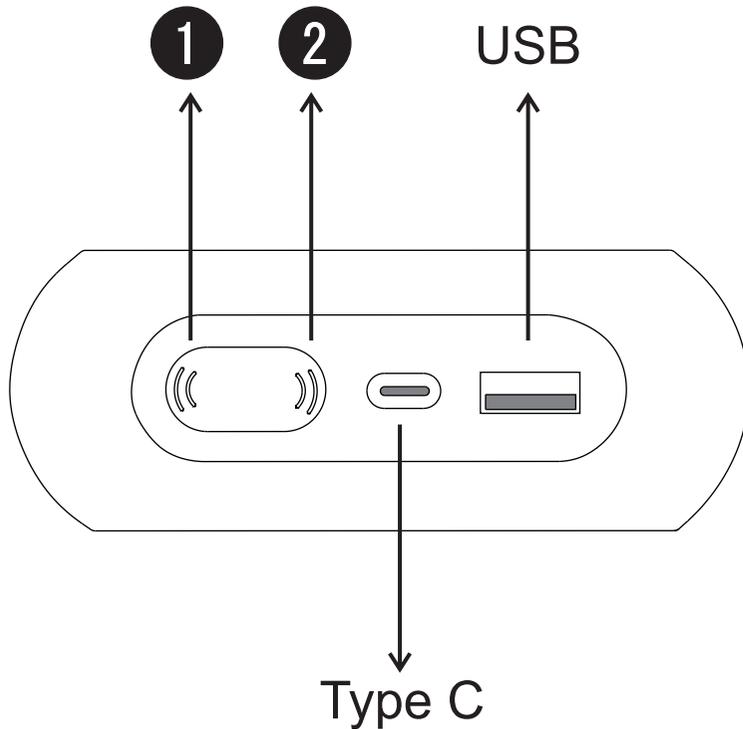

Care and Cleaning Directions

- Upholstered furniture is packaged tightly to protect it during transit. This packaging can sometimes cause creases or misshaped cushions when the furniture comes out of the packaging. These issues will correct themselves over time as the fibers of the cushions are exposed to air. However, shaping the cushions with your hands can alleviate the creases and compressed fibers more quickly.
- Use a vacuum cleaner to remove dust and debris from seams and crevasses.
- Use a soft damp cloth to gently clean soiled areas.

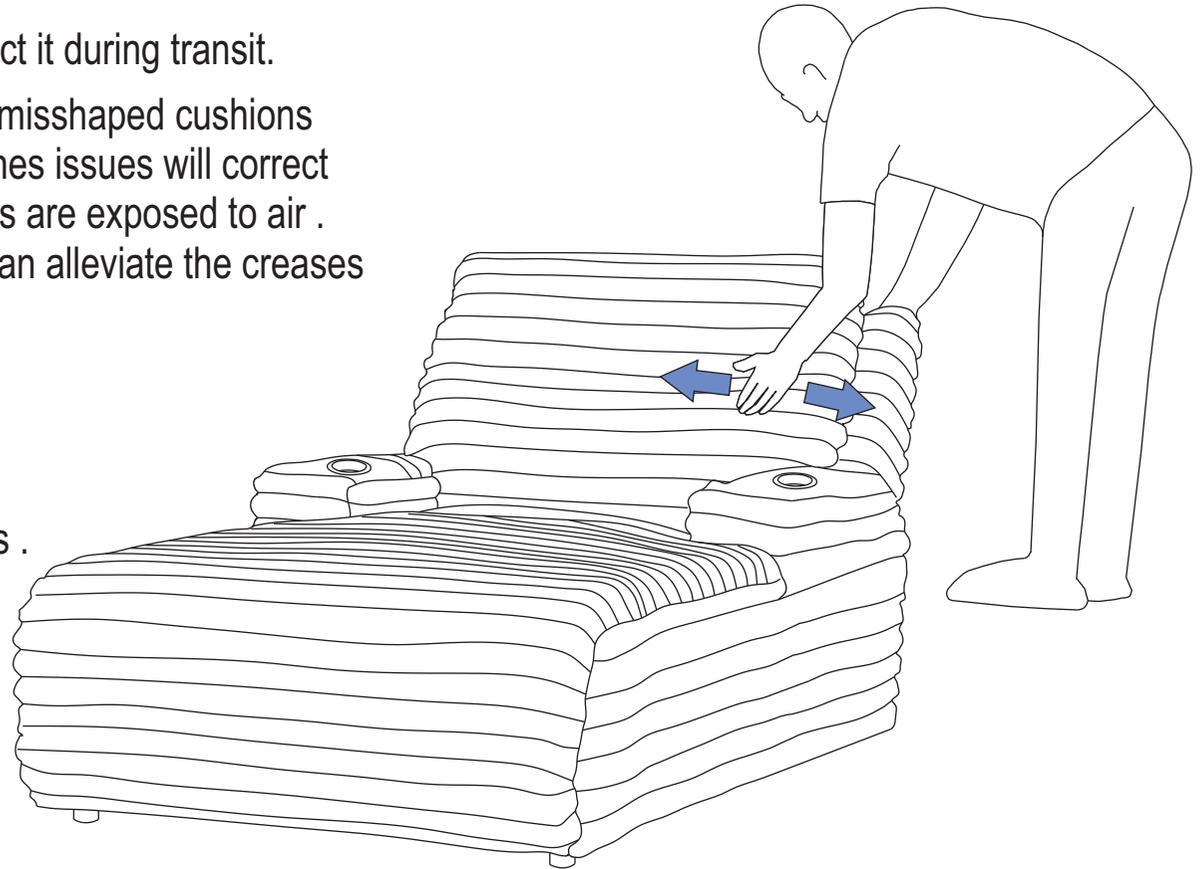


Trouble Shooting Directions.

Problem	Solution
Arms loose and wobbling	Tighten the star - knobs (Step 2) .
No power	Check all power connections (Step 5) .
No Reclining	Check all power connections (Step 5) .
USB not charging	Check all power connections (Step 5).Verify that USB cable is functioning .

PWR RECL CHAISE . SKU : 18501367 18501379

Version 1 . Date created :2/25/2025

Warning Statements


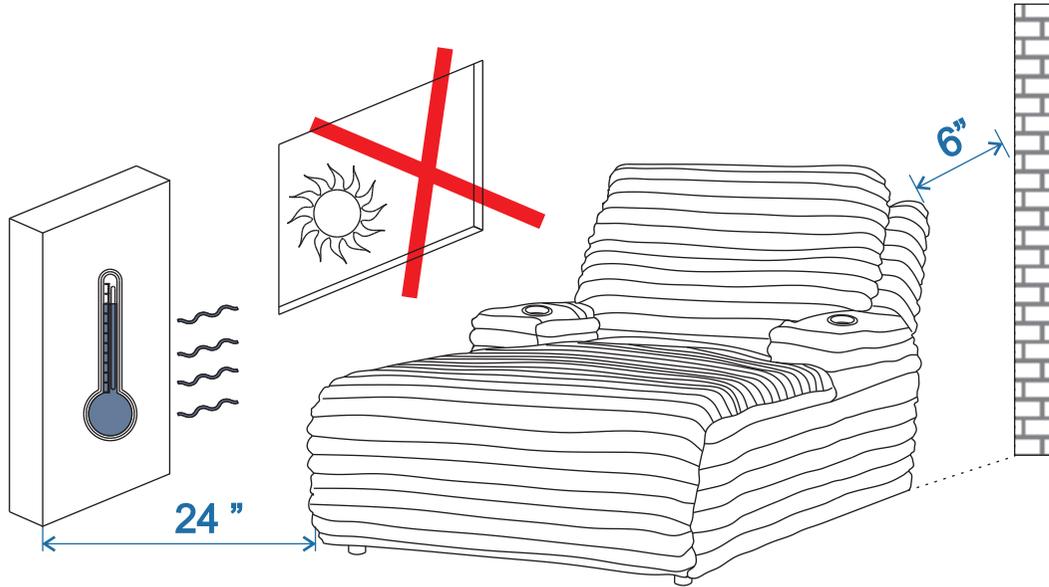


- Keep unit at least 6" from wall.
- Keep unit at least 24" from heat sources.
- Avoid placing unit in areas where unit can be exposed to direct sunlight or other powerful light sources , as fading or discoloration may occur.



- Do not sit on arms or backrest .
- Do not jump or roughhouse on Furniture .

- If unit must be moved, do not drag. Unit must be lifted in order to be moved .

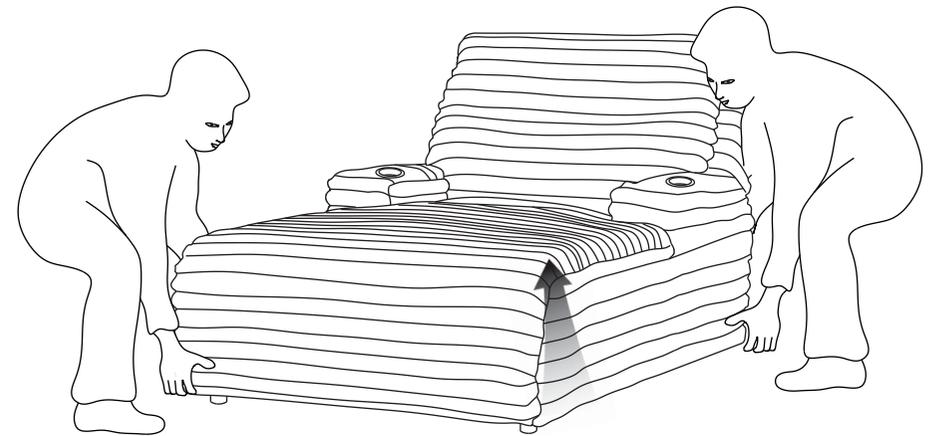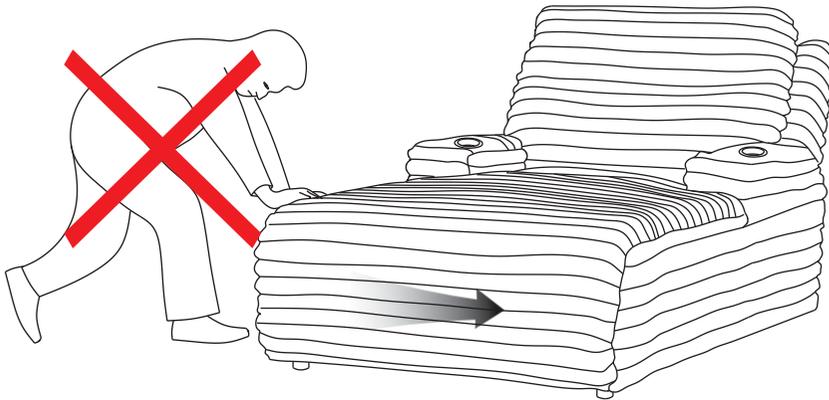

PWR RECL CHAISE . SKU : 18501367 18501379

Version 1 . Date created :2/25/2025

ELECTRICAL WARNING LABEL

This warning label goes on all electric wires for electrical components on both soft and case goods.



WARNING

El mal uso puede provocar INCENDIO MUERTE por DESCARGA ELÉCTRICA

29VDC/2A
Huizhou Zhongbang Electronics Co., Ltd
ZB-H290020A_C

Leer todas las instrucciones antes de usar este mobiliario.

PELIGRO-Para reducir el riesgo de descarga electrica:

1. Siempre desenchufe este accesorio de la toma de corriente eléctrica antes de limpiarlo o repararlo.

ADVERTENCIA: para reducir el riesgo de quemaduras, incendios, descargas eléctricas o lesiones a personas:

1. Desenchufe del tomacorriente antes de colocar o quitar partes.
2. Nunca opere este accesorio si tiene un cable o enchufe eléctrico dañado, si no funciona correctamente, o si el cable o el enchufe eléctrico se ha dañado o se ha caído al agua. Deje de usar este equipamiento y llame a un centro de servicio para que lo examinen y lo reparen.
3. Mantenga el cable eléctrico y el enchufe lejos de superficies calientes y otras fuentes de calor.
4. Para desconectar, gire todos los controles a la posición de apagado, luego retire el enchufe del tomacorriente.
5. Al operar, asegúrese de que el cable eléctrico no esté debajo de la base, las patas o el mecanismo de movimiento para evitar dañar el cable eléctrico o el enchufe.
6. No fuerce ni estire el cable eléctrico.
7. No utilizar cables de extensión o tomas de corriente.
8. Mantener fuera del alcance de los niños. Esto no es un juguete.
9. Plug directly into a compatible electrical socket.
10. Do not modify the plug or use any adapters.



WARNING

Misuse can result in FIRE or DEATH by ELECTRICAL SHOCK

29VDC/2A
Huizhou Zhongbang Electronics Co.,Ltd
ZB-H290020A_C

Read all instructions before using this furnishing.

DANGER-To reduce the risk of electric shock

1. Always unplug this furnishing from the electrical outlet before cleaning or servicing.

WARNING-To reduce the risk of burns, fire, electric shock, or injury to persons:

1. Unplug from outlet before putting on or taking off parts.
2. Never operate this furnishing if it has a damaged electrical cord or plug, if it is not working properly, or if the electrical cord or plug has been damaged or dropped into water. Stop using this furnishing and call a service center for examination and repair.
3. Keep the electrical cord and plug away from heated surfaces and other heat sources.
4. To disconnect, turn all controls to the off position, then remove plug from outlet.
5. When operating, ensure that electrical cord is not under the base, legs, or motion mechanism to avoid damage to electrical cord or plug.
6. Do not strain or stretch electrical cord.
7. Do not use extension cords or power strips.
8. Keep out of reach of children. This is not a toy.
9. Enchúfelo directamente a una toma de corriente compatible.
10. No modifique el enchufe ni utilice adaptadores.

PWR RECL CHAISE . SKU : 18501367 18501379

Version 1 . Date created :2/25/2025