

SETUP AND OPERATION GUIDE

Power Rocker Recliner

SKU: 18506658

Vendor Code: MVLC



IMPORTANT SAFETY INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE USING.

WARNING: To reduce the risk of burns, fire, electric shock, or injury to persons:

1. DANGER: To reduce the risk of electric shock-Always unplug this furnishing from the electrical outlet before cleaning.
2. Unplug from outlet before putting on or taking off parts.
3. Close supervision is necessary when used by or near children, or disabled people.
4. Use this furnishing only for its intended use as described in these instructions.
Do not use attachments not recommended by the manufacturer.
5. Never operate this furnishing if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water.
6. Keep the cord away from heated surfaces.
7. Never drop or insert any object into any opening.
8. Do not use outdoors. Just for household indoor use only.
9. To disconnect, turn all controls to the off position, then remove plug from outlet.
10. WARNING: Risk of injury - Keep children away from extended foot support.
11. WARNING: Risk of injury to Persons – do not use this furnishing to support video equipment such as televisions or computer monitors.
12. When not in use, it is recommended that the wand be stored securely in the pocket on the outside of the arm.

FCC INSTRUCTION

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the distance between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

SAVE THESE INSTRUCTIONS





Assembly Instructions for Rocker Recliner


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment.


Inside the carton you will find two red plastic bags that have the recliner's wings in them. Remove the wings from the plastic bags and set them aside to be used in assembly and installation.

Make sure to read the instructions below before assembling your rocker recliner.

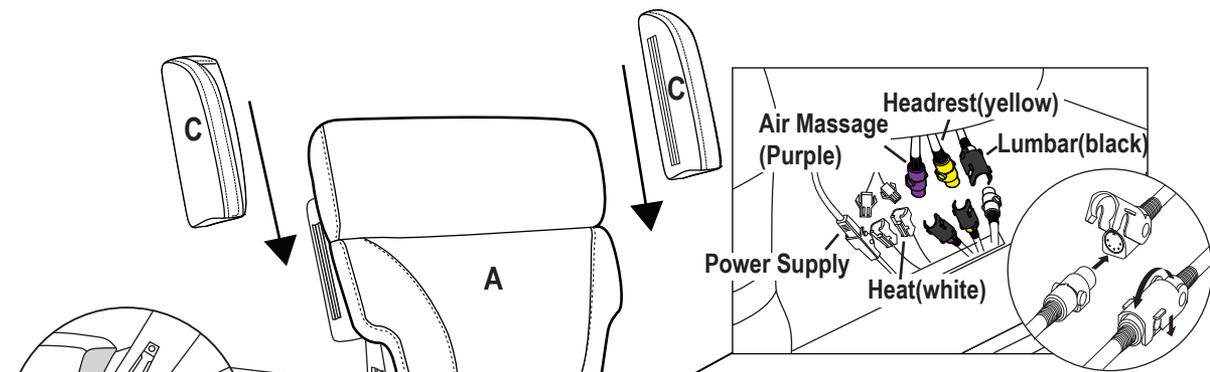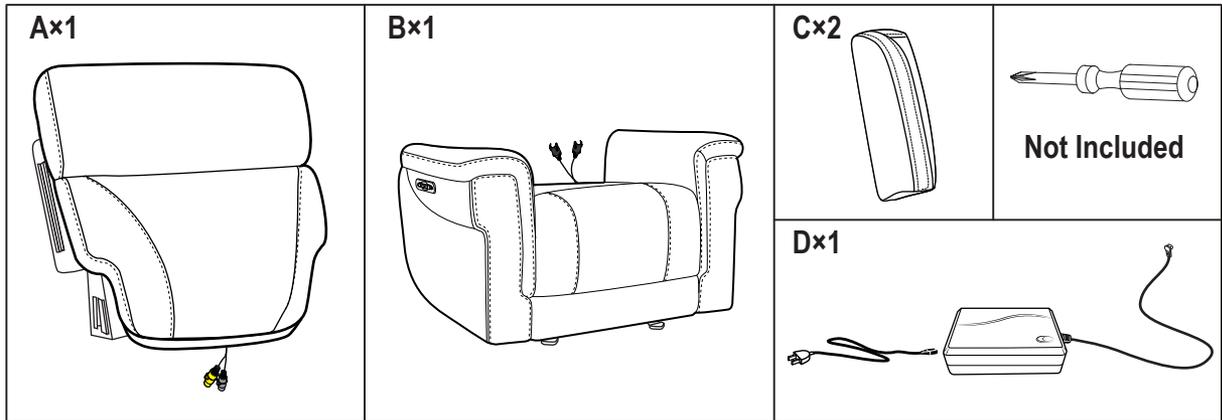

Ensure both clips on back are aligned, then press top of back frame downward until a clicking sound is heard.

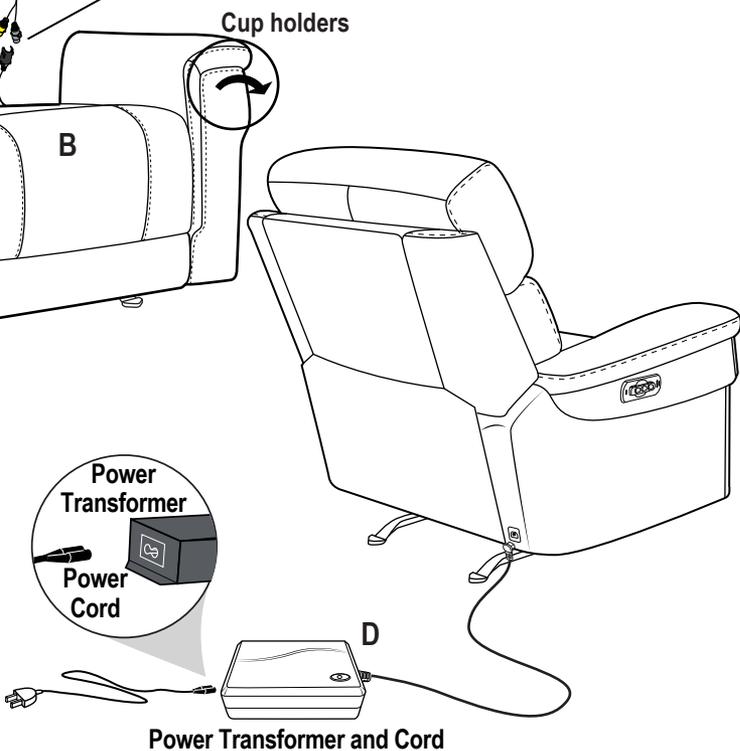

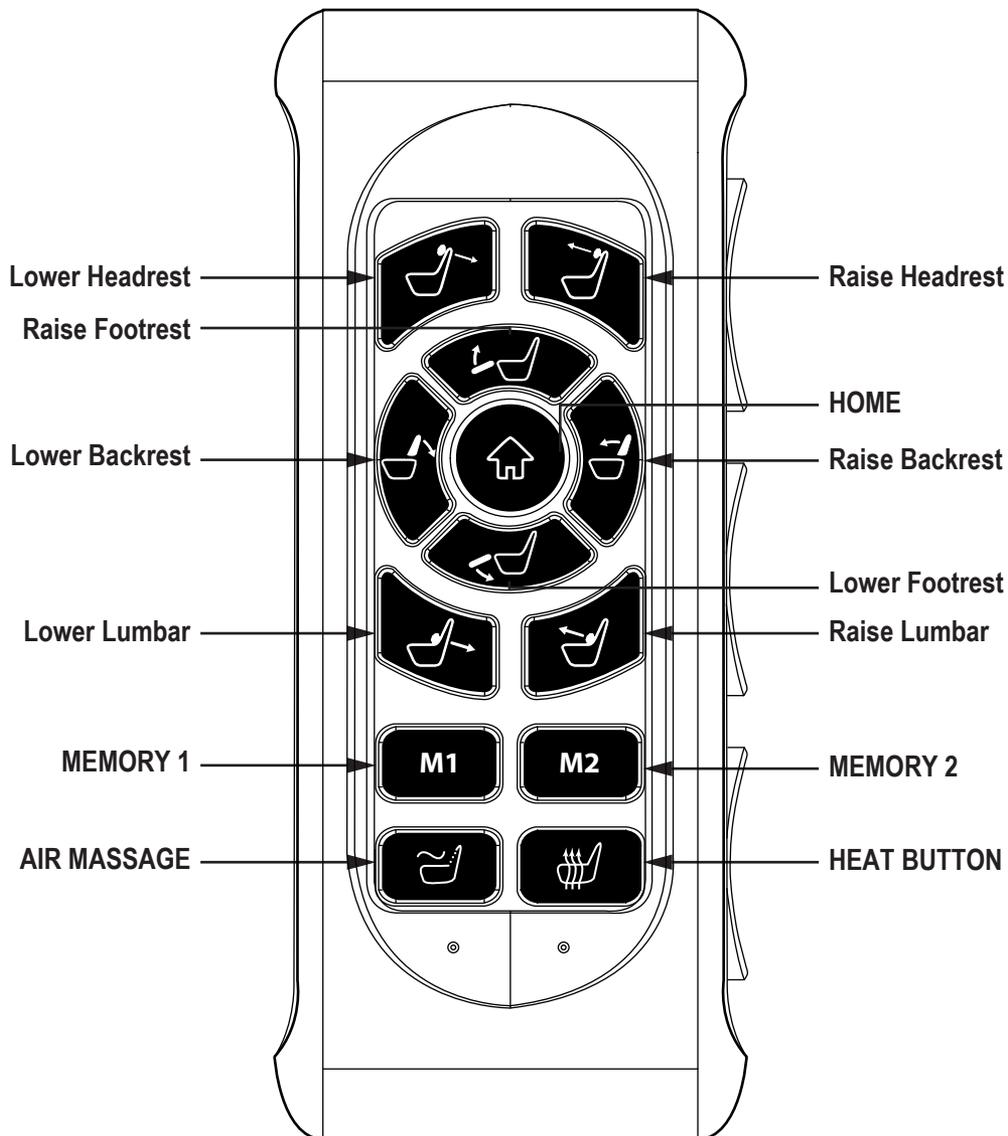

AIR MASSAGE: Press the air massage button to activate air massage function. Press again to cycle intensity through low (light is green), high heat (light is red), and off (light is off).

When user operates lumbar, will eliminate massage motion if it has been in use.

Massage working time: 20 min.

HEAT BUTTON: Press the heat button to activate heat function. Press again to cycle intensity through low (light is green), high heat (light is red), and off (light is off).

Heat working time: 30 min.


How to use Memory Function

Press and hold Memory 1 button and Memory 2 button for 3 seconds. The buzzer in the Remote will keep ringing to indicate that the hand control is in "set" mode. Press and hold the desired memory button to set the memory position. The buzzer will ring two times .

To go to a preset Memory 1 & Memory 2 position, press and hold the desired memory button M1 & M2.

How to pair the new remote

Disconnect the power, then Press and hold the "Lower Headrest" button and "Raise Headrest" buttons for 5 seconds, the buzzer in the remote will ring two times. Connect the power, the buzzer in control box will ring three times, and then the remote will ring one time. The pairing is finished.

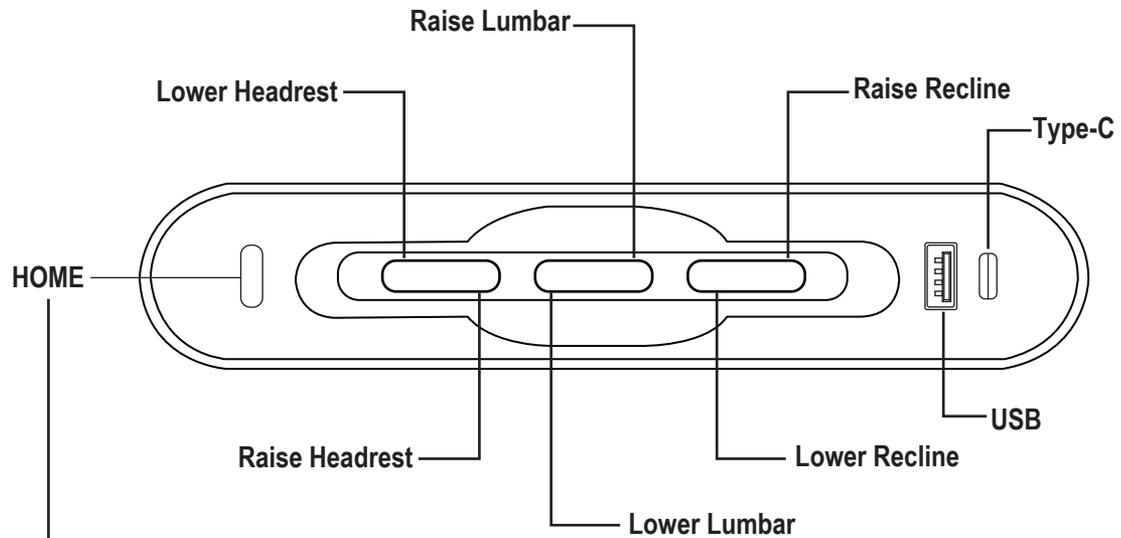

When you can't find the remote hand controller, press and hold the this button for 10 seconds, the hand wand will make a sound to show where it is.

Customer Service

If you have any questions regarding the use of this unit, or find that your unit needs service, please contact your retailer.



NOTE: This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device. Modifications not approved by the party responsible for compliance could void user's authority to operate the equipment.