 




**ROOMS TO GO** ▶

Manufactured for Rooms To Go

Please scan the QR code above  
to get the installation video and owner's manual

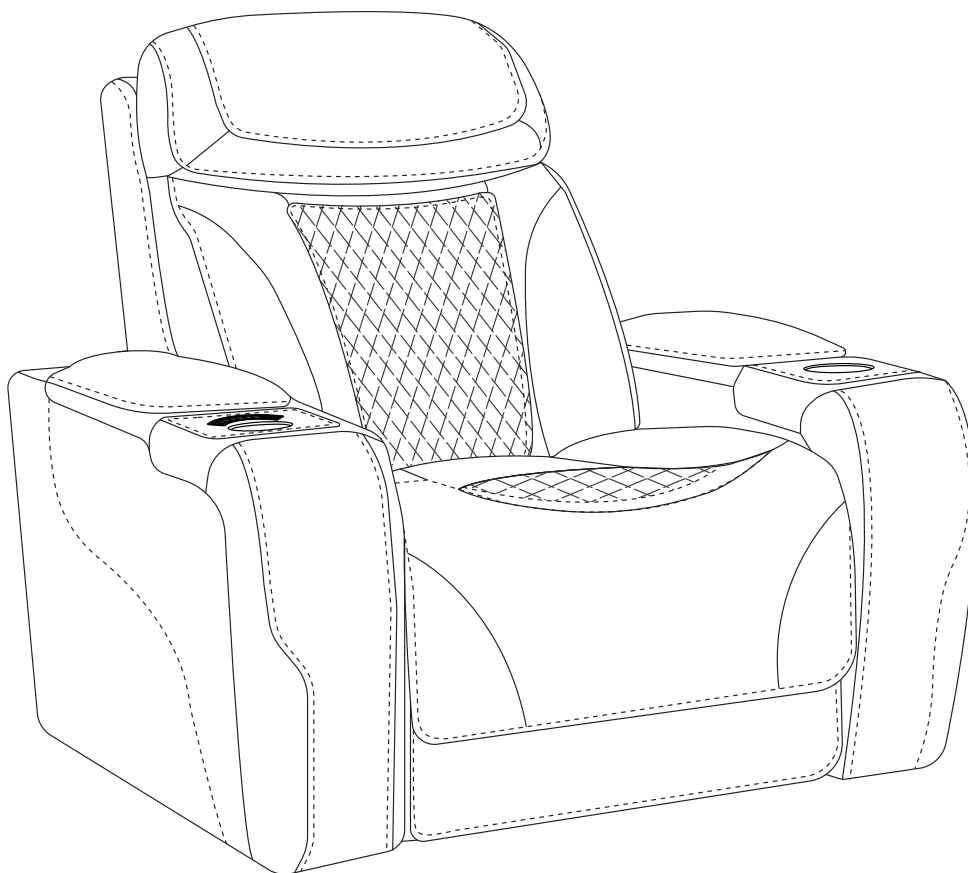

# **SETUP AND OPERATION GUIDE**

## ***POWER RECLINER***

***Triple Power with Headrest and Lumbar***

***SKU: 18511457/ 18511469/ 18511471***

***Style No.: M00144B***

***Version 2: 07/22/2025***





## IMPORTANT SAFETY INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE USING.

**WARNING:** To reduce the risk of burns, fire, electric shock, or injury to persons:

1. **DANGER:** To reduce the risk of electric shock-Always unplug this furnishing from the electrical outlet before cleaning.
2. Unplug from outlet before putting on or taking off parts.
3. Close supervision is necessary when used by or near children, or disabled people.
4. Use this furnishing only for its intended use as described in these instructions.  
Do not use attachments not recommended by the manufacturer.
5. Never operate this furnishing if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water.
6. Keep the cord away from heated surfaces.
7. Never drop or insert any object into any opening.
8. Do not use outdoors. Just for household indoor use only.
9. To disconnect, turn all controls to the off position, then remove plug from outlet.
10. **WARNING:** Risk of injury - Keep children away from extended foot support.
11. **WARNING:** Risk of injury to Persons – do not use this furnishing to support video equipment such as televisions or computer monitors.

### FCC INSTRUCTION

**CAUTION:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one more of the following measures:

 
 
 
- Reorient or relocate the receiving antenna.
- Increase the distance between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**SAVE THESE INSTRUCTIONS**

# Assembly Instructions for Recliner

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment.

**Make sure to read the instructions below before assembling your Recliner.**

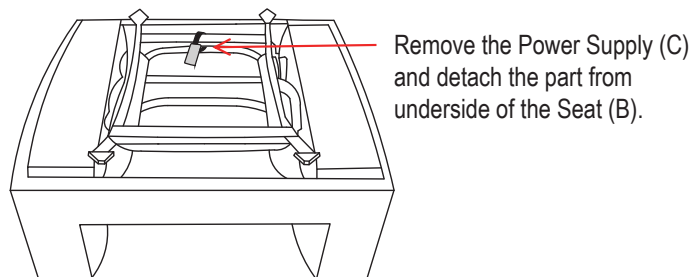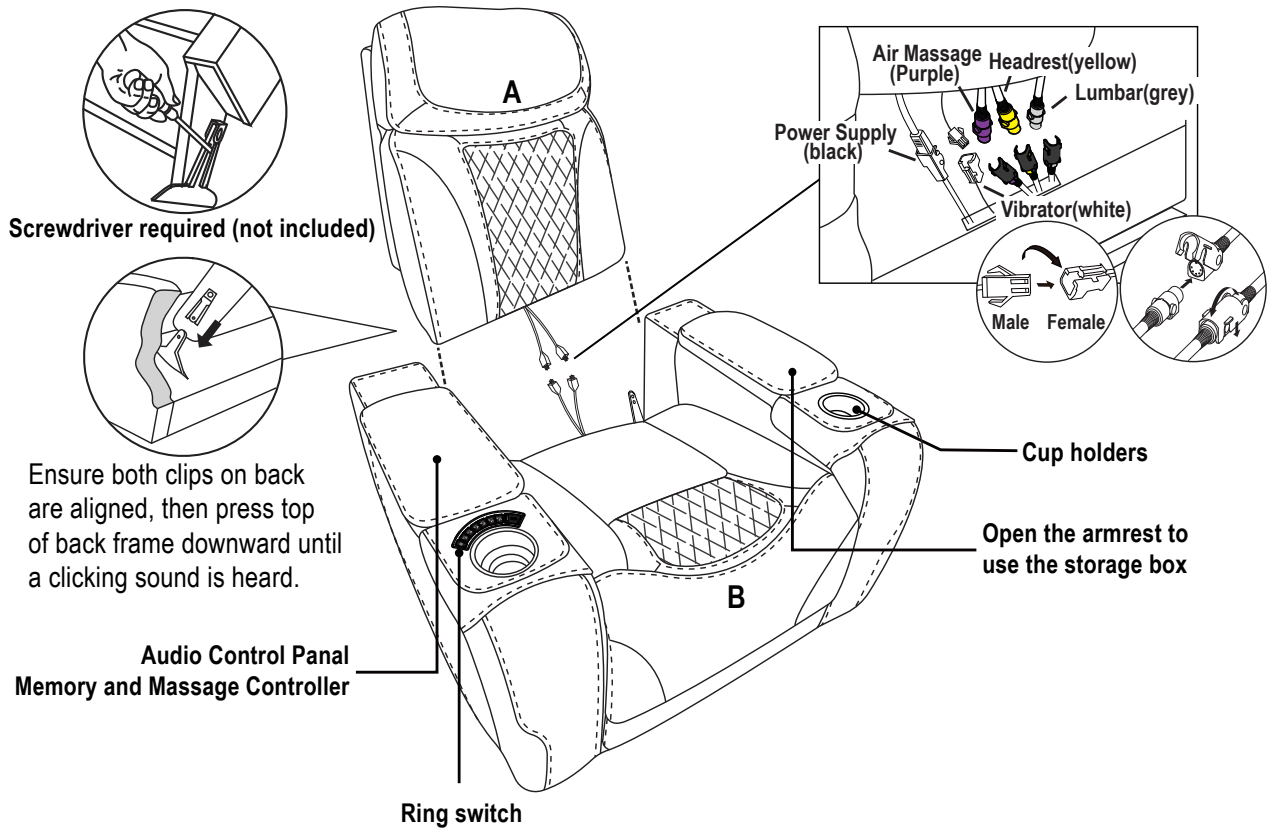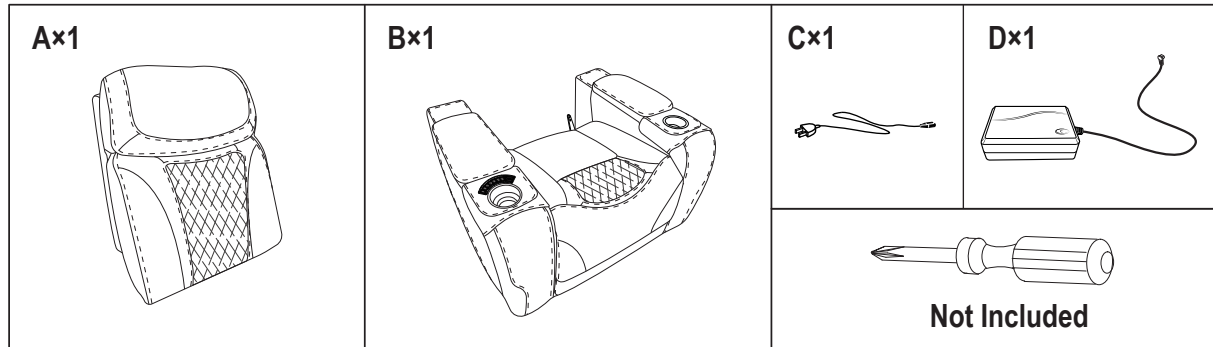


Do not plug the power cord into a power outlet until the recliner is fully assembled and in place.


Notes:

- 1) To help prevent shock and or damage to your product, plug the end cord of transformer into the recliner, then plug the transformer into a nearby outlet.
- 2) Read the operating instructions carefully before operating the recliner.

 
Audio Amplifier is at the bottom of the recliner

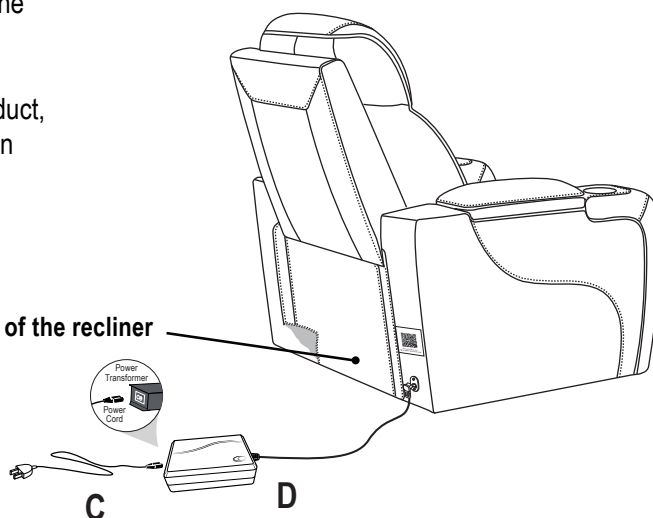

## Audio Amplifier

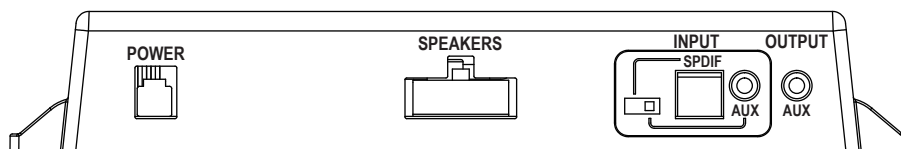 

 This is located underneath the recliner. AUX input, AUX output, and S/PDIF are located on the Audio Amplifier. You can connect multiple devices by using a 3.5mm AUX cable connecting the AUX input to the audio source and then connecting another 3.5mm AUX cable from AUX output to the AUX input of the next Audio Amplifier. 3.5mm AUX cable sold separately.

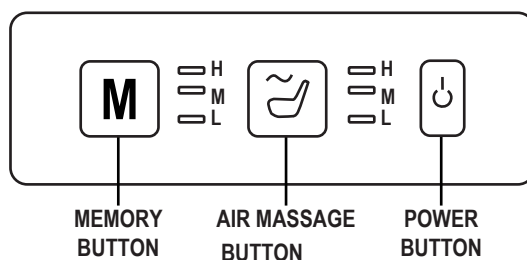

### POWER BUTTON

Press the power button to turn the armrest control features on and off.

 
### AIR MESSAGE BUTTON

Press the air massage button to activate the gentle pressure massage function. Press again to cycle through low, medium, and high intensity.

### HOW TO USE MEMORY FUNCTION

Adjust your recline, headrest, and lumbar to the desired position. Press and hold power button together until the light flashes, then press memory button to save the position. If you want to change the memory position, repeat the process above.

## Audio Control Panel

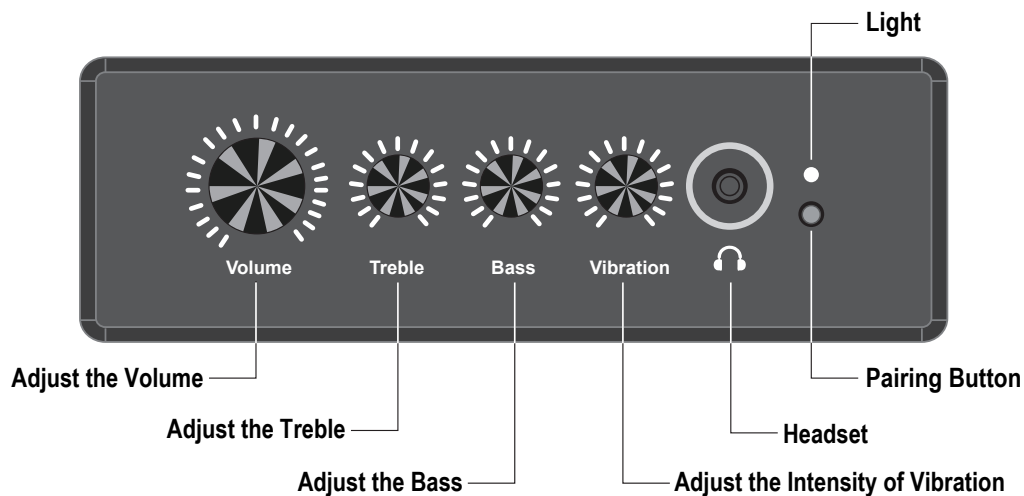

### Turning On/ Off the Speaker

Press and hold the volume adjustment knob to turn on the speaker. Press and hold again to turn off the speaker.

### Wireless Button Pairing Mode

Press and hold the pairing button (blue light flashes) to initiate pairing. The wireless device name is: Moto Media System. Once connected, the blue light stays on and you will hear a voice prompt: "Connected." If disconnected, the blue light will turn off and you will hear a voice prompt: "Disconnected."

### Switching Broadcast Mode

1. Press the pairing button twice quickly; you will hear a voice prompt: "Broadcast mode." When connected, the red light stays on. Press the pairing button twice quickly again, and you will hear a voice prompt: "Broadcast off," which exits broadcast mode.
2. After the device connects via wireless button, press the pairing button twice quickly (red light flashes) to enter broadcast mode; the blue light will turn purple. Press the pairing button twice quickly again to exit broadcast mode; the purple light will turn back to blue.

### Using Broadcast Mode

When a device such as a phone or TV is connected to the wireless button of Sofa A, press the pairing button twice quickly to switch to broadcast mode (purple light stays on). Then turn on the Sofa B speaker and press the pairing button twice quickly to switch it to broadcast mode (red light stays on). Sofa A will act as the signal source, and Sofa B will sync to play the audio or video from Sofa A.



 
 
## Operating Instructions for Recliner

### Notes

1. Wireless button search will automatically end after three minutes without connecting to any devices, and the flashing light will turn off. If you press the button during the flashing period, the search will end.
2. Wireless button mode has higher priority than broadcast mode. In broadcast mode, if different devices connect via wireless button to play audio or video, broadcast mode will stop. If no playback occurs for about 4 seconds, it will re-search for other broadcast signal sources.
3. If multiple sofas are connected to the same device via wireless button, audio and video cannot be played simultaneously. The default is for the last connected sofa to play.  
  
Example: If sofas A, B, and C are all in broadcast mode (red light stays on), press and hold the pairing button (red light flashes) to connect to sofa A (purple light stays on). Sofas B and C will sync to play audio or video from sofa A. If the same device connects to sofa B (purple light flashes), sofa B and C will play normally, and sofa A will stop working. If you then connect to sofa C (purple light stays on), sofa C will play normally, while sofas A and B will not work. A restart is needed for playback.
4. When using wireless button to connect the main speaker sofa to a TV, there may be delays and instability. It is recommended to use a wired connection to the main speaker sofa and then use broadcast mode for wireless synchronization to other sofas.
5. Please keep the wireless button between devices within 10 meters.

# Operating Instructions for Recliner

## Ring Switch Instruction

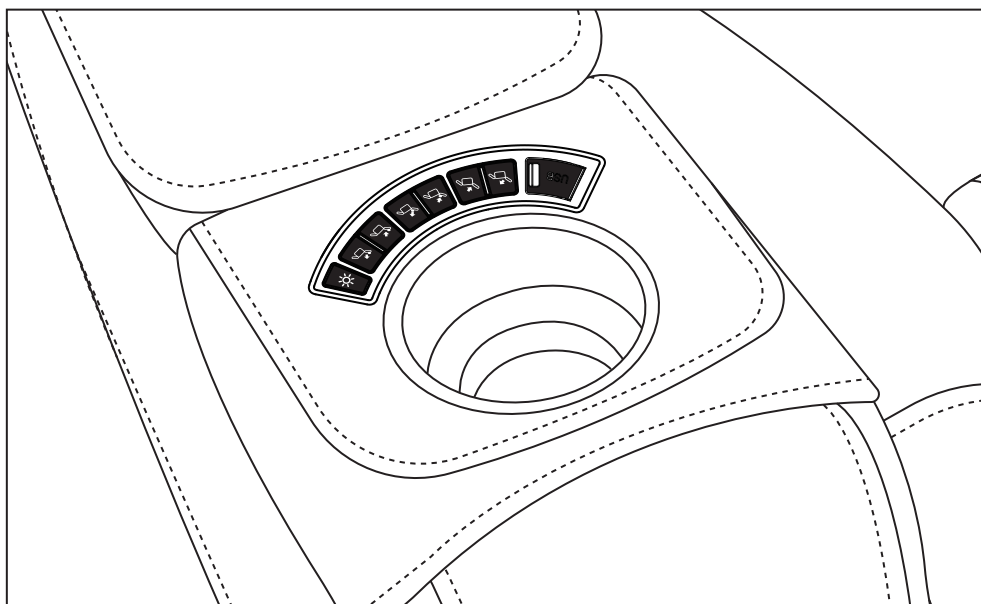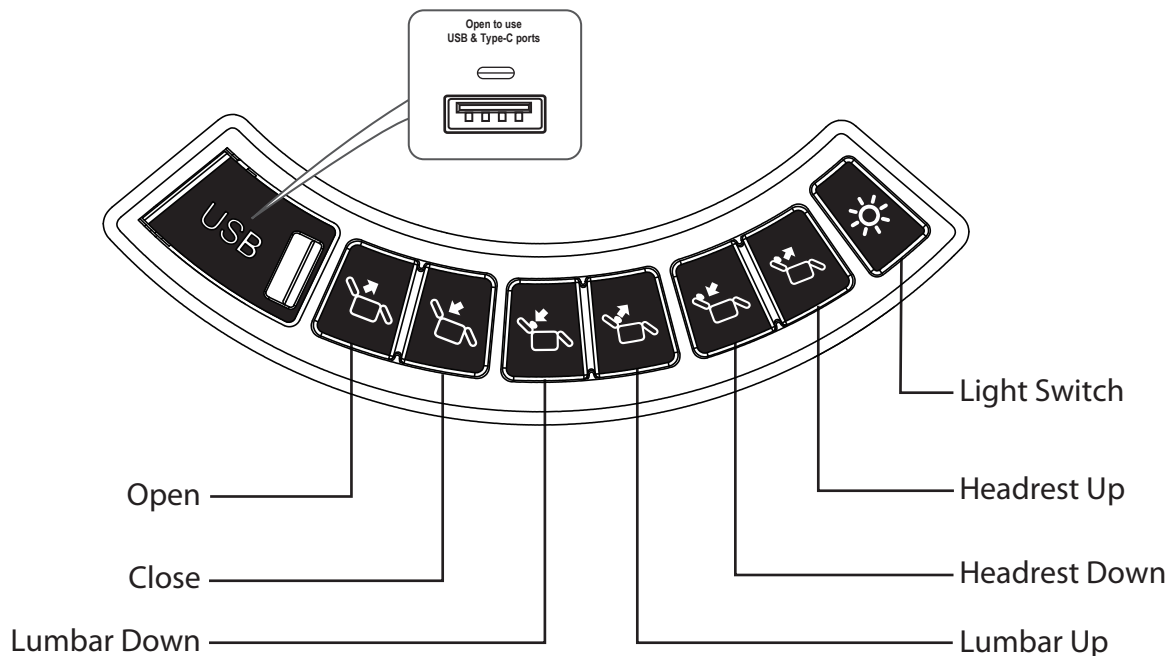


### Customer Service

If you have any questions regarding the use of this unit, or find that your unit needs service, please contact your retailer.



## WARNINGS

 - \*Keep unit at least 24" from all heat sources.
- \*Avoid placing unit in areas where unit can be exposed to direct sunlight other powerful light sources, as fading or discoloration may occur.
- \*Do not reach under seat when mechanism is operating or serious injury may occur.
- \*Reclining mechanism should only be operated while seated properly.
- \*Do not sit on arms or backrest.
- \*Do not jump or roughhouse on furniture.
- \*If unit must be moved, do not drag. Unit must be lifted in order to be moved.
- \*Do not continuously operate mechanism for more than one minute or unit may go into protection mode by shutting down to prevent overheating.
- \*Unplug unit from power source prior to cleaning mechanism.
- \*Do not allow electrical components to come into contact with any liquids.

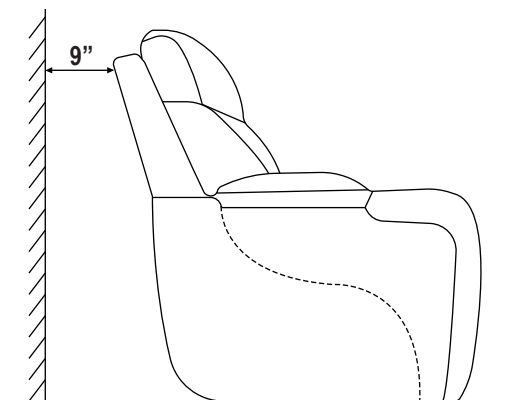

Maintain minimum of 9" space  
between the furniture backs and wall.

## CARE AND CLEANING

- \*Upholstered furniture is packaged tightly to protect it during transit. This packaging can sometimes cause creases or misshaped cushions when the furniture comes out of the packaging. These issues will correct themselves over time as the fibers of the cushions are exposed to air. However, shaping the cushions with your hands can alleviate the creases and compressed fibers more quickly.
- \*Dust often and use a vacuum cleaner to remove debris from seams and crevasses.
- \*Use a soft damp cloth to gently clean soiled areas and wipe clean. Do not rub.
- \*Do not use household cleaners or solvents. Such cleaners may cause damage and/or discoloration.
- \*Do regularly use dedicated leather care product onto the leather furniture to prevent built up of body oils.

PROBLEM	POSSIBLE FACTORS	SOLUTIONS
Recliner doesn't recline	Transformer may not be connected well	<ul style="list-style-type: none"><li>• Check that the power supply has been correctly connected to transformer and socket</li><li>• Confirm the wire from recliner to transformer is firmly connected</li></ul>
Recliner power not working	Power outlet on wall not functioning	<ul style="list-style-type: none"><li>• Check power from your wall outlet</li><li>• Plug in a different device to make sure outlet has power</li></ul>
Headrest or lumbar doesn't work	Headrest or lumbar motor wires may not be properly connected inside the back flap of the recliner	<ul style="list-style-type: none"><li>• Check that the headrest (yellow) and lumbar (grey) motor wires have been correctly connected</li></ul> <b><i>Connecting the wires to their correct color is extremely important</i></b>
Headrest and lumbar doesn't work	Headrest and lumbar motor plug have been cross connected	<ul style="list-style-type: none"><li>• Check that the headrest (yellow) and lumbar (grey) motor wires have been correctly connected</li></ul> <b><i>Connecting the wires to their correct color is extremely important</i></b>





**NOTE:** This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device. Modifications not approved by the party responsible for compliance could void user's authority to operate the equipment.

# IMPORTANT SAFETY INSTRUCTIONS



## WARNING

**Misuse can result in FIRE or DEATH by ELECTRICAL SHOCK**

**29VDC / 3.0A  
ZBPOWER  
ZB-H290030-G**

**Read all instructions before using this furnishing.**

**DANGER – To reduce the risk of electric shock:**

- Always unplug this furnishing from the electrical outlet before cleaning or servicing.

**WARNING – To reduce the risk of burns, fire, electric shock, or injury to persons:**

- Unplug from outlet before putting on or taking off parts.
- Never operate this furnishing if it has a damaged electrical cord or plug, if it is not working properly, or if the electrical cord or plug has been damaged or dropped into water. Stop using this furnishing and call a service center for examination and repair.
- Keep the electrical cord and plug away from heated surfaces and other heat sources.
- To disconnect, turn all controls to the off position, then remove plug from outlet.
- When operating, ensure that electrical cord is not under the base, legs, or motion mechanism to avoid damage to electrical cord or plug.
- Do not strain or stretch electrical cord.
- Do not use extension cords or power strips.
- Keep out of reach of children. This is not a toy.
- Plug directly into a compatible electrical socket.
- Do not modify the plug or use any adapters.



## WARNING

**El mal uso puede provocar INCENDIO o MUERTE por DESCARGA ELÉCTRICA**

**29VDC / 3.0A  
ZBPOWER  
ZB-H290030-G**

**Leer todas las instrucciones antes de usar este mobiliario.**

**PELIGRO – Para reducir el riesgo de descarga eléctrica:**

- Siempre desenchufe este accesorio de la toma de corriente eléctrica antes de limpiarlo o repararlo.

**ADVERTENCIA: para reducir el riesgo de quemaduras, incendios, descargas eléctricas o lesiones a personas:**

- Desenchufe del tomacorriente antes de colocar o quitar partes.
- Nunca opere este accesorio si tiene un cable o enchufe eléctrico dañado, si no funciona correctamente, o si el cable o el enchufe eléctrico se ha dañado o se ha caído al agua. Deje de usar este equipamiento y llame a un centro de servicio para que lo examinen y lo reparen.
- Mantenga el cable eléctrico y el enchufe lejos de superficies calientes y otras fuentes de calor.
- Para desconectar, gire todos los controles a la posición de apagado, luego retire el enchufe del tomacorriente.
- Al operar, asegúrese de que el cable eléctrico no esté debajo de la base, las patas o el mecanismo de movimiento para evitar dañar el cable eléctrico o el enchufe.
- No fuerce ni estire el cable eléctrico.
- No utilizar cables de extensión o tomas de corriente.
- Mantener fuera del alcance de los niños. Esto no es un juguete.
- Enchúfelo directamente a una toma de corriente compatible.
- No modifique el enchufe ni utilice adaptadores.