

ASSEMBLY INSTRUCTIONS



**ROOMS
TO GO**

AC1497-KD ACCENT CHAIR(SKU#:18514946 / 18514958 / 18514960 / 18514972 / 18514984)



GENERAL INFORMATION

- (1) Please read assembly instructions prior assembling. To avoid damage, assemble this production on a non-abrasive surface. Do not fully tighten any bolts until you are sure all component parts are assembled correctly.
- (2) Make sure all bolts are fully tightened before this product is used.
- (3) Use non-abrasive cleaning product.
- (4) The hardware pack contains SMALL ITEMS which should be KEPT AWAY FROM YOUNG CHILDREN.
- (5) Periodically (every 90 days) tighten all screws in the chair.



PARTS&HARDWARE LIST

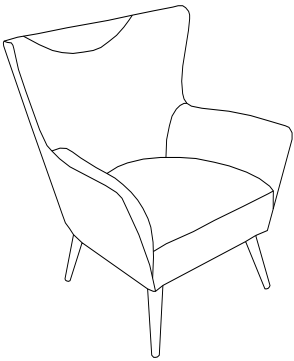	A	Chair Body(Back&Seat)	1 PC		
	B	Legs	4 PCS		
	1	PLASTIC WASHER	4 PCS	 M8x40mm	


ASSEMBLY STEP

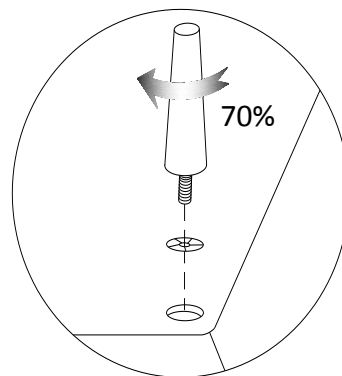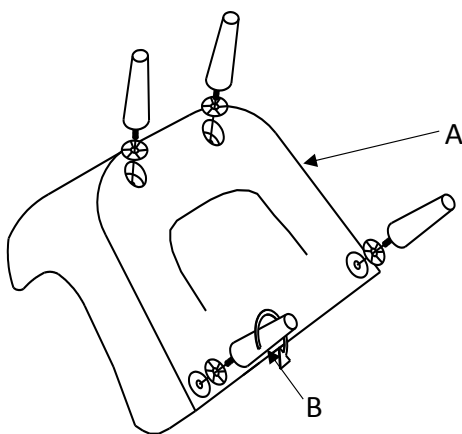

- 1 Put Chair Body(A) on a non-abrasive table. Insert Legs(B) into the back of Chair Body(A), and assemble using four plastic washers(1) to screw in. Do not fully tighten any leg. Tighten to about 70% of full insertion

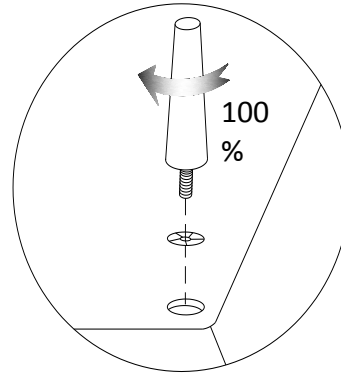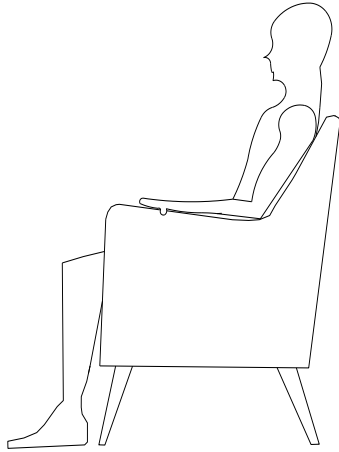

2 Place Chair upright on level floor. Make any necessary adjustments to frame to ensure chair sits flat on floor without rocking. Then fully tighten all legs.

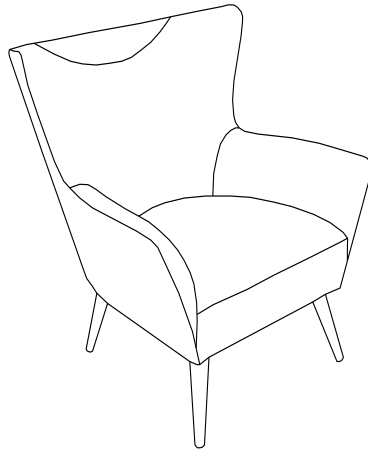

3 Place the dust cover to the bottom of Chair Body(A) using the adhesive strip. Now the chair is correctly assembled and ready to use.