



 
 
Assembly Instructions for K2546 Sectional

SKU# 12125476 /12225478/12125488/12225480/12325470/12425472/12625476/12725478/12825470/12825482/12925472/12925484/18525470
SKU# 12125464/12225466/12125452/12225454/12325468/12425460/12625464/12725466/12825468/12825456/12925460/12925458/18525468

Manufactured for Rooms To Go

STEP 1


The plastic feet and transformers are located inside the black dust cover on the underside of the furniture. Unzip the dust cover to remove the feet and transformers.

PARTS LIST			
Plastic Feet: Chair/Corner/Console (4 pieces each) Chaise (5 pieces)		Transformer: Chair/Chaise/Console (1 piece each)	

STEP 2

Attach each plastic foot to the corresponding pre-drilled hole. To do so, turn them by hand in a clockwise direction until each foot is tight.

 NOTE: Please do not over tighten the plastic feet, as it could cause damage.

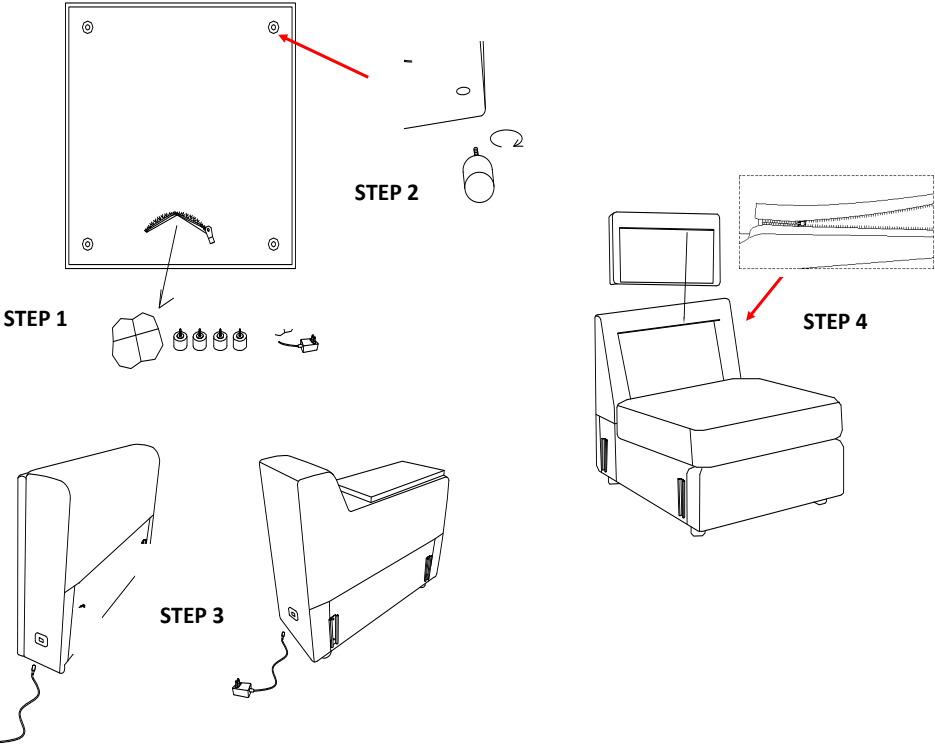

STEP 3

Connect the transformers to the DC ports located at the rear of the arms and console(s).

 
STEP 4

Fasten the back cushion to the back frame using the zipper located towards the top of the back frame.

STEP 5 (If applicable)

Connecting the subwoofer console:


- a. In order to operate, the subwoofer console needs to be connected to the pieces containing the audio switch. These pieces are the LAF/RAF chair and/or the LAF/RAF chaise.
- b. If the subwoofer console is placed next to the LAF/RAF chair or the LAF/RAF chaise, the armless chair's wire does not need to be connected to the subwoofer console. If the armless chair is placed between the subwoofer console and the LAF/RAF chair or the LAF/RAF chaise, the wire of the armless chair will need to be connected to the subwoofer console.
- c. The armless chair has a wire and two connection ports. The wire is attached to the bottom of the chair via velcro. For flexibility in location of the subwoofer console, the armless chair's wire can be swapped left and right.

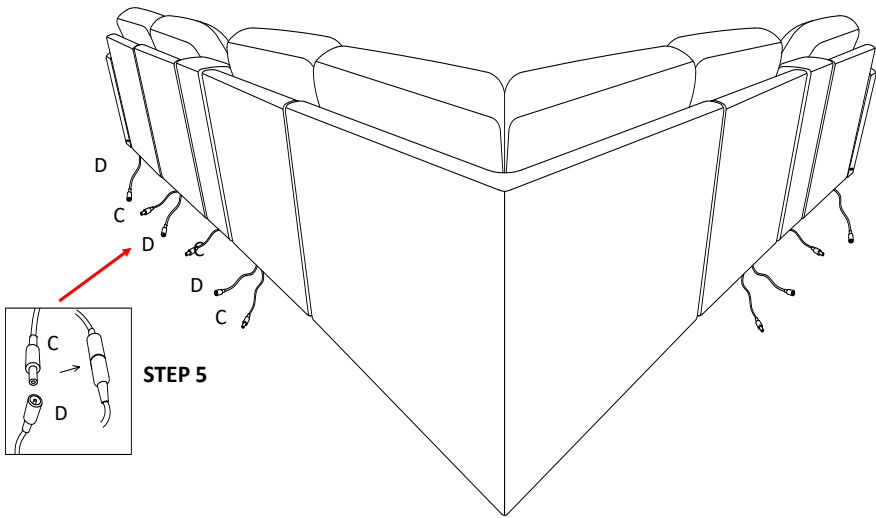

STEP 6

To connect all all modular pieces together, begin with the LAF piece and work from left to right.

 Note:
Make sure all PLUGS are connected on the product before plugging power cord into power outlet. If not damage can occur.
The USB ports (where applicable) are designed with working voltage of 5V, and can NOT be used to supply power for laptop computers (neither PC or Mac). Plugging a laptop computer to the USB port may end up damaging either the computer or the USB port due to unmatched working voltage.

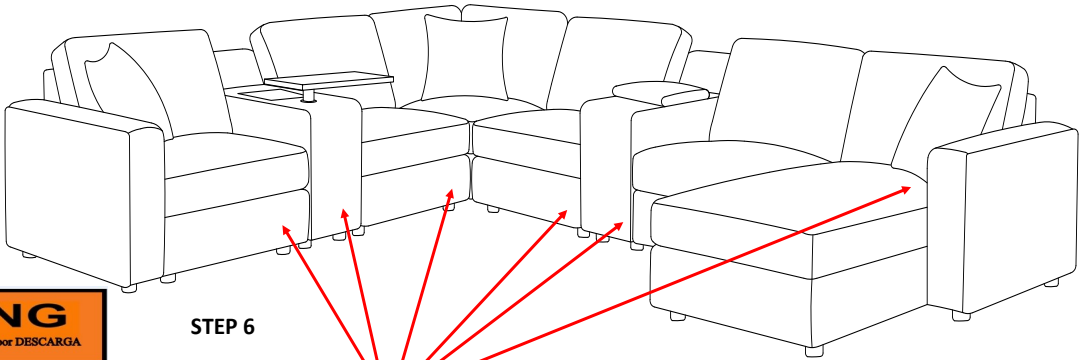

! WARNING
Misuse can result in FIRE or DEATH by ELECTRICAL SHOCK

Read all instructions before using this furnishing.

DANGER – To reduce the risk of electric shock:

1. Always unplug this furnishing from the electrical outlet before cleaning or servicing.

WARNING – To reduce the risk of burns, fires, electric shocks, or injury to persons:

1. Unplug from outlet before putting on or taking off parts.

2. Never operate this furnishing if it has a damaged electrical cord or plug, if it is not working properly, or if the electrical cord or plug has been damaged or dropped into water. Stop using this furnishing and call a service center for examination and repair.

3. Keep the electrical cord and plug away from heated surfaces and other heat sources.

4. To disconnect, turn all controls to the off position, then remove plug from outlet.

5. When operating, ensure that electrical cord is not under the base, legs, or motion mechanism to avoid damage to electrical cord or plug.

6. Do not strain or stretch electrical cord.

7. Do not use extension cords or power strips.

8. Keep out of reach of children. This is not a toy.

! WARNING
El mal uso puede provocar INCENDIO o MUERTE por DESCARGA ELÉCTRICA

Leer todas las instrucciones antes de usar este mobiliario.

PELIGRO – Para reducir el riesgo de descarga eléctrica:

1. Siempre desenchufe este accesorio de la toma de corriente eléctrica antes de limpiarlo o repararlo.

ADVERTENCIA: para reducir el riesgo de quemaduras, incendios, descargas eléctricas o lesiones a personas:

1. Desenchufe del tomacorriente antes de colocar o quitar partes.

2. Nunca opere este accesorio si tiene un cable o enchufe eléctrico dañado, si no funciona correctamente, o si el cable o el enchufe eléctrico se ha dañado o se ha caído al agua. Deje de usar este equipamiento y llame a un centro de servicio para que lo examinen y lo reparen.

3. Mantenga el cable eléctrico y el enchufe lejos de superficies calientes y otras fuentes de calor.

4. Para desconectar, gire todos los controles a la posición de apagado, luego retire el enchufe del tomacorriente.

5. Al operar, asegúrese de que el cable eléctrico no esté debajo de la base, las patas o el mecanismo de movimiento para evitar dañar el cable eléctrico o el enchufe.

6. No fuerce ni estire el cable eléctrico.

7. No utilizar cables de extensión o tomas de corriente.

8. Mantener fuera del alcance de los niños. Esto no es un juguete.

STEP 6

