




# Assembly Instructions

**SYNE**  
**SKU:**

**5093-85PHR Power Reclining**  
18551932/18551944

Manufactured by SYNE for Rooms To Go

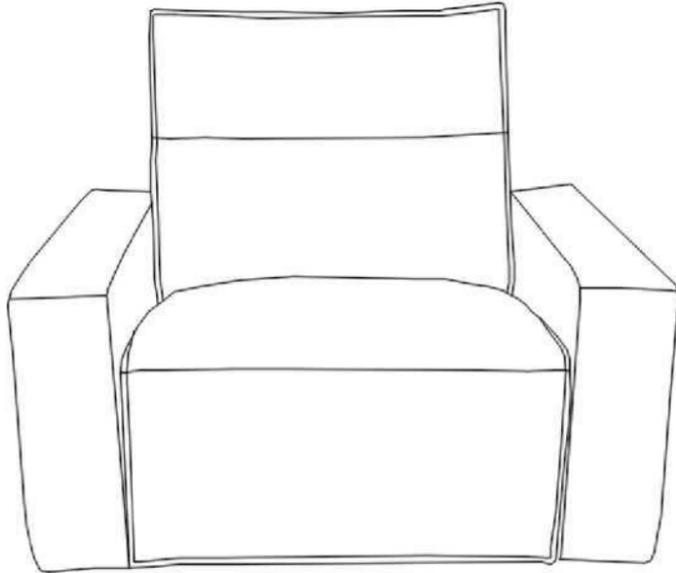

## **! WARNING**

**El mal uso puede provocar INCENDIO o MUERTE por DESCARGA ELÉCTRICA**

29VDC/2A  
DewertOkin Technology Group Co., Ltd.  
PW.10.20.202

**Leer todas las instrucciones antes de usar este mobiliario.**

**PELIGRO – Para reducir el riesgo de descarga eléctrica:**

1. Siempre desenchufe este accesorio de la toma de corriente eléctrica antes de limpiarlo o repararlo.

**ADVERTENCIA: para reducir el riesgo de quemaduras, incendios, descargas eléctricas o lesiones a personas:**

1. Desenchufe del tomacorriente antes de colocar o quitar partes.
2. Nunca opere este accesorio si tiene un cable o enchufe eléctrico dañado, si no funciona correctamente, o si el cable o el enchufe eléctrico se ha dañado o se ha caído al agua. Deje de usar este equipamiento y llame a un centro de servicio para que lo examinen y lo reparen.
3. Mantenga el cable eléctrico y el enchufe lejos de superficies calientes y otras fuentes de calor.
4. Para desconectar, gire todos los controles a la posición de apagado, luego retire el enchufe del tomacorriente.
5. Al operar, asegúrese de que el cable eléctrico no esté debajo de la base, las patas o el mecanismo de movimiento para evitar dañar el cable eléctrico o el enchufe.
6. No fuerce ni estire el cable eléctrico.
7. No utilizar cables de extensión o tomas de corriente.
8. Mantener fuera del alcance de los niños. Esto no es un juguete.
9. Enchúfelo directamente a una toma de corriente compatible.
10. No modifique el enchufe ni utilice adaptadores.

## **! WARNING**

**Misuse can result in FIRE or DEATH by ELECTRICAL SHOCK**

29VDC/2A  
DewertOkin Technology Group Co., Ltd.  
PW.10.20.202

**Read all instructions before using this furnishing.**

**DANGER – To reduce the risk of electric shock**

1. Always unplug this furnishing from the electrical outlet before cleaning or servicing.

**WARNING – To reduce the risk of burns, fire, electric shock, or injury to persons:**

1. Unplug from outlet before putting on or taking off parts.
2. Never operate this furnishing if it has a damaged electrical cord or plug, if it is not working properly, or if the electrical cord or plug has been damaged or dropped into water. Stop using this furnishing and call a service center for examination and repair.
3. Keep the electrical cord and plug away from heated surfaces and other heat sources.
4. To disconnect, turn all controls to the off position, then remove plug from outlet.
5. When operating, ensure that electrical cord is not under the base, legs, or motion mechanism to avoid damage to electrical cord or plug.
6. Do not strain or stretch electrical cord.
7. Do not use extension cords or power strips.
8. Keep out of reach of children. This is not a toy.
9. Plug directly into a compatible electrical socket.
10. Do not modify the plug or use any adapters.



# Assembly Instructions

SYNE 5093-85PHR Power Reclining

SKU: 18551932/18551944

Manufactured by SYNE for Rooms To Go

## Parts and Hardware List


NO.	Description	Image	Qty
A	Body		1
<b>Red bag</b>			
B	DC adaptor		1
C	plastic legs and washer		4
D	L shape cord		1

Note: Make sure all PLUGS are connected on the product before plugging power cord into power outlet. If not damage can occur.

The USB ports (where applicable) are designed with working voltage of 5V, and can NOT be used to supply power for laptop computers (neither PC or Mac). Plugging a laptop computer to the USB port may end up damaging either the computer or the USB port due to unmatched working voltage.


### STEP 1.

1. Unzip the dust cover in the bottom, remove the legs from the red bag.
2. Attach the plastic legs by turning clockwise until tight. Do not

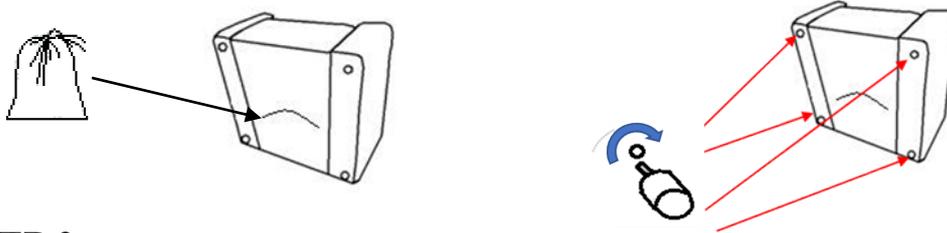

### STEP 2.

1. Slide the metal receiver over the metal post. Press both sides of back firmly downward until locked in place.
2. Locate the power cord A attached to the bottom back and connect to plug B located at the rear of seat.
3. Connect one end of the L shape cord firmly into the DC adaptor located in the lower back corner, and plug the other end of the L shape cord into a power outlet/wall socket.
4. Connect wall plug transformer to outlet.

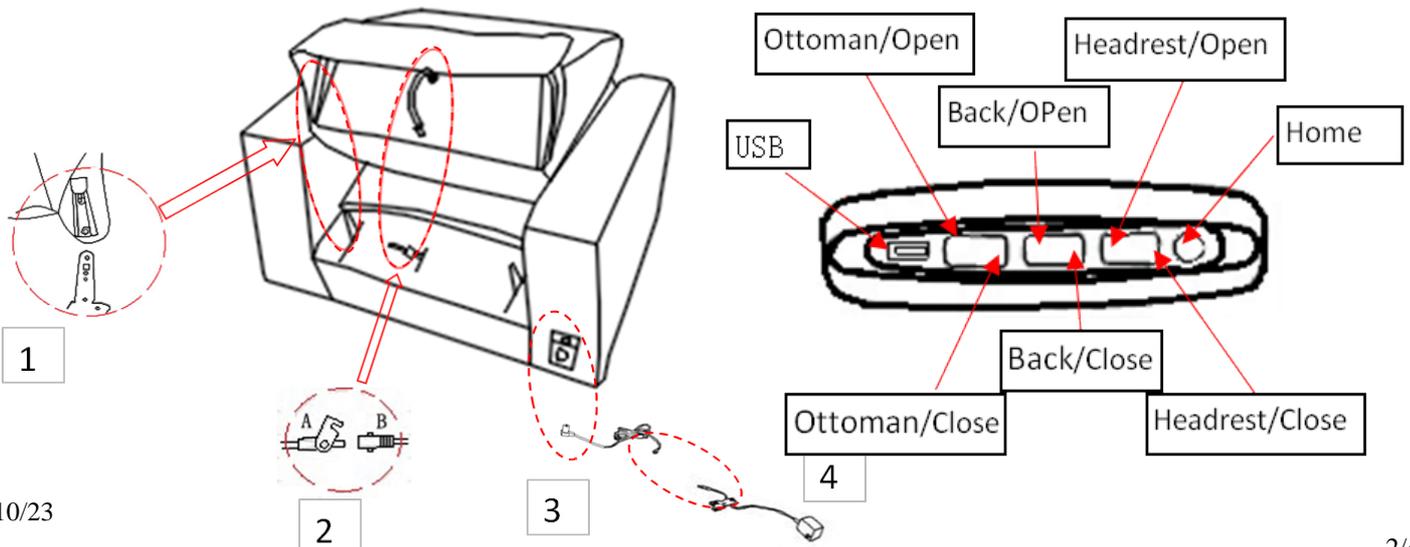



# Assembly Instructions

**SYNE**  
**SKU:**

**5093-85PHR Power Reclining**  
**18551932/18551944**


**Manufactured by SYNE for Rooms To Go**

Manufactured by SYNE for Rooms To Go

\*Keep unit at least 24" from all heat sources.

"Avoid placing unit in areas where unit can be exposed to direct sunlight other powerful light sources, as fading or discoloration may occur.


\*Maintain minimum of 12.6" space between the recliner backs and wall.

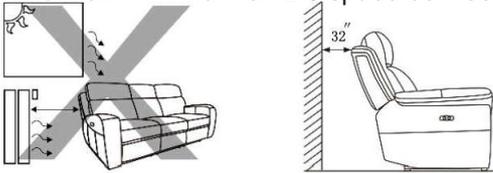

\*Do not leave when the recliner is not fully closed.

\*Do not reach under seat when mechanism is operating or serious injury may occur.


\*Reclining mechanism should only be operated while seated properly.

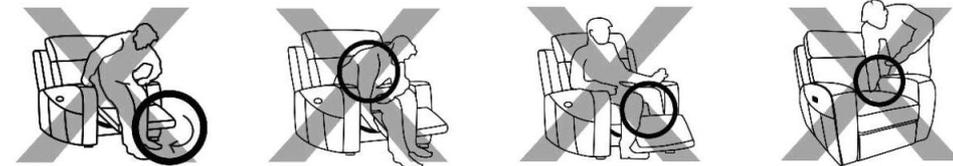


\*Do not sit on arms or backrest.

\*Do not jump or roughhouse on furniture.

\*Do not sit on the footrest when mechanism is open.

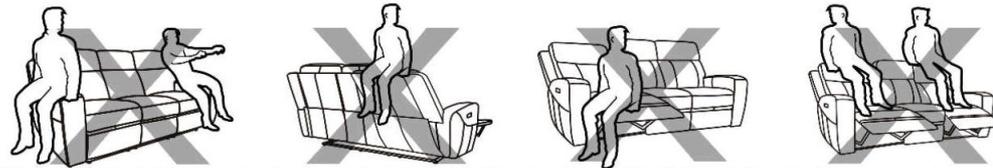

\*If unit must be moved, do not drag. Unit must be lifted in order to be moved.

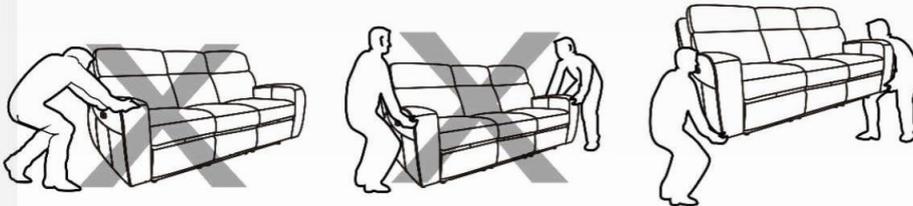

\*Do not continuously operate mechanism for more than one minute or unit may go into protection mode by shutting down to prevent overheating.

\*Unplug unit from power source prior to cleaning mechanism.

\*Do not allow electrical components to come into contact with any liquids.

PROBLEM	SOLUTION
Not Reclining	Ensure that wall power outlet is operational Step 3.4
USB not working	Check all power connections Step 3.4
Power headrest not working	Check all power connections Step 2. 3.4



# Assembly Instructions

SYNE

5093-85PHR Power Reclining

SKU:

18551932/18551944

Manufactured by SYNE for Rooms To Go

[User Guide Care And Cleaning Instructions Example](#)

## Care and Cleaning

Dust often and use a vacuum cleaner to clean seams. To maintain the fabric appearance, gently clean soiled areas with soft cloth dampened with water. Wipe with a clean, damp surface (do not rub).

**Spot Cleaning Fabric:** Blot any spills immediately; do not rub. Blot away the excess liquid with a clean, dry, white cloth; turning the cloth frequently.

**Do not** use common household cleaners, solvents, or dry cleaning fluids on fabric furniture. These cleaners may cause damage and color fading.

**Do not** use or place sharp objects on upholstered furniture.

**Do not** place furniture in direct sunlight and keep furniture at least 60cm/2 ft from heat sources to avoid fading.

- The sofa requires no special but normal maintenance, so does the padding material.
- If your sofa is with fabric filler or down feather padding, you will need to shape its cushions carefully to make them restore to their original shapes, because long way transportation will make the cushions out of shape.
- In fact, the long journey which the sofa is subjected to before reaching your home could temporarily affect the sofa's initial beauty.



Before shaping



After shaping

