 


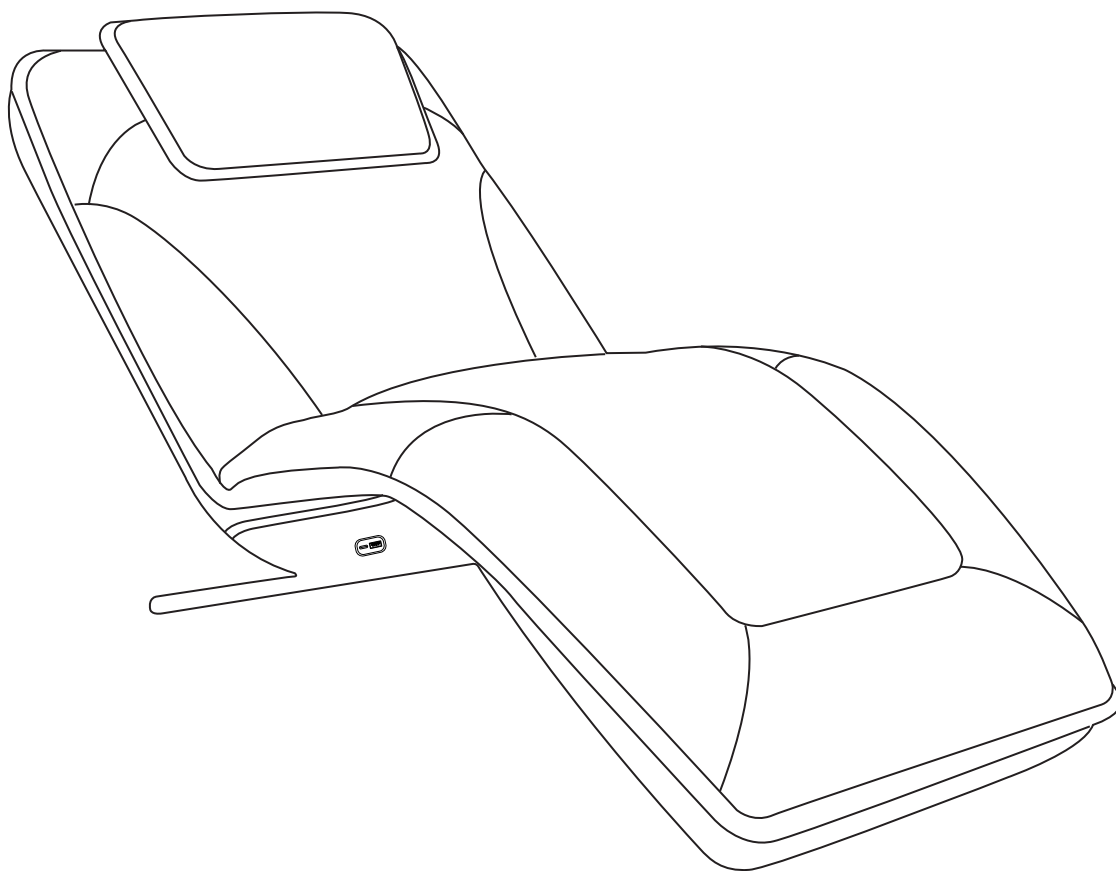

SETUP AND OPERATION GUIDE

M60011-X3PMJ CHAISE

Style No.: M60011

SKU: 18560006 / 18560018

Vendor Code: MVLC

Version 1: 05/21/2025



IMPORTANT SAFETY INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE USING.

WARNING: To reduce the risk of burns, fire, electric shock, or injury to persons:

1. DANGER: To reduce the risk of electric shock-Always unplug this furnishing from the electrical outlet before cleaning.
2. Unplug from outlet before putting on or taking off parts.
3. Close supervision is necessary when used by or near children, or disabled people.
4. Use this furnishing only for its intended use as described in these instructions.
5. Do not use attachments not recommended by the manufacturer.
6. Never operate this furnishing if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water.
7. Keep the cord away from heated surfaces.
8. Never drop or insert any object into any opening.
9. Do not use outdoors. Just for household indoor use only.
10. To disconnect, turn all controls to the off position, then remove plug from outlet.
11. Avoid placing unit in areas where unit can be exposed to direct sunlight or other powerful light sources, as fading or discoloration may occur.
12. Do not reach under seat when mechanism is operating or serious injury may occur.
13. Reclining mechanism should only be operated while seated properly.
14. If unit must be moved, do not drag. Unit must be lifted in order to be moved.


FCC INSTRUCTION

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the distance between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

SAVE THESE INSTRUCTIONS

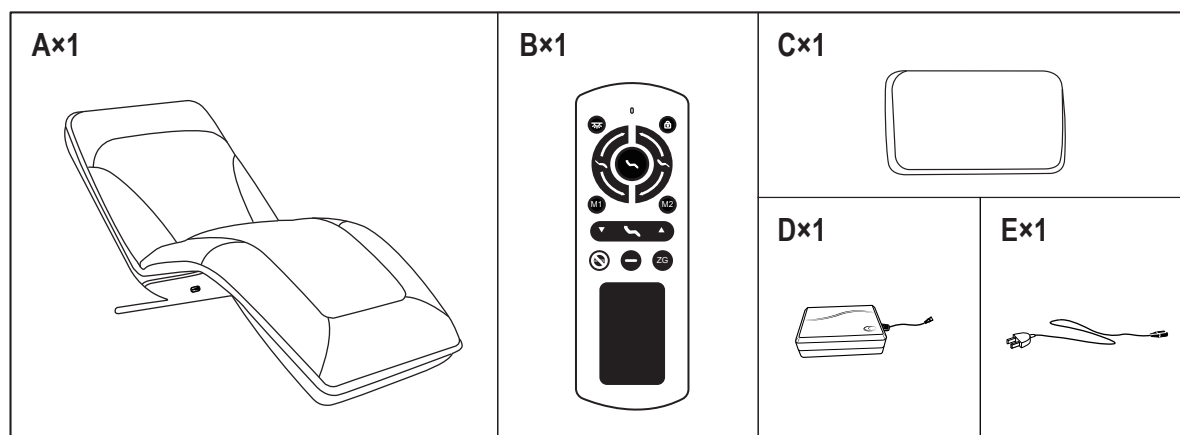


The headrest pillow is placed at the bottom of the chaise longue carton. Take it out and zip up the zipper between headrest and chaise longue. Headrest pillow can be magnetically attached to the chaise.

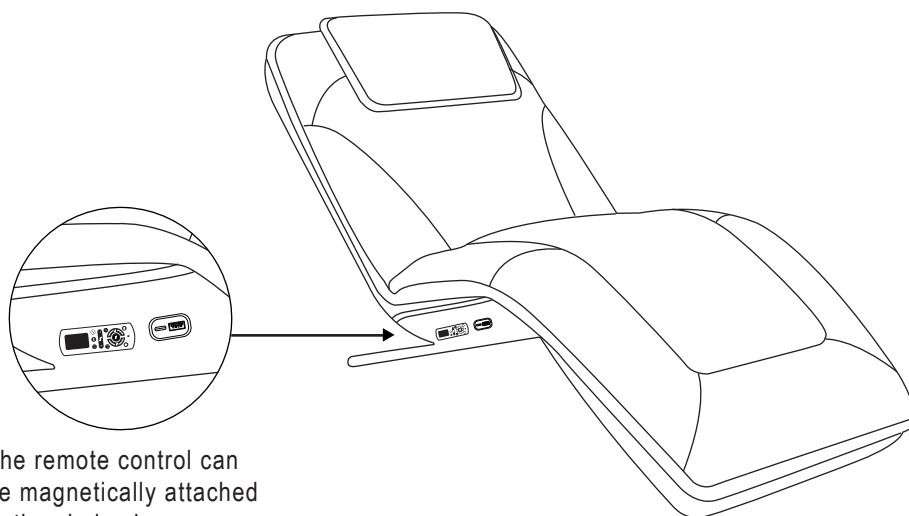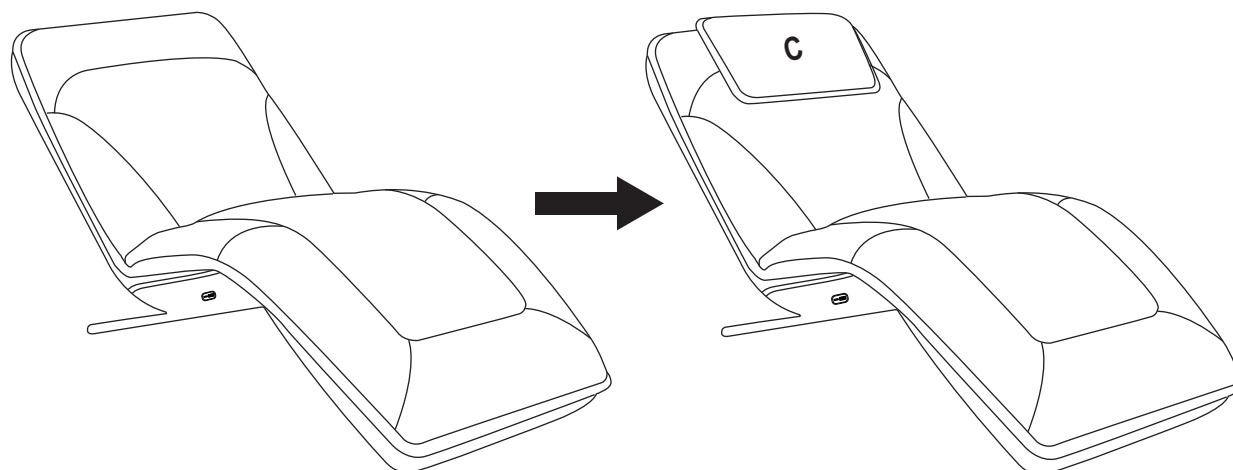


The remote control can be magnetically attached to the chaise longue.

ROOMS TO GO ► Operating Instructions for Chaise Longue

The power cord, transformer and the remote control can be found by following the red ribbon at the bottom of the chaise longue. Pull the bottom zipper to remove and set aside to be used later.

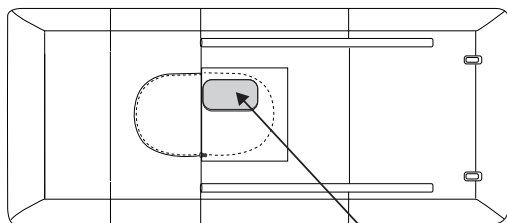

Power cord, transformer and remote control

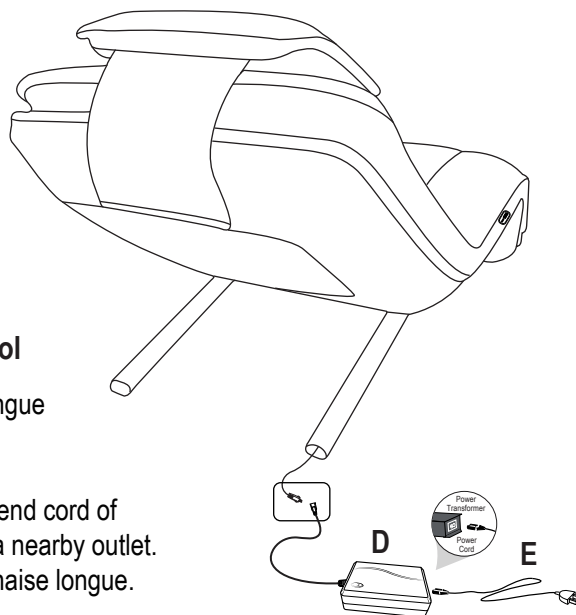

Do not plug the power cord into a power outlet until your chaise longue is fully assembled and in place.

Notes:



- 1) To help prevent shock and or damage to your product, plug the end cord of transformer into the chaise longue, then plug the transformer into a nearby outlet.
- 2) Read the operating instructions carefully before operating the chaise longue.

IMPORTANT NOTE

- Do Not plug the power cord into a power outlet until your furniture is fully assembled and in place.
- To help prevent shock and or damage to your product only plug the power cord into a grounded outlet.
- To avoid any risk of suffocation to children or pets, dispose of all plastic bags immediately.
- To ensure proper performance, occasionally check for loose screws and tighten as needed.
- Unplug unit from power source prior to cleaning mechanism.
- Do not allow electrical components to come in contact with any liquids.
- Do not continuously operate mechanism for more than one minute or you may go into protection mode by shutting down to prevent overheating.

Multimedia Control Box

The Multimedia Control Box at the bottom of the chaise longue. Pull the bottom zipper to use it.

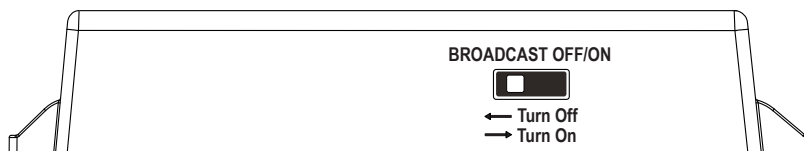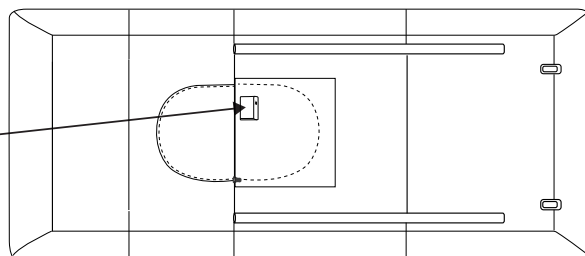

How to Connect Wireless

When using the audio system, first turn on the power of the chaise longue, then search for the wireless connection named "MOTO Audio" with your mobile phone, tap to pair, and the connection will prompt "Connected" if the connection is successful. If you want to stop pairing, turn off the wireless connection, then will prompt "Disconnected".


Using Broadcast Mode

Broadcast mode is on by default, chaise longue A will act as the signal source, and chaise longue B will sync to play the audio or video from chaise longue A. If you want to turn off the broadcast mode, Toggle the lever at the bottom of the chaise longue to turn it off, then hear the prompt "broadcast off".


ROOMS TO GO ▶ Operating Instructions for Chaise Longue

Caution: Read the important instructions below before operating your power mechanized equipment
Do not allow children to play on or operate this power mechanized equipment

Front of Remote Control

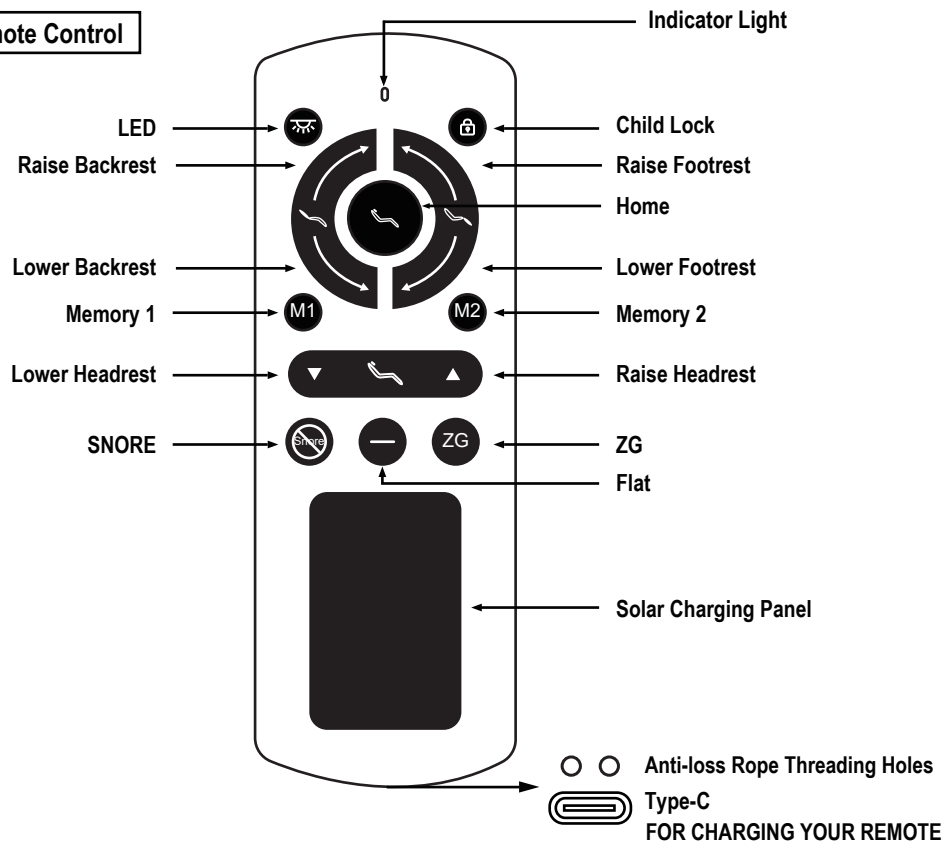

Back of Remote Control

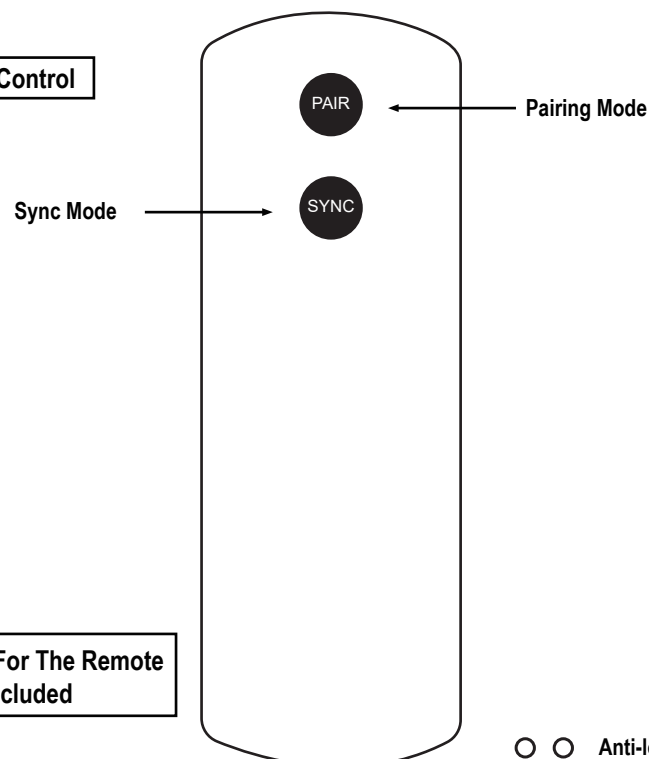

Charging Cable For The Remote
Is Not Included



Operating Instructions for Chaise Longue

HOW TO PAIR THE CHAISE WITH THE REMOTE CONTROL

First power off the chaise, then press and hold the "PAIR" button on the back of the remote control at the same time until the indicator light dims, indicating that the remote control has entered the pairing state, and then reconnect the chaise to the power, and when the indicator light brightens, it means that the chaise and the remote control are successfully paired.

HOW TO RESET THE CONTROL BOX CALIBRATION

If you have purchased a chaise longue, Firstly, reset the Control Box Calibration, press any key to raise or lower the chaise longue, then hold down both "Lower Headrest" and "Raise Headrest" simultaneously, and wait for all motors to stop working, the control box will be reset and calibrated successfully. Please note that if you have changed control box or remote control, you must reset the control box calibration. If you don't perform the above operations, the chaise longue may not be able to accurately use each function.

HOW TO ADJUST THE CHAISE LONGUE, HEADREST

Sit on the furniture, press the button of the remote control, and use it to raise or lower the Backrest/Footrest/Headrest. Press the HOME button to return to the chaise initial state, as shown in the illustration on the remote control. If you want to use the "Raise Footrest" function in the "HOME" button state, please hold the "Raise Footrest" button, and the chaise longue footrest will be first flattened and then raised.

HOW TO USE CHILD LOCK

Press and hold the Child Lock button, then all buttons will be locked when the indicator flashes. (After locking, pressing any button will make the indicator flash for about 15 seconds.) Press and hold the Child Lock button again, and the lock will be released when the indicator stays on. (After unlocking, pressing any button will make the indicator flash for about 3 seconds and then turn off.)

HOW TO USE LED

Press the "LED" button to turn on/off the lights under the chaise are shining blue.

HOW TO USE SYNC FUNCTION


If you have purchased two or more multimedia furniture, please first press the "Raise Backrest" and "Raise Footrest" buttons, operate each remote control one by one, and the synchronization will be successful when the lights are turned off and the lights flash again. After the synchronization is successful, if you want to unsynchronize, press and hold the "SYNC" button on the back of the remote control to unsynchronize it, and again press and hold to restore the sync function. After the first synchronization is complete, remote A and remote B can both control chaise longue A and chaise longue B simultaneously. When you press and hold the sync button on remote A, it changes to only control chaise longue A. At this time, remote B can still control both chaises. Then, if you press and hold the sync button on remote A again, it will be able to control both chaises again.

HOW TO USE MEMORY FUNCTION

Press and hold the LED button, then press M1 or M2 after the indicator flashes, and when the indicator light is on, indicating that the current position has been memorized. If you want to memorize the current position to the SNORE or FLAT or ZG button, Press and hold the LED button, then press SNORE or FLAT or ZG after the indicator flashes, and when the indicator light is on, indicating that the current position has been memorized. To go to a preset SNORE or FLAT or ZG position, press and hold the desired memory button SNORE or FLAT or ZG. Please note that the SNORE or FLAT or ZG buttons initially stores a default preset comfortable position set by the chaise longue. If you have changed the default preset comfortable position of SNORE or FLAT or ZG as needed, the original position will not be restored.


HOW TO CHARGE THE REMOTE CONTROL

Located at the bottom of the remote control is a "C" USB port. This is used to charge the remote control. When you press any key, the light doesn't come on, which means your remote needs to be charged, use a suitable charger or USB port to charge the remote. When you connect the power supply to the remote, the indicator will start flashing blue, which indicates that your remote is charging. When the remote is fully charged, the indicator will stop flashing but will remain solid until the power supply is removed. When the remote is completely depleted or fully charged, the estimated charging time is 3 hours. When the remote control is not in use, place it under the natural light, and the Solar Charging Panel can charge the remote control.

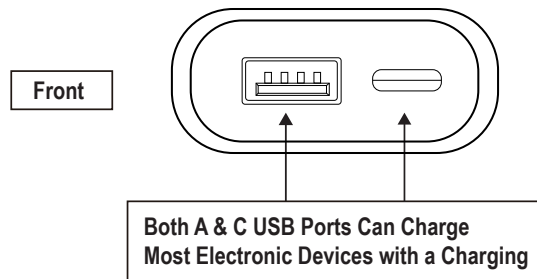

! WARNINGS

- *Keep unit at least 24" from all heat sources.
- *Do not reach under seat when mechanism is operating or serious injury may occur.
- *Reclining mechanism should only be operated while seated properly.
- *Do not sit on arms or backrest.
- *Do not jump or roughhouse on furniture.
- *If unit must be moved, do not drag. Unit must be lifted in order to be moved.
- *Do not continuously operate mechanism for more than one minute or unit may go into protection mode by shutting down to prevent overheating.
- *Unplug unit from power source prior to cleaning mechanism.
- *Do not allow electrical components to come into contact with any liquids.

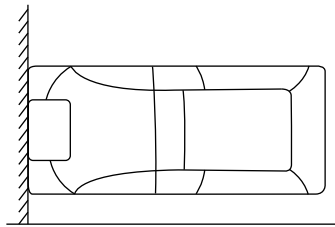

Maintain minimum of 0" space
between the furniture backs and wall.

CARE AND CLEANING

- *Upholstered furniture is packaged tightly to protect it during transit. This packaging can sometimes cause creases or misshaped cushions when the furniture comes out of the packaging. These issues will correct themselves over time as the fibers of the cushions are exposed to air. However, shaping the cushions with your hands can alleviate the creases and compressed fibers more quickly.
- *Dust often and use a vacuum cleaner to remove debris from seams and crevasses.
- *Use a soft damp cloth to gently clean soiled areas and wipe clean. Do not rub.
- *Do not use household cleaners or solvents. Such cleaners may cause damage and/or discoloration.
- *Do regularly use dedicated leather care product onto the leather furniture to prevent built up of body oils.

TROUBLESHOOTING

PROBLEM	SOLUTION
No Power	Check the power transformer connection.
No Reclining	Check if the remote control is calibrated with the control box.
The Wireless Not Working	Check if the multimedia control box is turned on. Check if the wireless connection name is "MOTO Audio".
The Remote Doesn't Work	Check if the remote control has power Check if the pairing is well



NOTE: This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device. Modifications not approved by the party responsible for compliance could void user's authority to operate the equipment.

IMPORTANT SAFETY INSTRUCTIONS



WARNING

Misuse can result in FIRE or DEATH by ELECTRICAL SHOCK

29VDC / 3.0A
ZBPOWER
ZB-H290030-G-1

Read all instructions before using this furnishing.

DANGER – To reduce the risk of electric shock:

- Always unplug this furnishing from the electrical outlet before cleaning or servicing.

WARNING – To reduce the risk of burns, fire, electric shock, or injury to persons:

- Unplug from outlet before putting on or taking off parts.
- Never operate this furnishing if it has a damaged electrical cord or plug, if it is not working properly, or if the electrical cord or plug has been damaged or dropped into water. Stop using this furnishing and call a service center for examination and repair.
- Keep the electrical cord and plug away from heated surfaces and other heat sources.
- To disconnect, turn all controls to the off position, then remove plug from outlet.
- When operating, ensure that electrical cord is not under the base, legs, or motion mechanism to avoid damage to electrical cord or plug.
- Do not strain or stretch electrical cord.
- Do not use extension cords or power strips.
- Keep out of reach of children. This is not a toy.
- Plug directly into a compatible electrical socket.
- Do not modify the plug or use any adapters.

INSTRUCCIONES DE SEGURIDAD IMPORANTES



WARNING

El mal uso puede provocar INCENDIO o MUERTE por DESCARGA ELÉCTRICA

**29VDC / 3.0A
ZBPOWER
ZB-H290030-G-1**

Leer todas las instrucciones antes de usar este mobiliario.

PELIGRO – Para reducir el riesgo de descarga eléctrica:

- Siempre desenchufe este accesorio de la toma de corriente eléctrica antes de limpiarlo o repararlo.

ADVERTENCIA: para reducir el riesgo de quemaduras, incendios, descargas eléctricas o lesiones a personas:

- Desenchufe del tomacorriente antes de colocar o quitar partes.
- Nunca opere este accesorio si tiene un cable o enchufe eléctrico dañado, si no funciona correctamente, o si el cable o el enchufe eléctrico se ha dañado o se ha caído al agua. Deje de usar este equipamiento y llame a un centro de servicio para que lo examinen y lo reparen.
- Mantenga el cable eléctrico y el enchufe lejos de superficies calientes y otras fuentes de calor.
- Para desconectar, gire todos los controles a la posición de apagado, luego retire el enchufe del tomacorriente.
- Al operar, asegúrese de que el cable eléctrico no esté debajo de la base, las patas o el mecanismo de movimiento para evitar dañar el cable eléctrico o el enchufe.
- No fuerce ni estire el cable eléctrico.
- No utilizar cables de extensión o tomas de corriente.
- Mantener fuera del alcance de los niños. Esto no es un juguete
- Enchúfelo directamente a una toma de corriente compatible.
- No modifique el enchufe ni utilice adaptadores.

Manufactured for Rooms To Go by MVLC