 



Assembly Instructions

 ARVI-18 Side Table

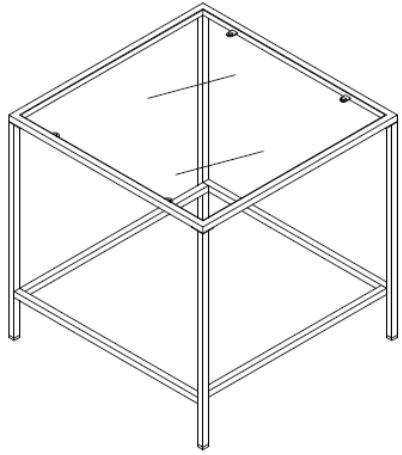 


 

 
 
 

 
 

PLEASE NOTE: Check that you have received all components and hardware before assembling. If you are missing any parts, contact your retailer.

1

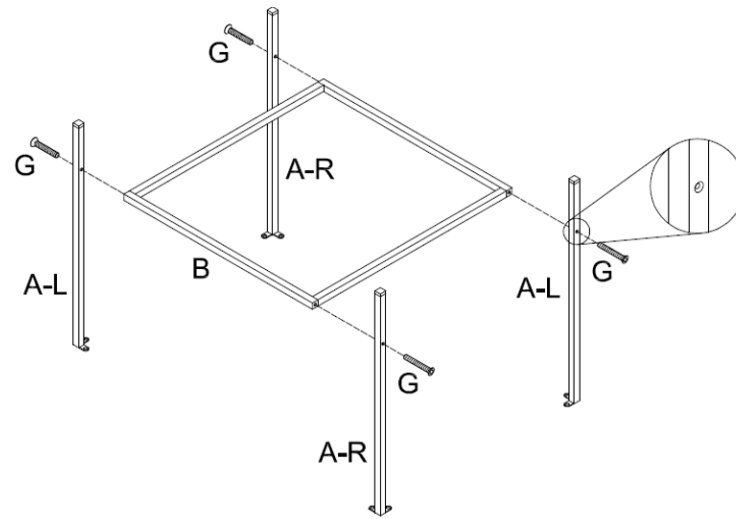

&

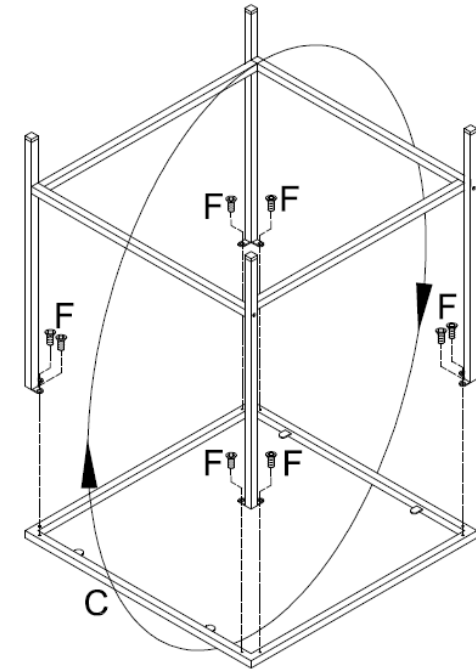


- | | | | |
|---|---|---|--|
|  |  |  |  |
| A-L (2 pcs) | A-R (2 pcs) | B (1 pc) | C (1 pc) |
|  |  |  |  |
| D (1 pc) | E (6 pcs) | F (8 pcs)
M6 x 10mm | G (4 pcs)
M6 x 25mm |
| | | |  |
| | | | H (1 pc) |

During assembly, hand tighten screws only. When all screws are in place, then tighten completely.



Assembly Instructions

ARVI-18 Side Table

 PLEASE NOTE: Check that you have received all components and hardware before assembling. If you are missing any parts, contact your retailer.

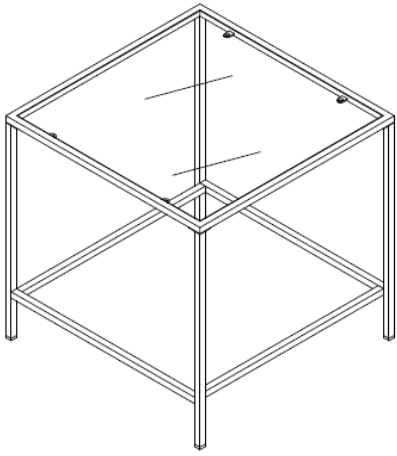


3

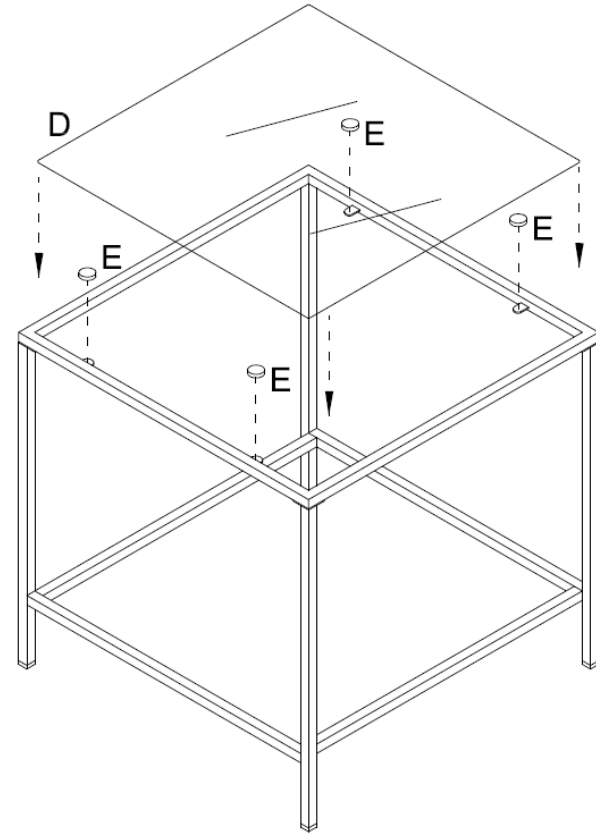  


A-L (2 pcs)



 
A-R (2 pcs)

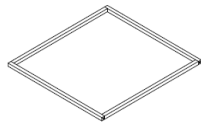

B (1 pc)

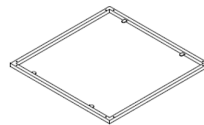 

C (1 pc)

 


D (1 pc)



E (6 pcs)



 F (8 pcs)
M6 x 10mm



G (4 pcs)
M6 x 25mm



H (1 pc)

During assembly, hand tighten screws only. When all screws are in place, then tighten completely.