

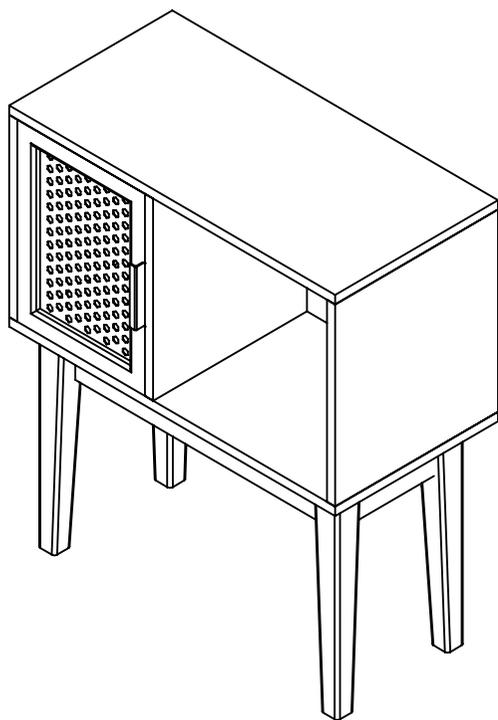


ASSEMBLY INSTRUCTION


PART LIST

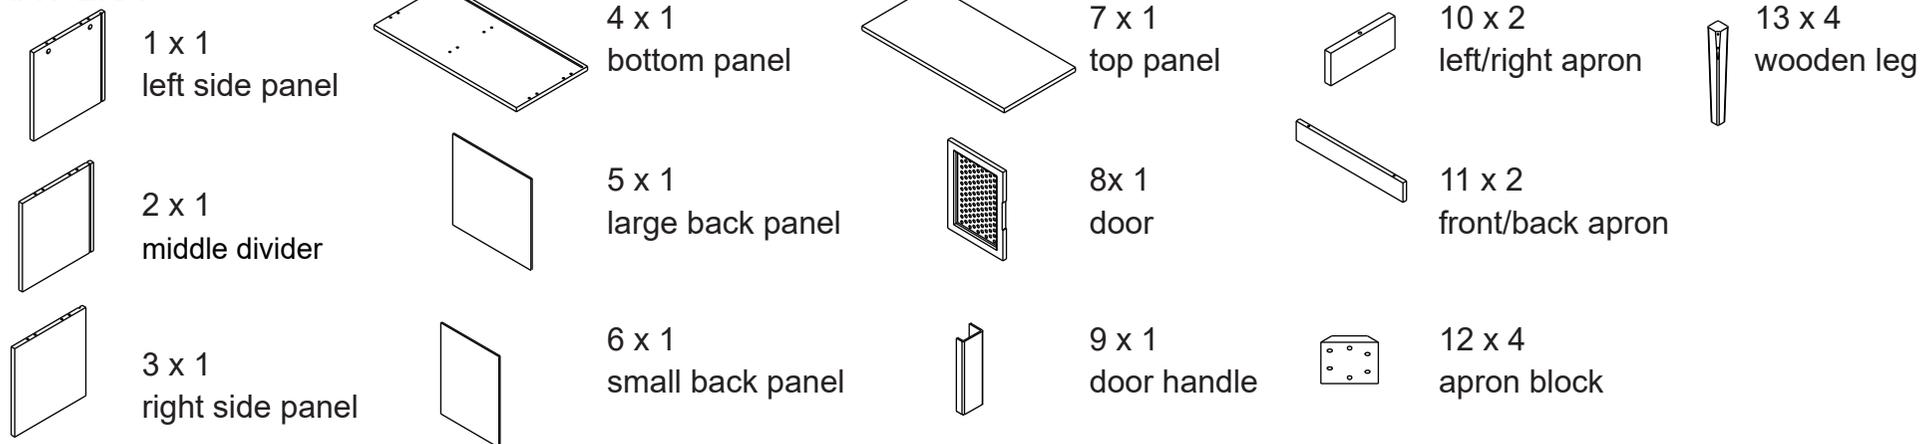

HARDWARE LIST

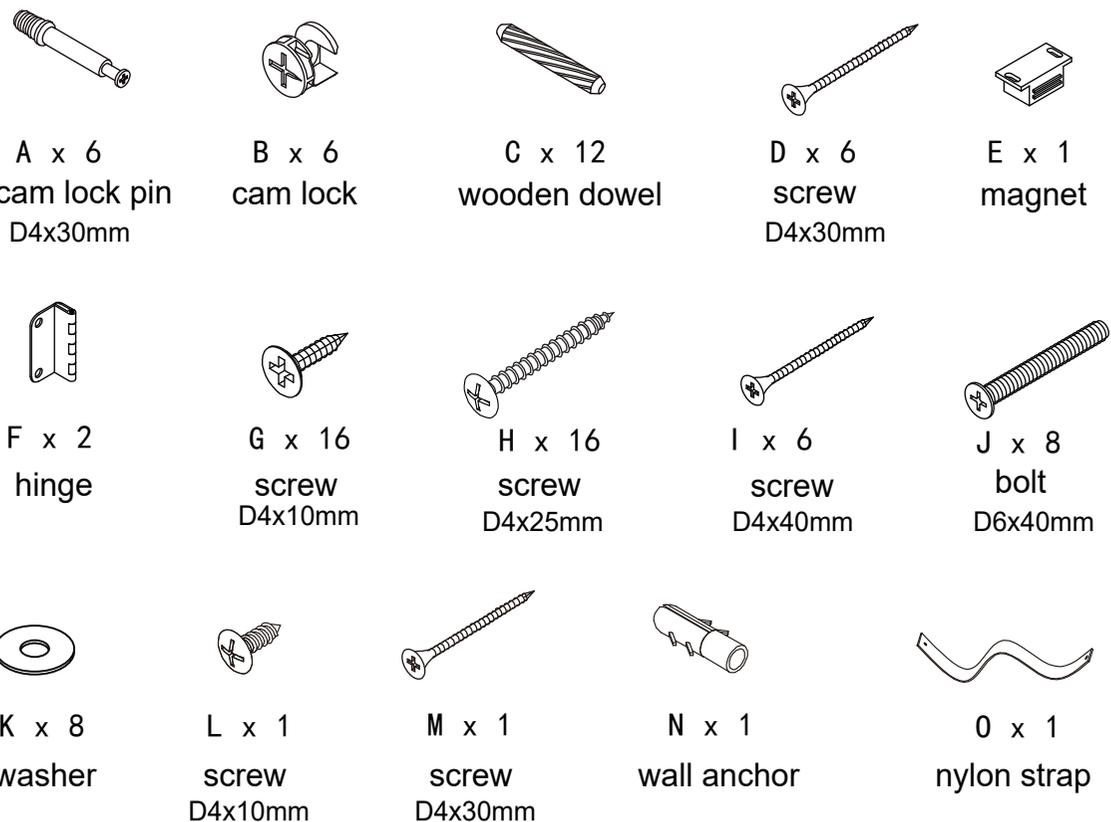


01

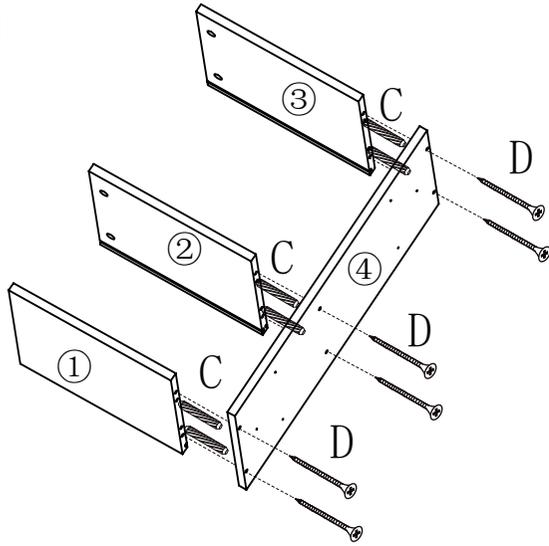


Fix bottom panel (4) to left/middle/right panel (1,2,3,)with screw (D) and wooden dowel (C).

02

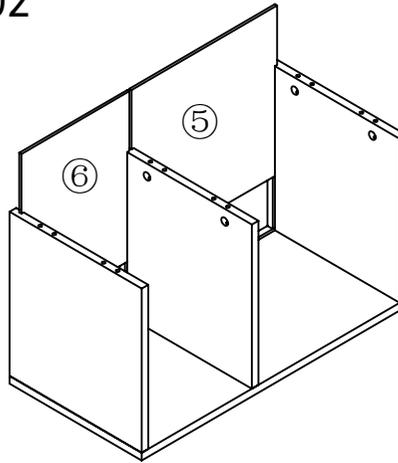


Put in the large back panel (5) and the small back panel (6).

03

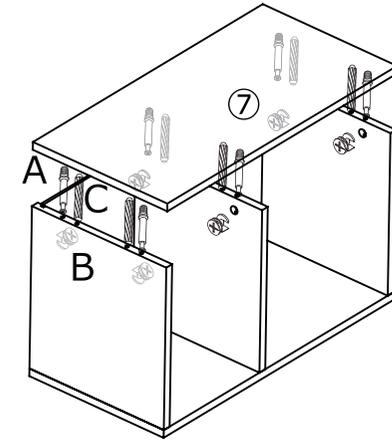


Lock top panel (7) on assembled part "Step 02" with cam lock pin/cam lock /wooden dowel (A,B,C) as shown.

04

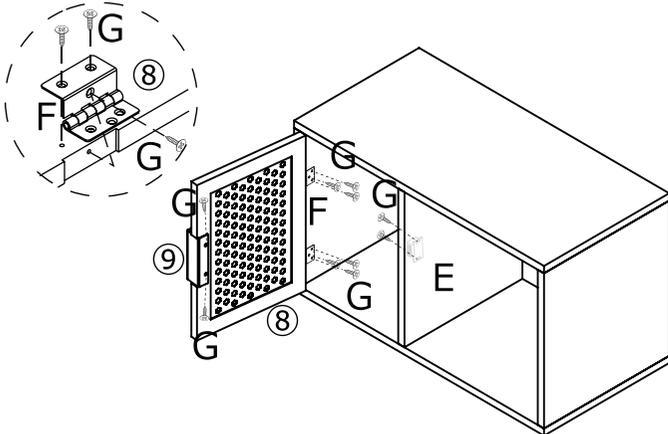


Use screw (G) to fix door (8) with hinge (F),and fix door handle (9) and magnet (E) with screw (G).

05

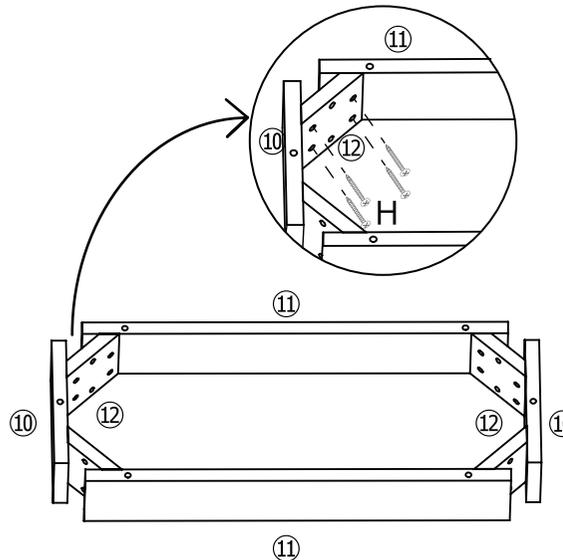



Lock apron block (12) on left/right apron (10) and front/back apron (11) with 4 screws (H), repeat four times.

06

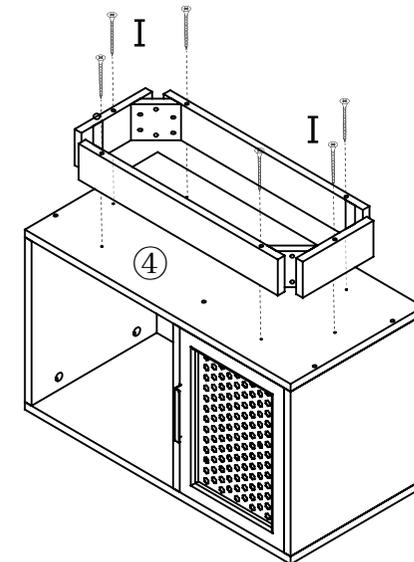


Use 6 screws (I) to lock assembled part "step 5" on the bottom panel (4) as shown.

06

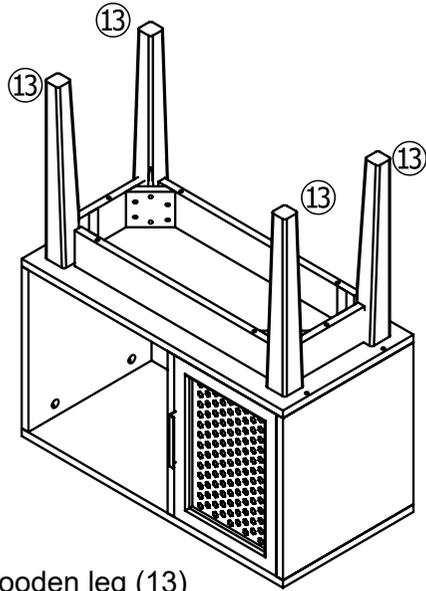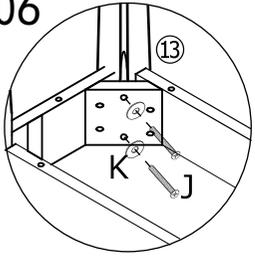


Use 2 screws (J) to lock the wooden leg (13) on the part of "step 5" through washer (K), repeat four times.

08

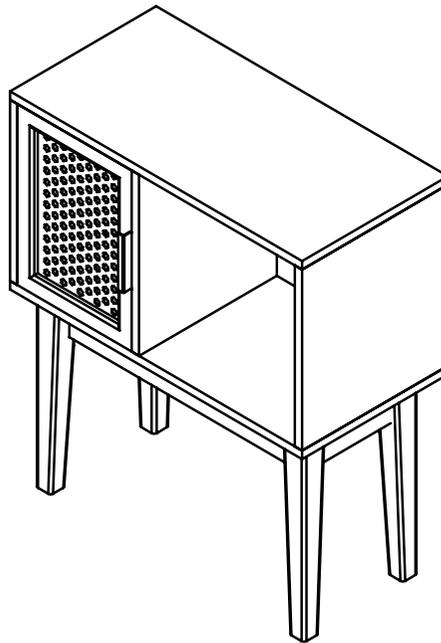

07

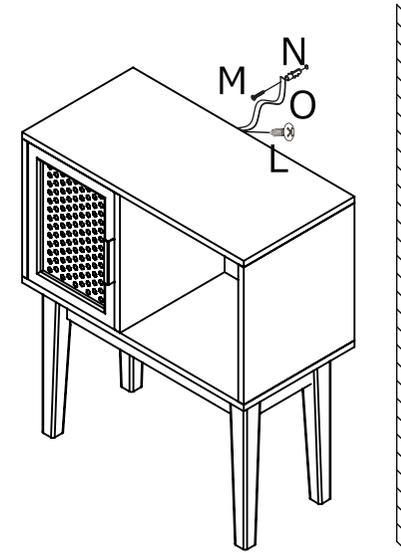

Lock nylon strap (O) on top panel (7) with a screw (L). Make a hole in the right position on the wall, put wall anchor (N) into the hole, and lock nylon strap (O) on wall anchor (N) with a screw (M), as shown in the figure.

Finish assembly.