 
 


Assembly Instructions

 
908018 TV CONSOLE CINNAMON

**Product Issues? Please Call Us Before Contacting Your Retailer At 1-800-549-3300.
Email customerservice@mshome.co, visit www.mshome.co
We can help with Assembly Issues, Part Requests, Damages, & All Other Product
Related Questions**

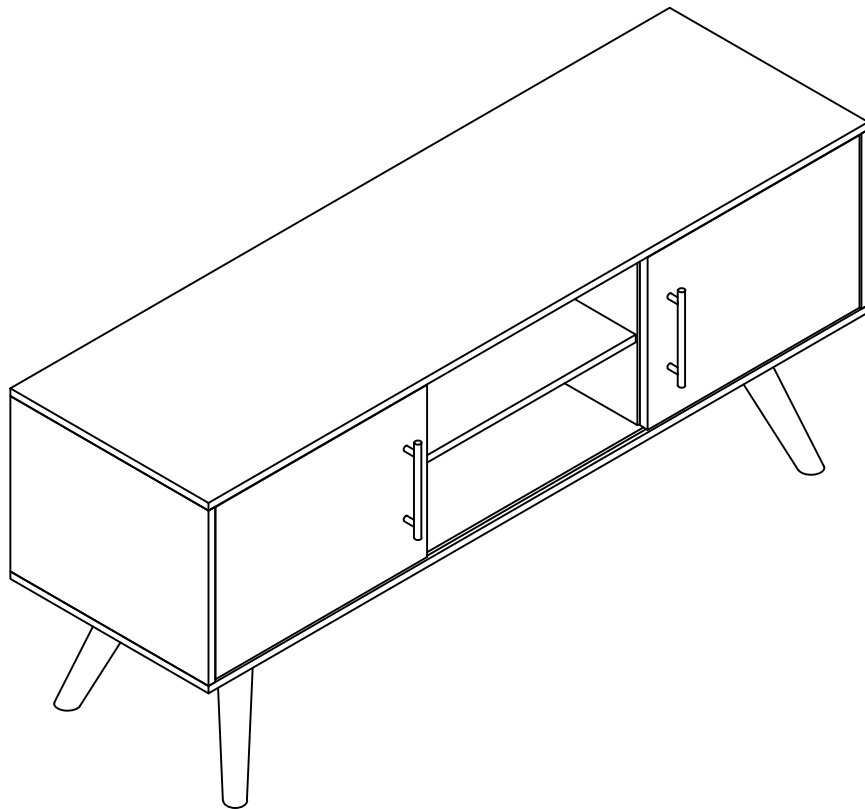


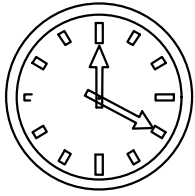

20 min

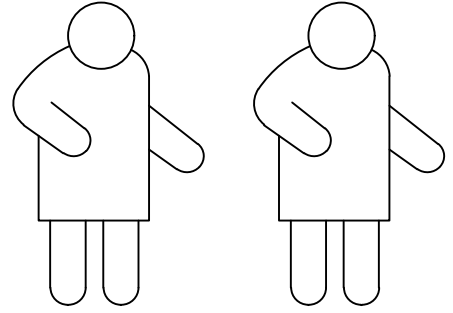



Two People Required

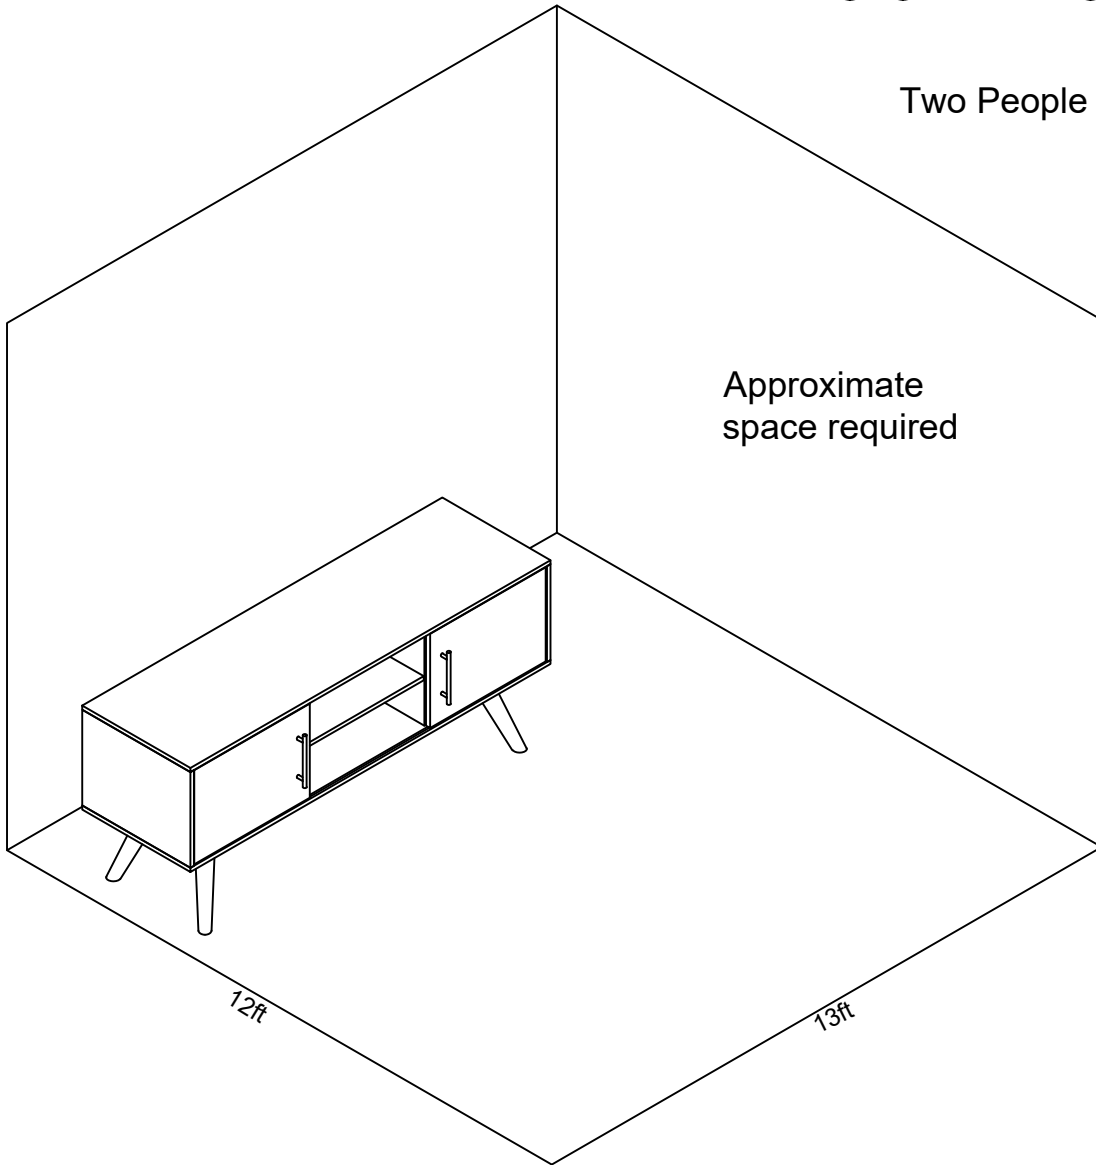 

Approximate
space required

12ft

   
13ft




 
 

Phillips Head





PARTS INCLUDED

- (C1) TV Console Body x 1
- (C2) Legs x 4
- (C3) Left Door x 1
- (C4) Right Door x 1

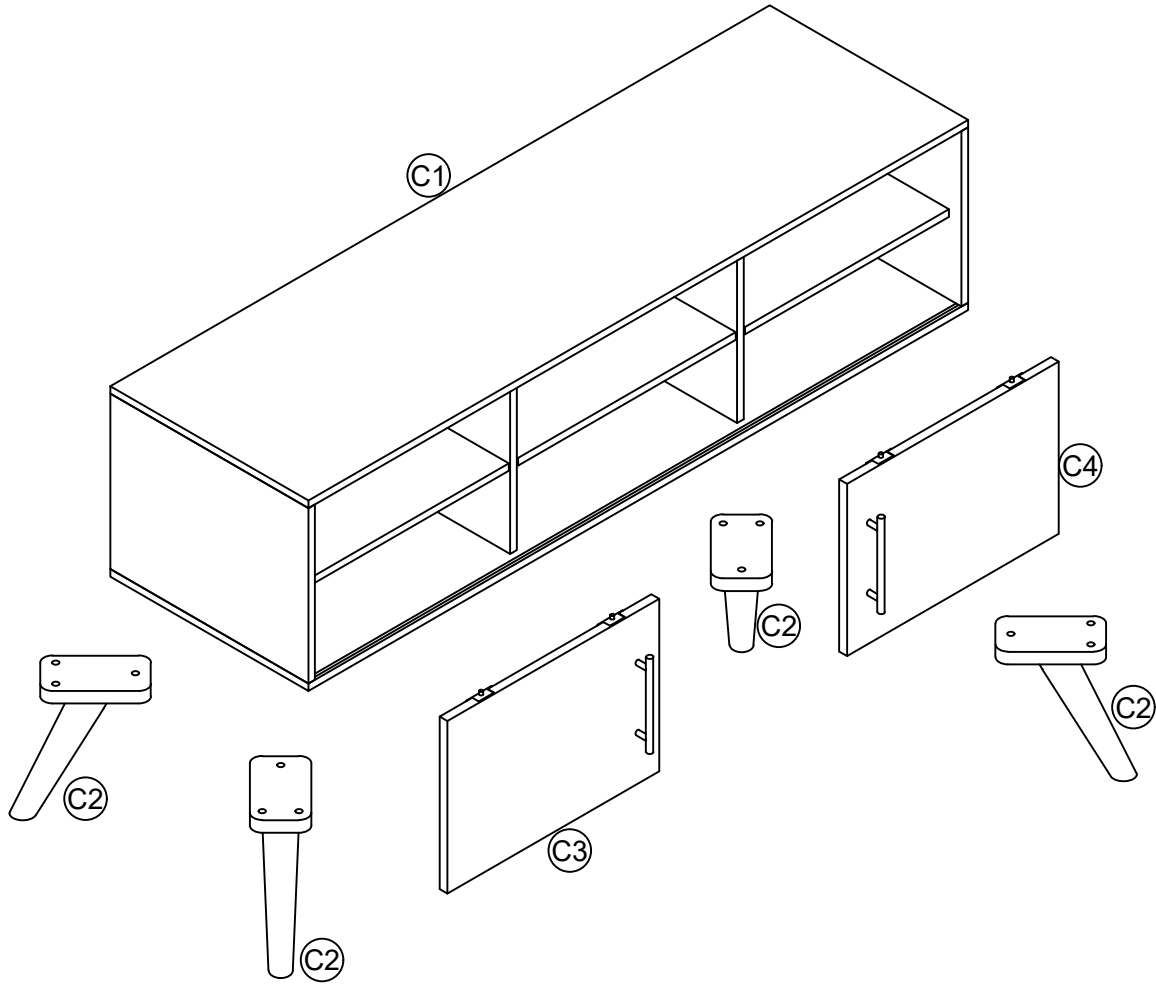

Hardware Pack


<p>A</p>  <p>Ø8x32 (mm) : 12pcs</p>	<p>B</p>  <p>1pc</p>	<p>C</p>  <p>2pcs</p>	<p>D</p>  <p>4pcs</p>
--	---	---	--

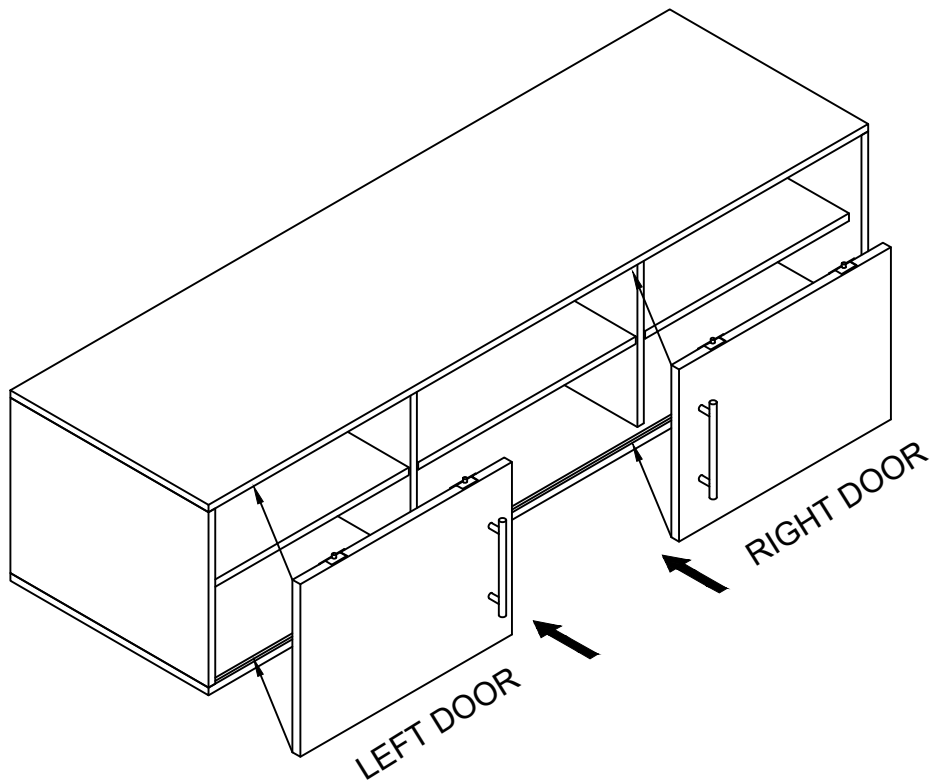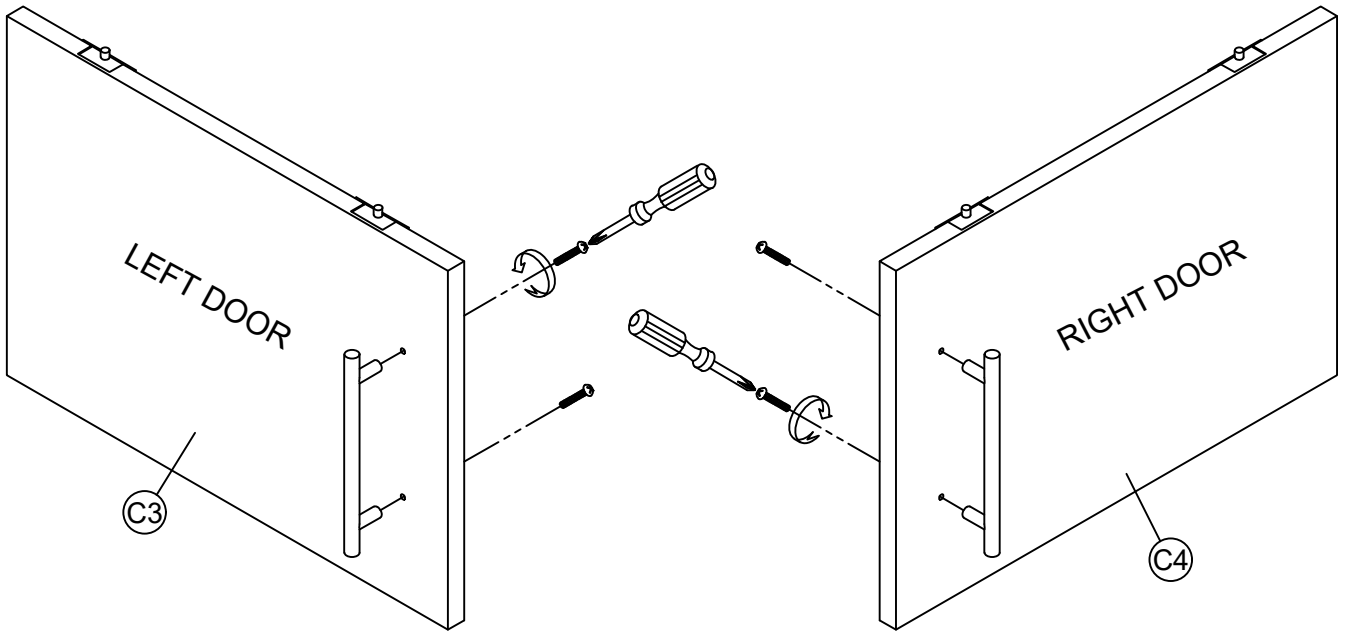    


1. Put the door (C3 & C4) into the groove on the tv console.
2. Press the two buttons above to assemble

3

 A x 12



B x 1

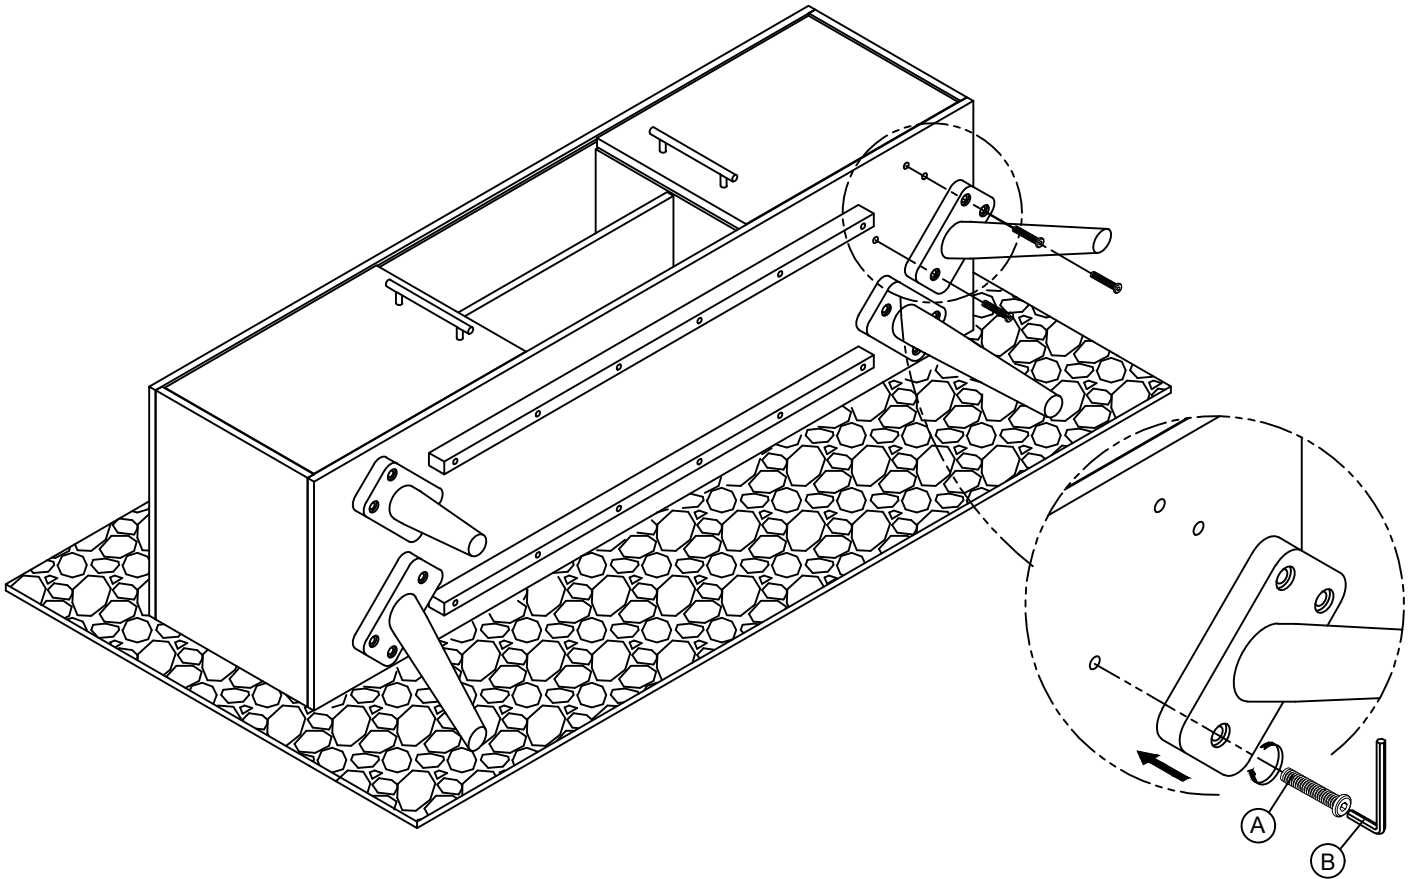 

4

