# W60KEN4D Assembly Instructions





 
Walker Please visit our website for the most current instructions, assembly tips, report damage, Edison or request parts. www.walkeredison.com

Revised 06/2020


Copyright © 2018, by Walker Edison Furniture Co., LLC. All rights reserved.


### **General Assembly Guidelines**

- I. Ensure that all parts and hardware are available before beginning assembly.
- II. Follow each step carefully to ensure the proper assembly of this product.
- III. Two people are recommended for ease in the assembly of this product.
- IV. The three main types of hardware used to assemble this product are: wood dowels, screws and bolts.
- V. A Phillips head screwdriver is required for the assembly of this product.



 VI. Power tools should not be used to assemble this product.



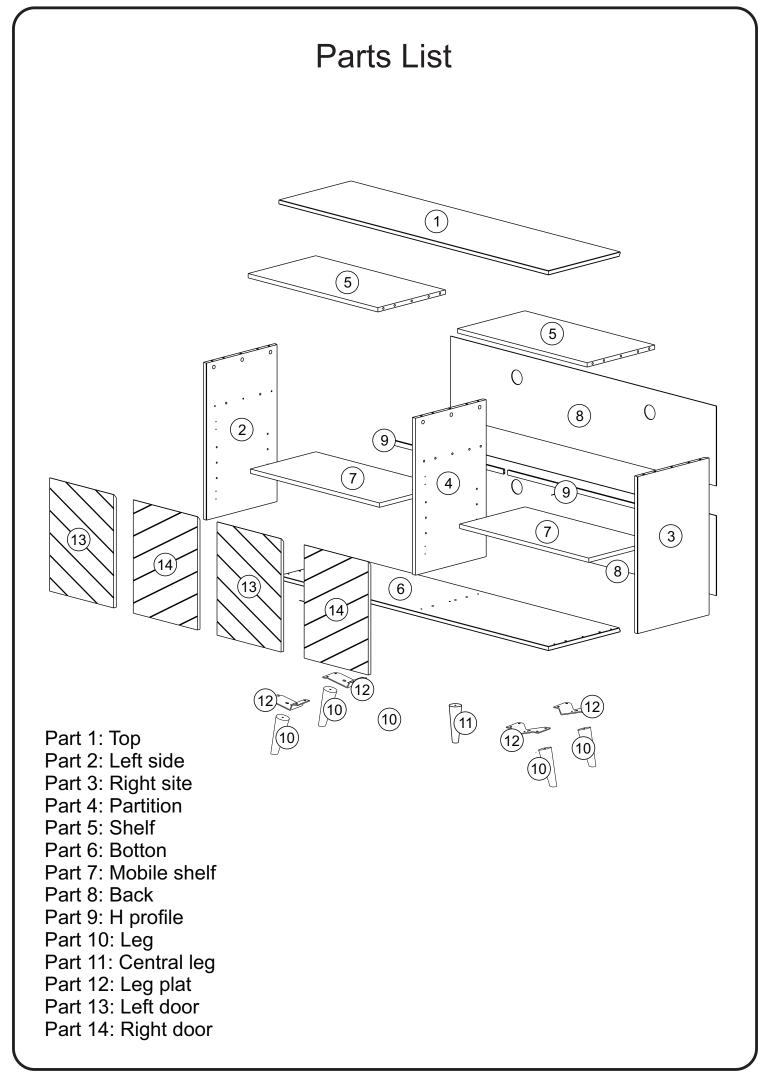

## **Hardware List**

Α		Ø7x50 mm	Bolt	04 pcs
В		Ø7x50 mm	Bolt	01 pcs
С	<b>40000(</b> \frac{1}{2})	Ø3,5x14 mm	Screw	32 pcs
D	4	Ø3,5x16 mm	Screw	20 pcs
Ε	€	Ø4x45 mm	Screw	09 pcs
F		Ø8x30 mm	Wood dowel	16 pcs
G		Ø8x50 mm	wood dowel	02 pcs
Н			Minifix Screw	15 pcs
I			Minifix Cam Lock	21 pcs
J			Minifix double stem	03 pcs
K			Hinge Soft Close	08 pcs
L			Hex key	01 pc
M			Shelf Support	08 pcs
N	Wall Anchor		Wall Anchor	01 pc
0	<──────────	10x10	Nail	31 pcs

 



Philips head screwdriver required for assembly (not included)

The hardware quantities listed above are required for proper assembly.


Some extra hardware may also have been included.





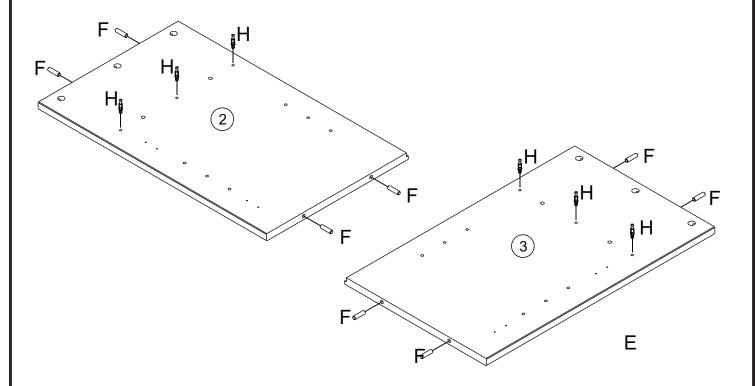


Insert wood dowels (F) into parts (2,3).

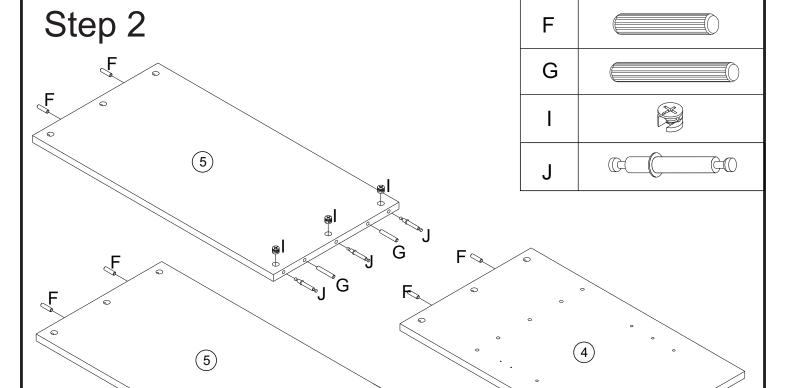


Insert wood dowels (F) into parts (5,4).

Insert wood dowels (G) to part (5) and attach minifix double stem (J) using minifix cam look(I)

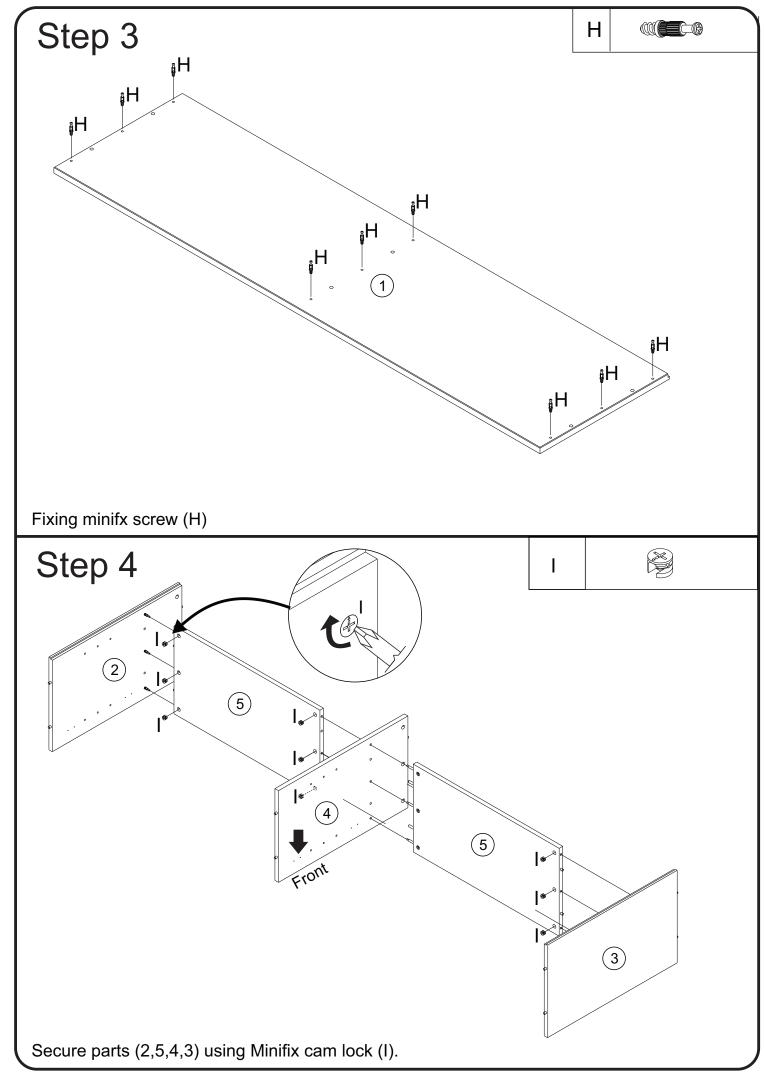


# Step 05

B 16 mm

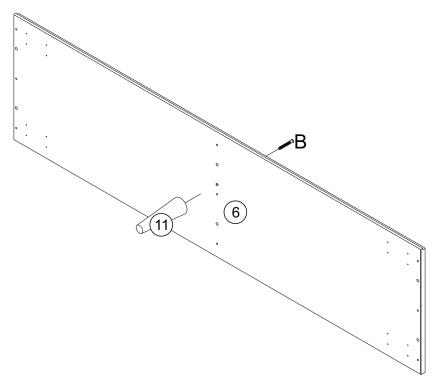


Fixing part (16) to part (7) an attach using bolt (B) and hex key (L).

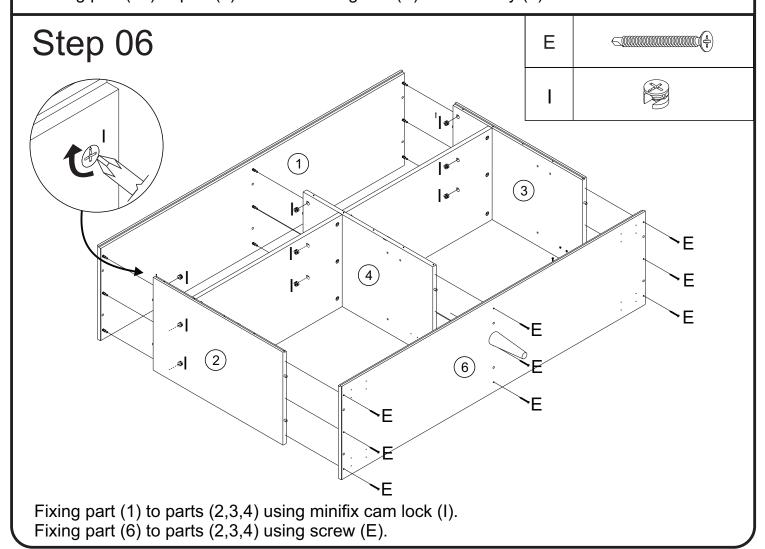



# Step 07 A SOMM D 16 mm K


Fixing the shelf support (L)
Connect part (10) to part (12) using bolt (A) hex key (L) and Screw (D)


(10)

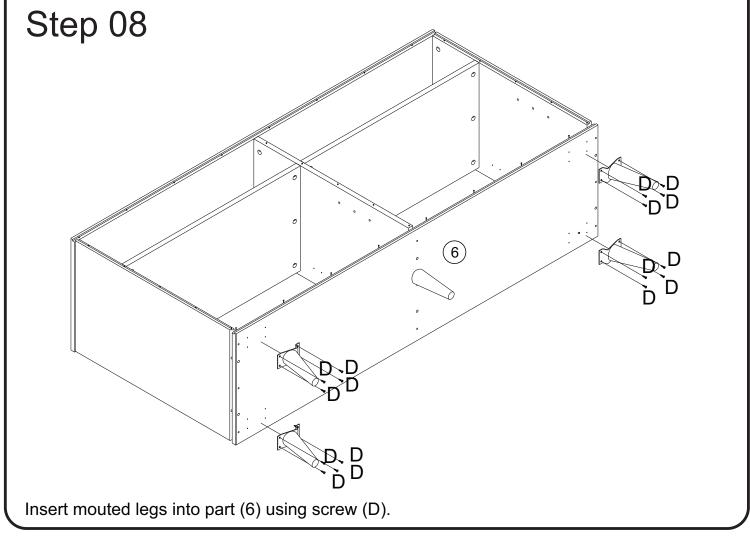

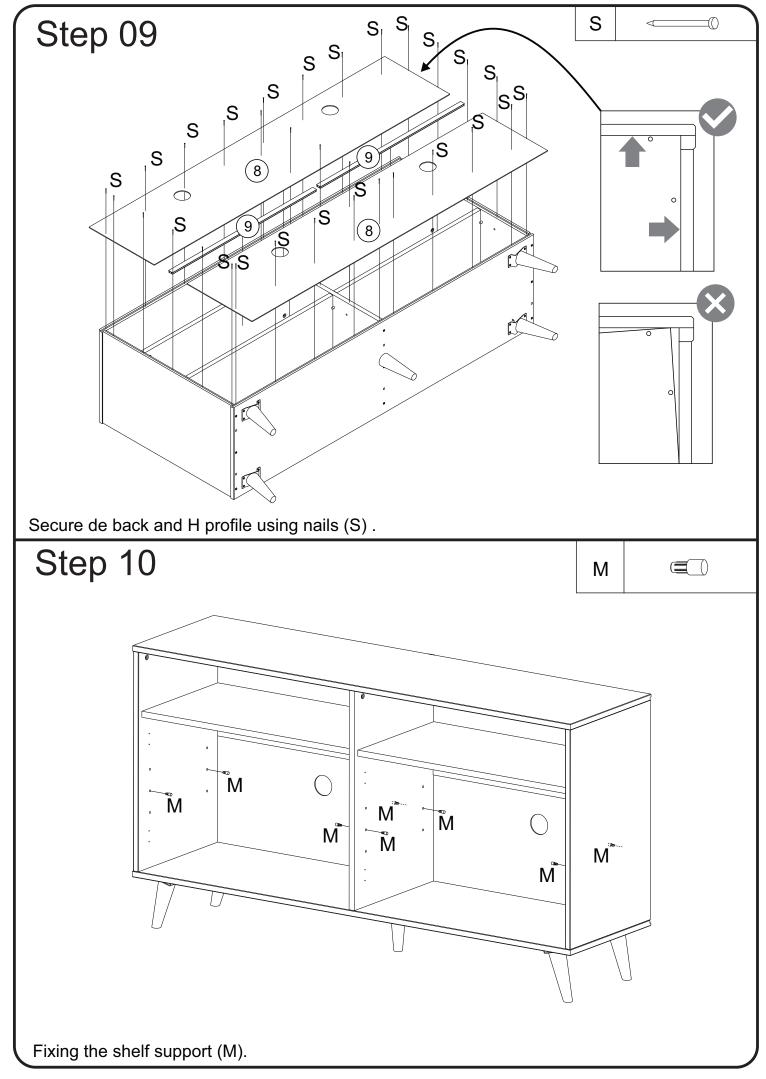

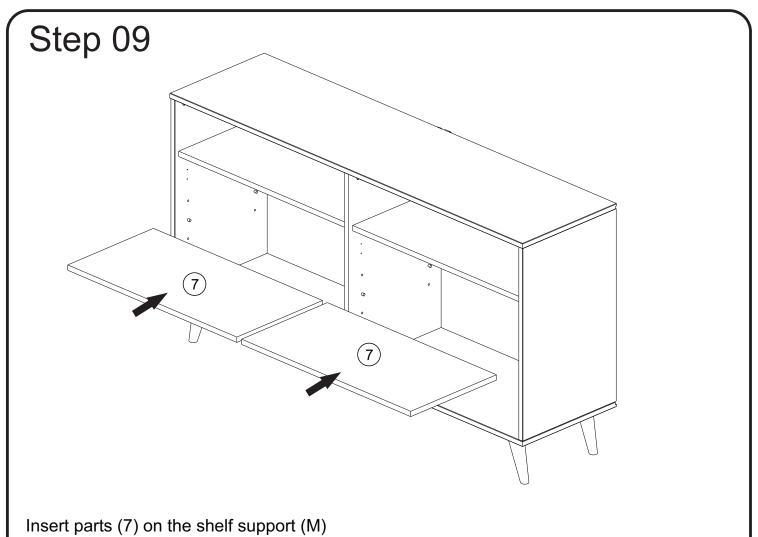

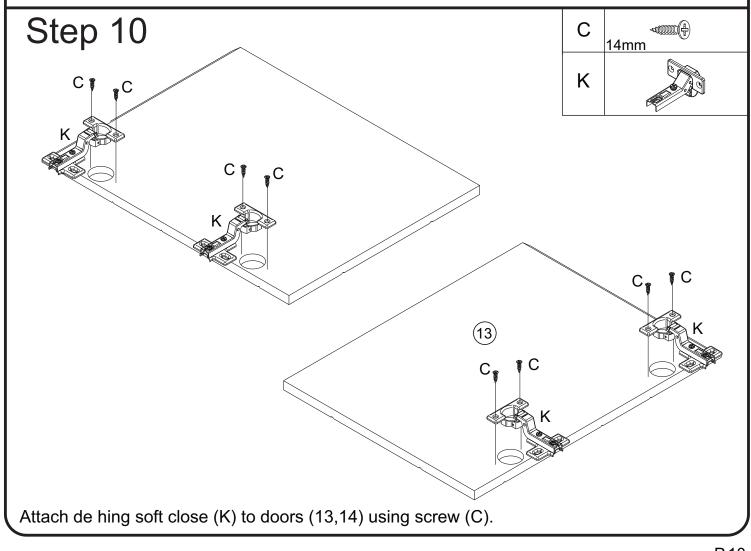

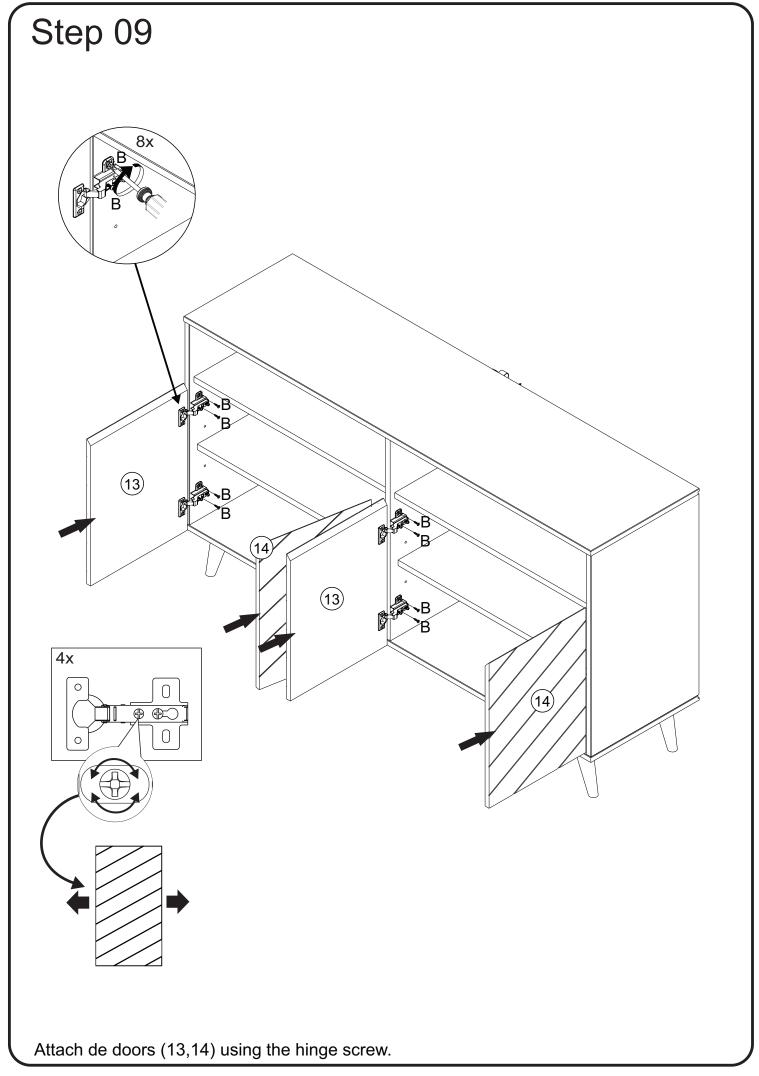

### **WARNING**

Seriou or fatal injuries can occur form furniture tipping over. To prevent the furniture from tipping over we recommend that it is permanently fixed to the wall.

Wall anchor and hadware are included with this product. please make sure hardware is suitable for your walls before installing, as diffrent wall materials may require diffrent types of anchors.

