
TV STAND

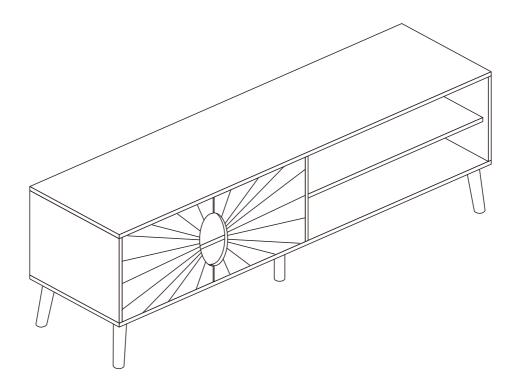


ASSEMBLY INSTRUCTION

HARDWARE LIST

A 10 PCS		B 10 PCS	C 16 PCS		D 6 PCS	Approximation of the second	E 1 PC	
F 4 PCS		G 4 PCS	H 4 PCS		I 24 PCS	A Managar	J 4 PCS	
K 20 PCS	R COULD	L 8 PCS	M 2 PCS	Apply	N 1 PC	(James)		

PARTS LIST

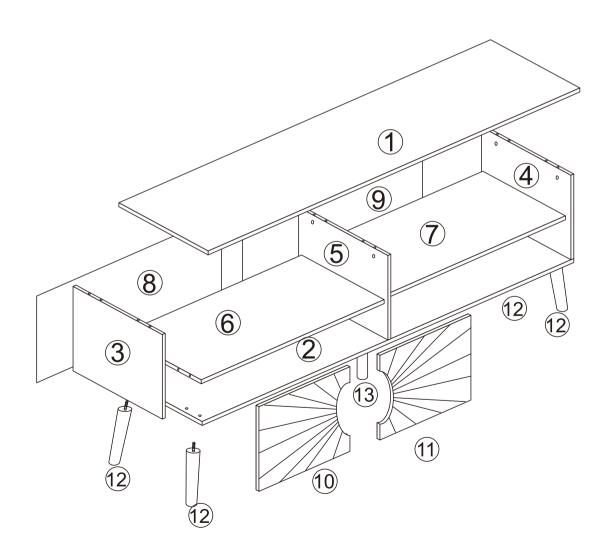


STEP 1.

Fix hardware (E) to part 1 using screws (M), as shown.






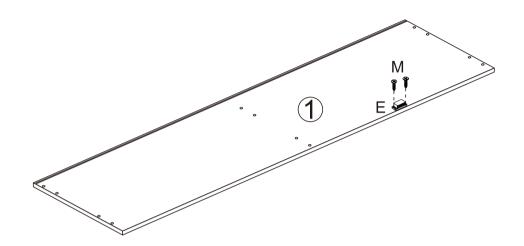

STEP 2.


Fix Hinges (H) to doors 10 and 11 using screws (I), as show.



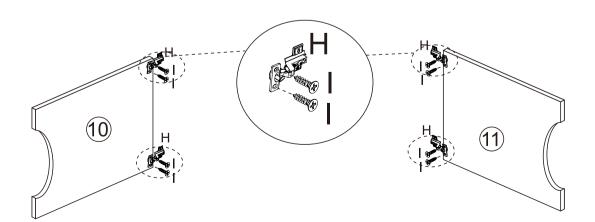

STEP 3.

Insert quickfit screws (A) and wooden dowels (C) into part . Insert cam locks (B) into part 6. Fit part 3 and part 6, as shown. Turn cam lock clockwise to tighten.

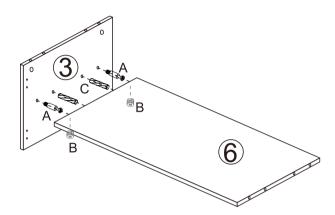








STEP 4.

Insert quickfit screws (A) and wooden dowels (C) into part . Insert cam locks (B) into part 6. Fit part 5 and part 6, as shown. Turn cam lock clockwise to tighten.

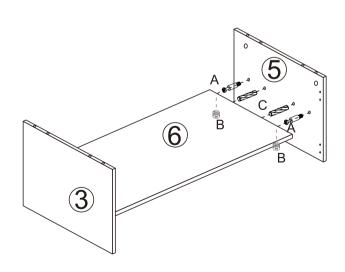









STEP 5.

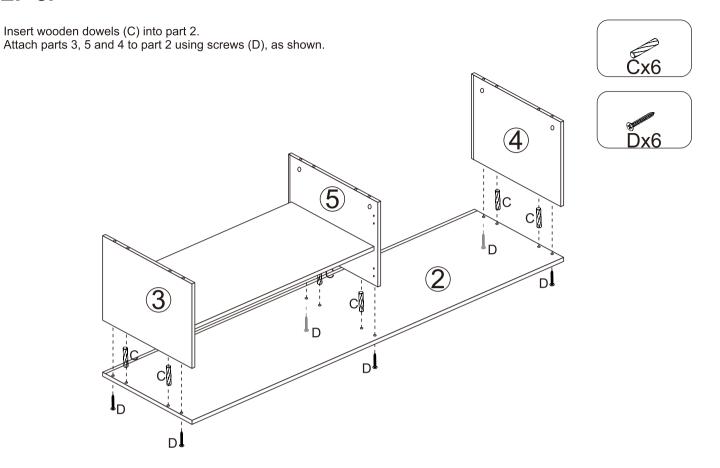


STEP 6.

Silde parts 8 and 9 into grooves between parts 3, 5 and 4, as shown.

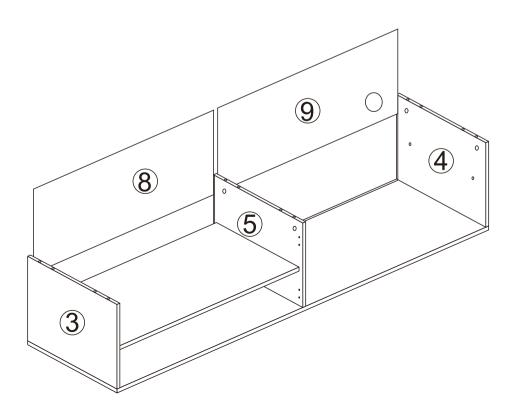



STEP 7.

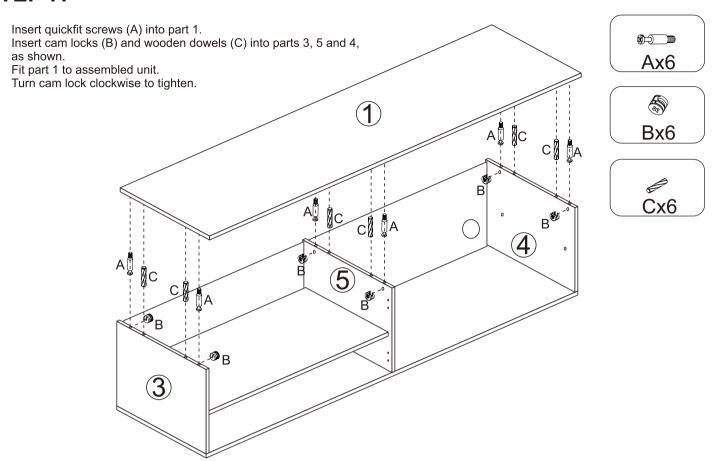

STEP 8.

 Fix hardwares (J) to part 2 using screws (K), as shown. Fix corner brackets (L) to parts 8 and 9 using screws (I), as shown.

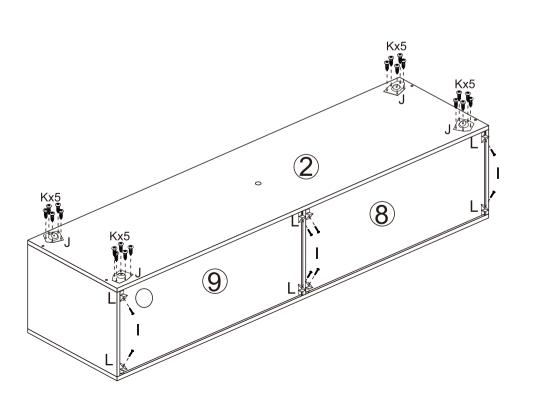










STEP 9.

Turn the legs 12 and 13 clockwise to tighten, as shown.


Insert Foot nail (N) to leg 13, and attach pads (F) to legs 12, as shown.

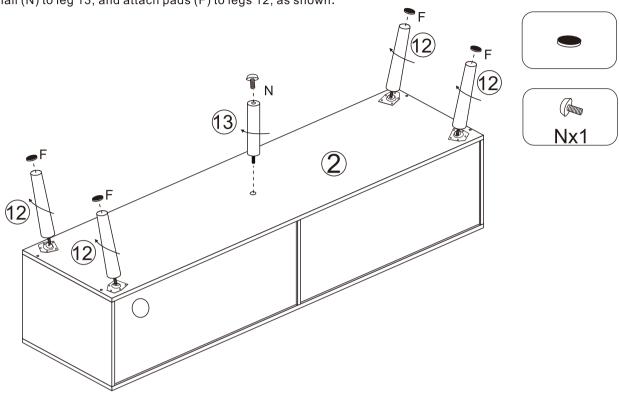

STEP 10.

Fix doors 10 and 11 to assembled unit using hinges with screws (I), as shown.




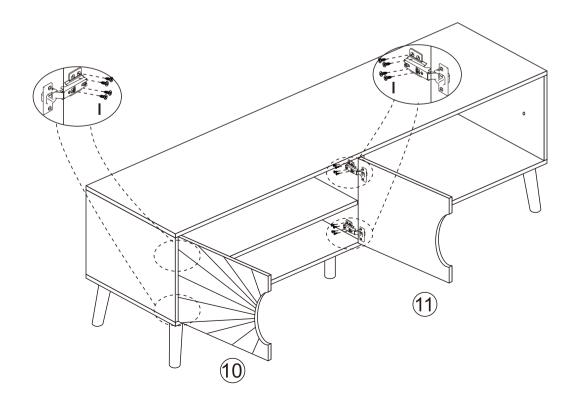

STEP 11.

Fit shelf supports (G) into desired position in the assembled unit, as shown.



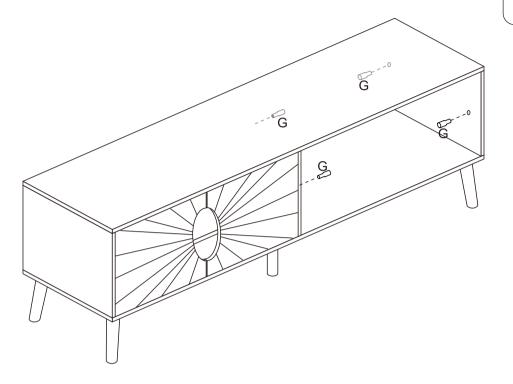

STEP 12.

Place shelf 7 on top of shelf supports, as shown.

