 


# ASSEMBLY INSTRUCTION


 


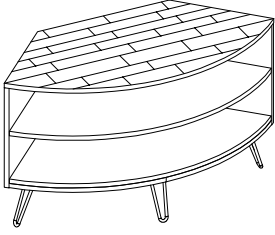




 
 



## #6 672MS - CORNER TV

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts, which may have come loose inside carton during shipment. Identify and count all parts and compare with the parts list below.

 


### ASSEMBLY INSTRUCTION :

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior start of assembly.
3. Please follow attached instruction in the same sequence as numbered to assure fast and easy assembly
4. Hand fasten all bolts before tightened with Allen wrench

No.	COMPONENT		Q'ty	No.	COMPONENT		Q'ty	No.	HARDWARE LIST		Q'ty
Ⓐ		Top	1	Ⓔ		Beside ( L )	1	①		Allen key k4	1
Ⓑ		Shelf plate	1	Ⓕ		Beside ( R )	1	②		Bolt M6x25	12
Ⓒ		Bottom plate	1	Ⓖ		Legs	3	③		Bolt M6x15	13
Ⓓ		Back plate	1	Ⓗ		Legs	2	④		Spring washers	13
								⑤		Flat washers	13
								⑥		Screws M3.5x15	3


### Step 1

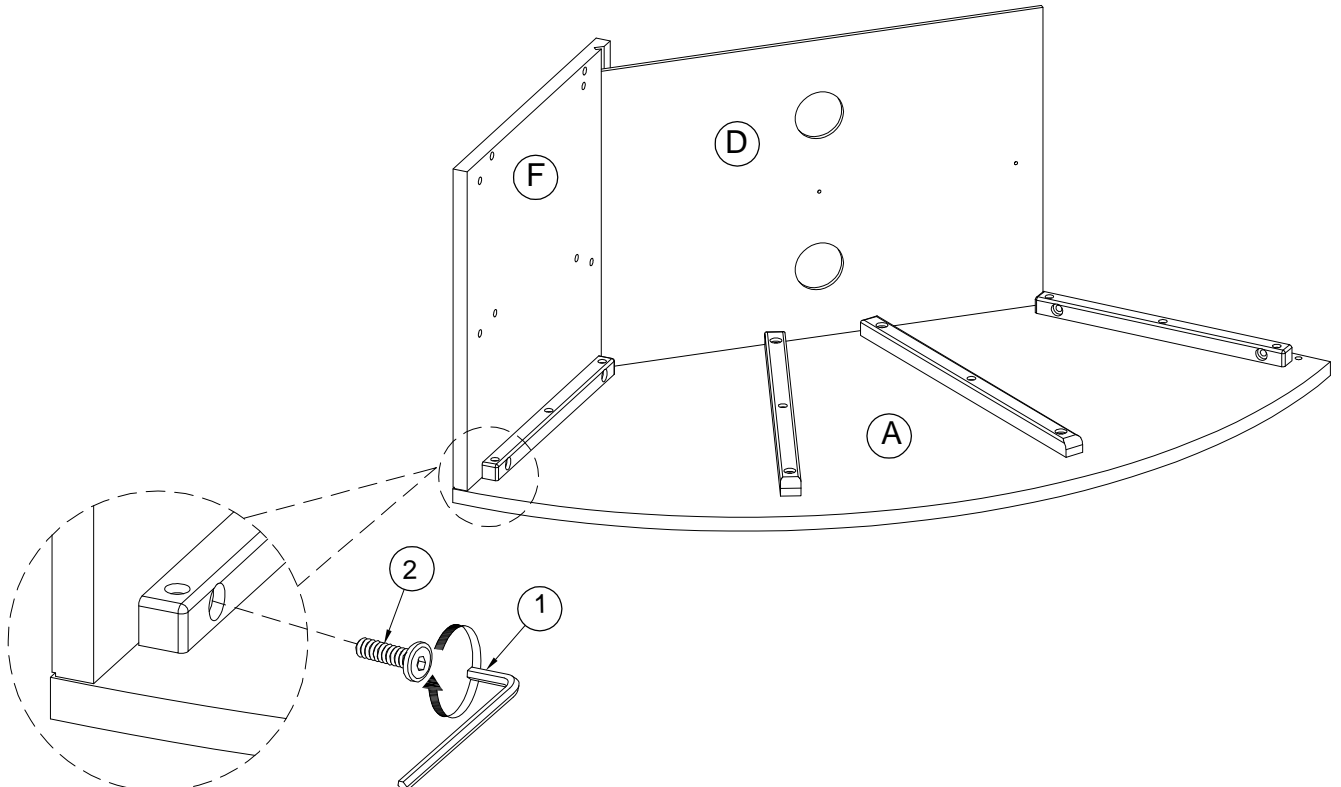


# ASSEMBLY INSTRUCTION

#6 672MS - CORNER TV
 
## Step 2

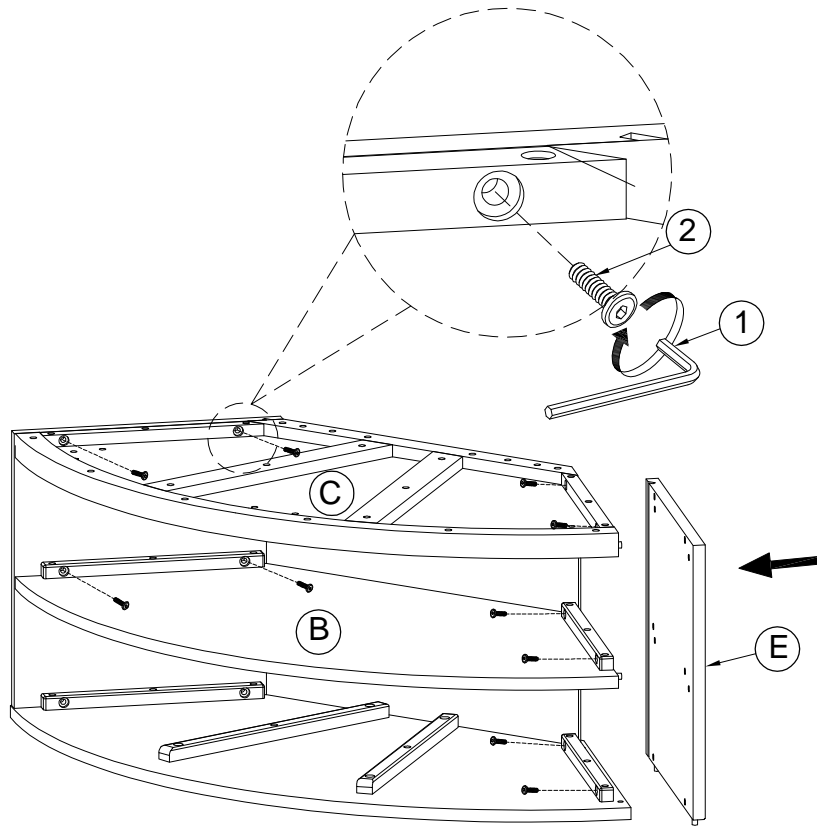


## Step 3

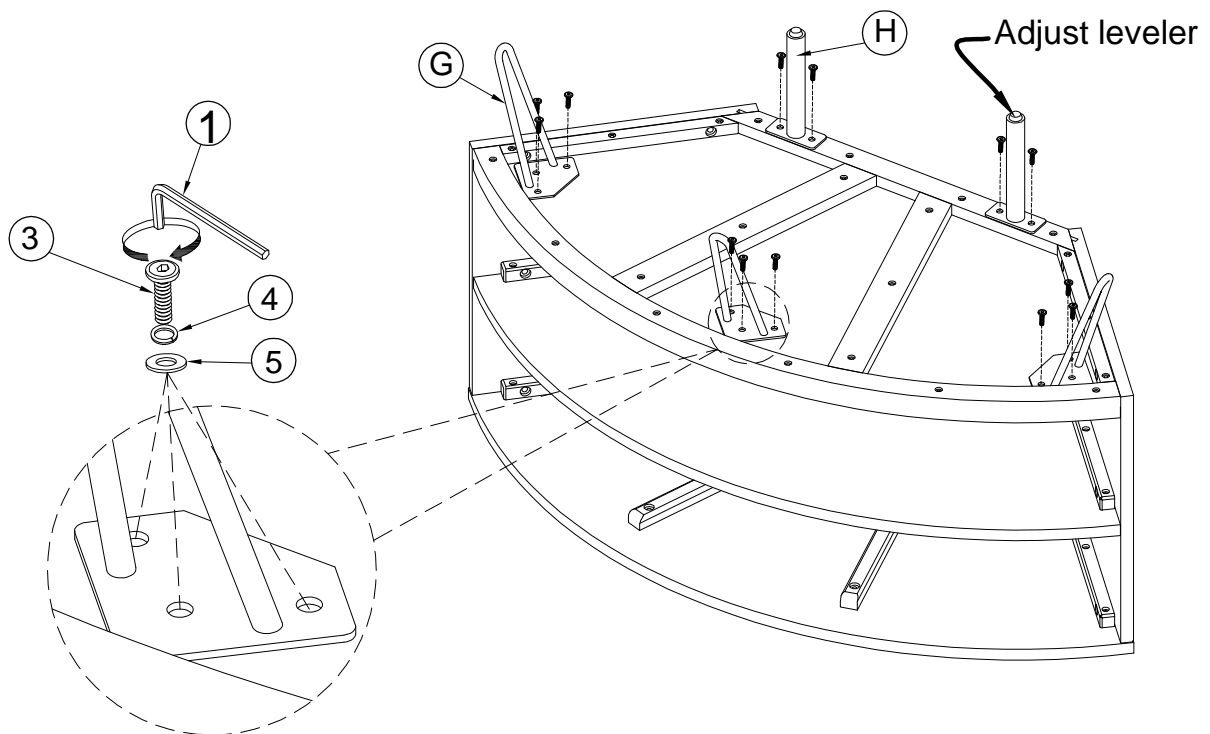 


# ASSEMBLY INSTRUCTION

#6 672MS - CORNER TV
 
## Step 4

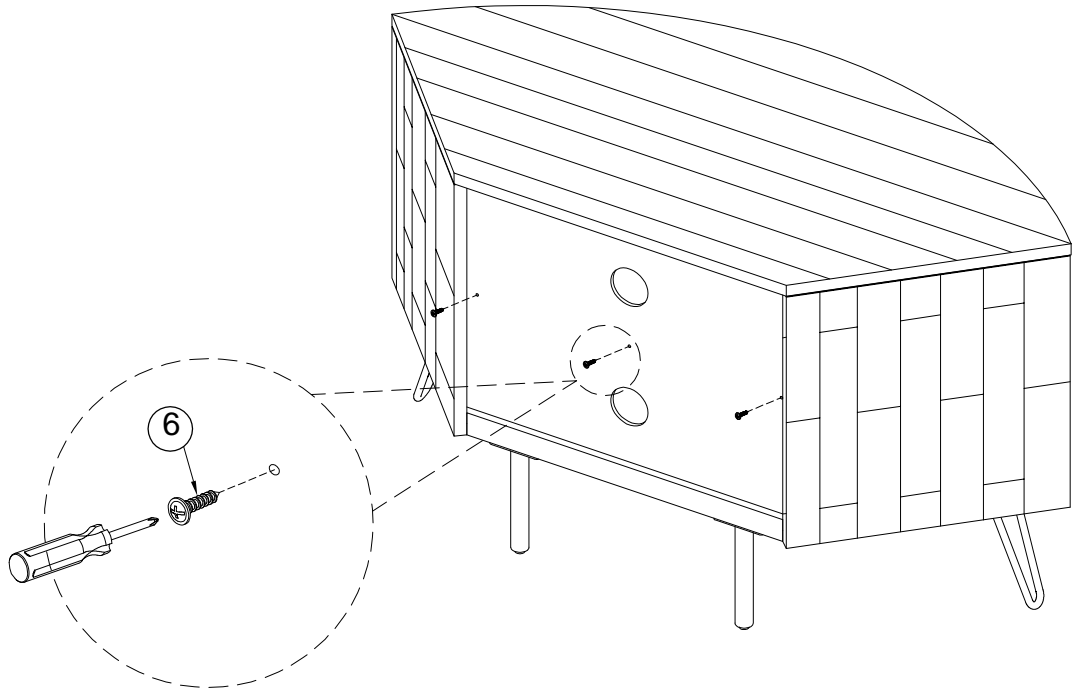

## Step 5

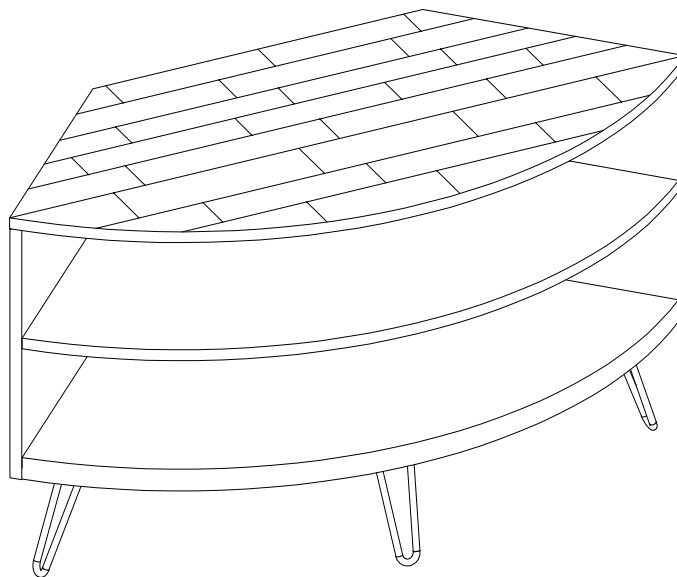 


Finish


# ASSEMBLY INSTRUCTION
 
#6 672MS - CORNER TV

## Step 2

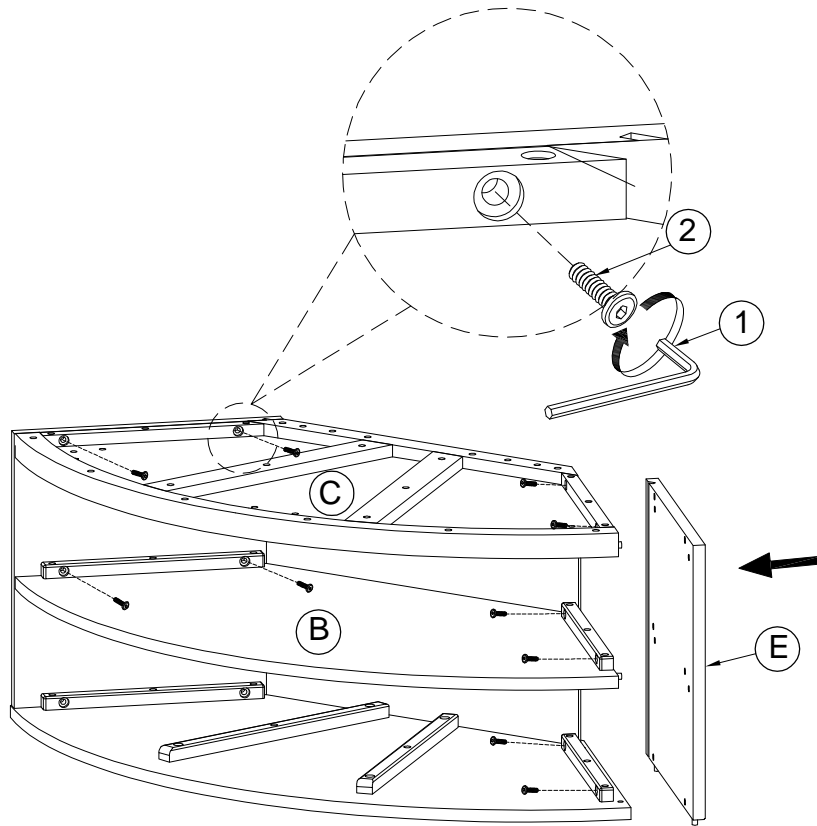


## Step 3

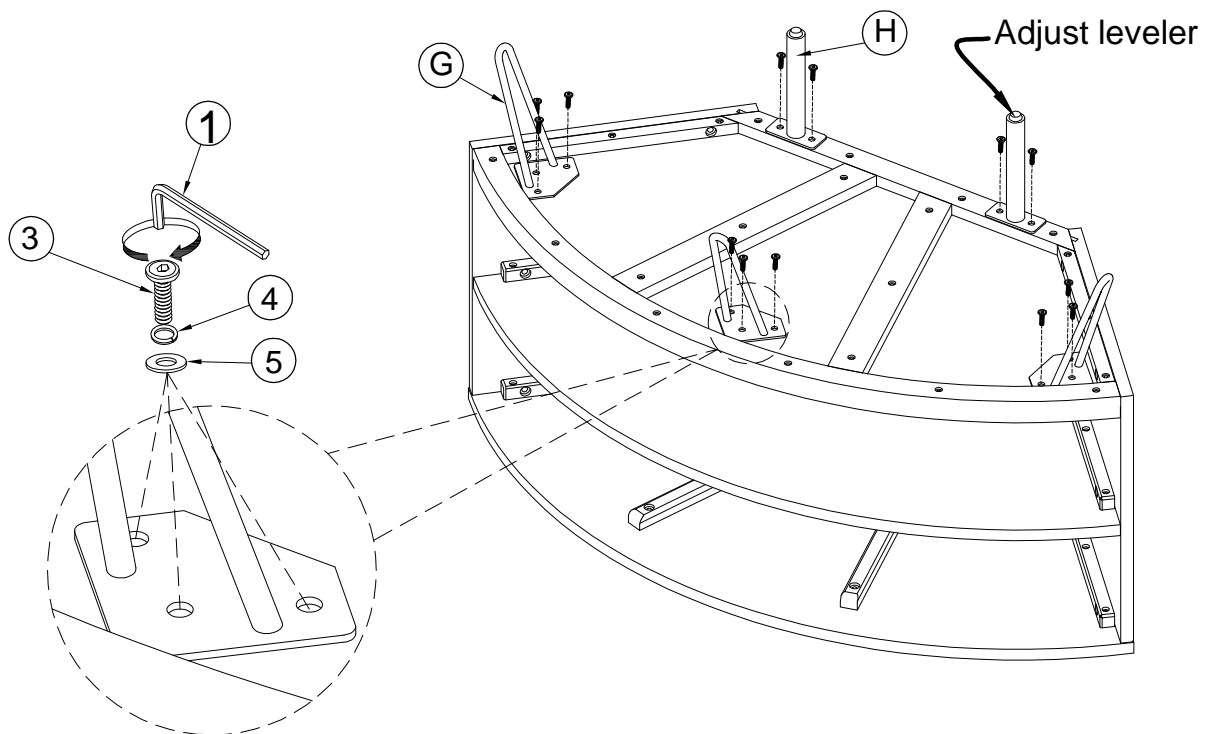 


# ASSEMBLY INSTRUCTION

#6 672MS - CORNER TV
 
## Step 4

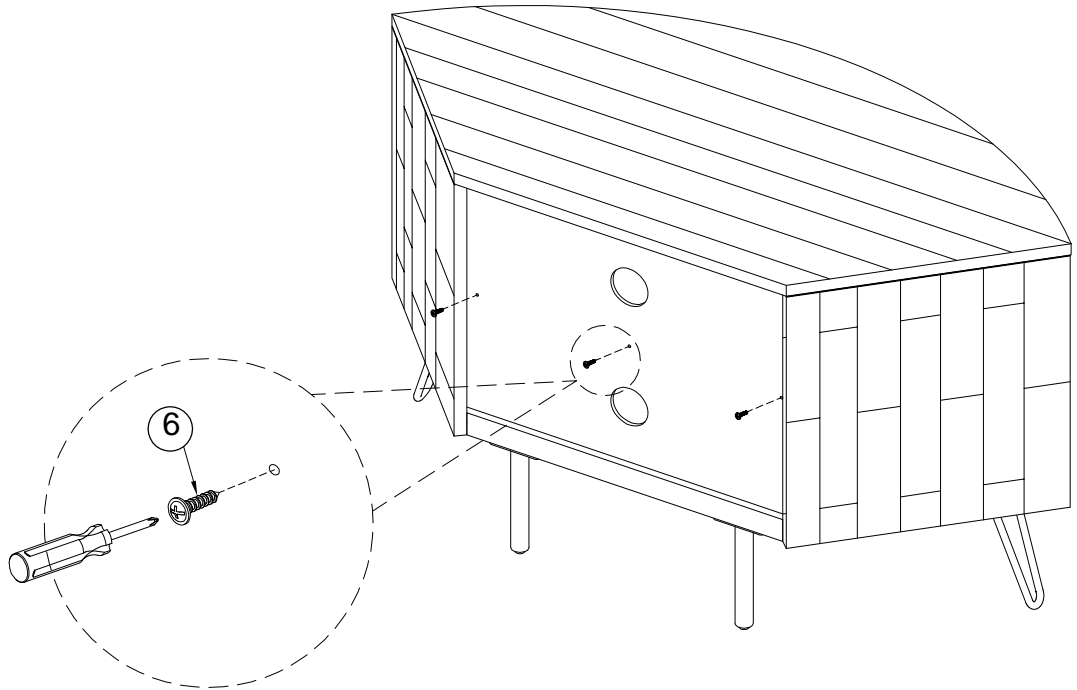

## Step 5

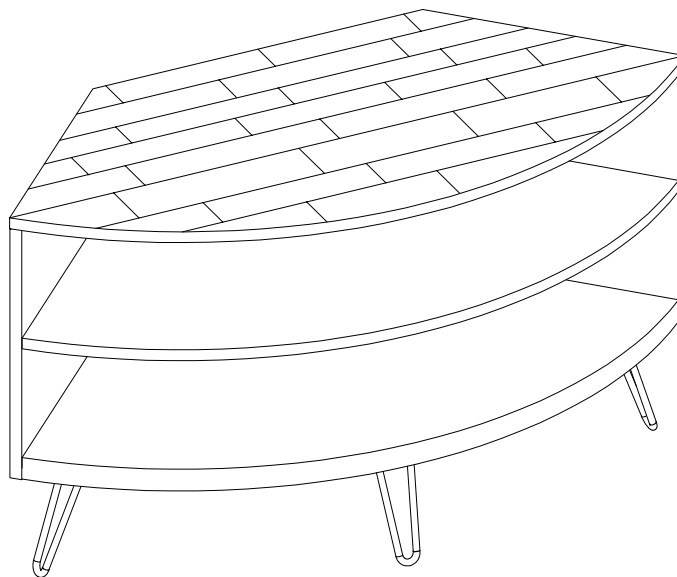 

Finish