
# Item #: W70IV3D

# **Assembly Instruction**

 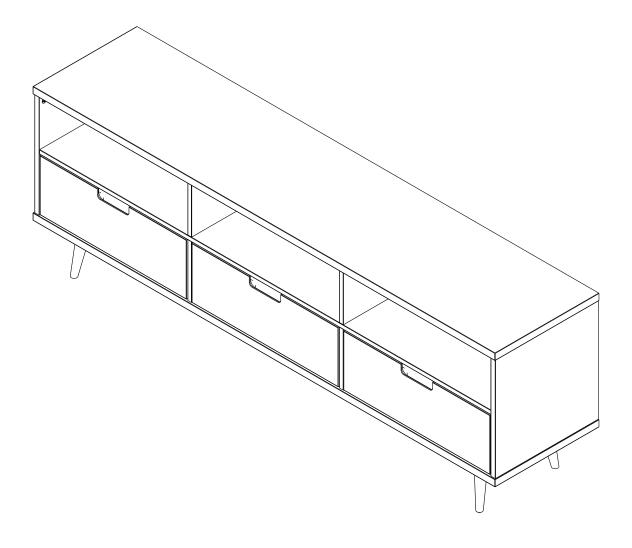





Please visit our website for the most current instructions, assembly tips report damage, or request parts. www.walkeredison.com


### General Assembly Guidelines

- I. Ensure that all parts and hardware are available before beginning assembly.
- II. Follow each step carefully to ensure the proper assembly of this product.
- III. Two people are recommended for ease in the assembly of this product.
- IV. The three main types of hardware used to assemble this product are: wood dowels, screws and bolts.
- V. A Phillips head screwdriver is required for the assembly of this product.



 VI. Power tools should not be used to assemble this product.




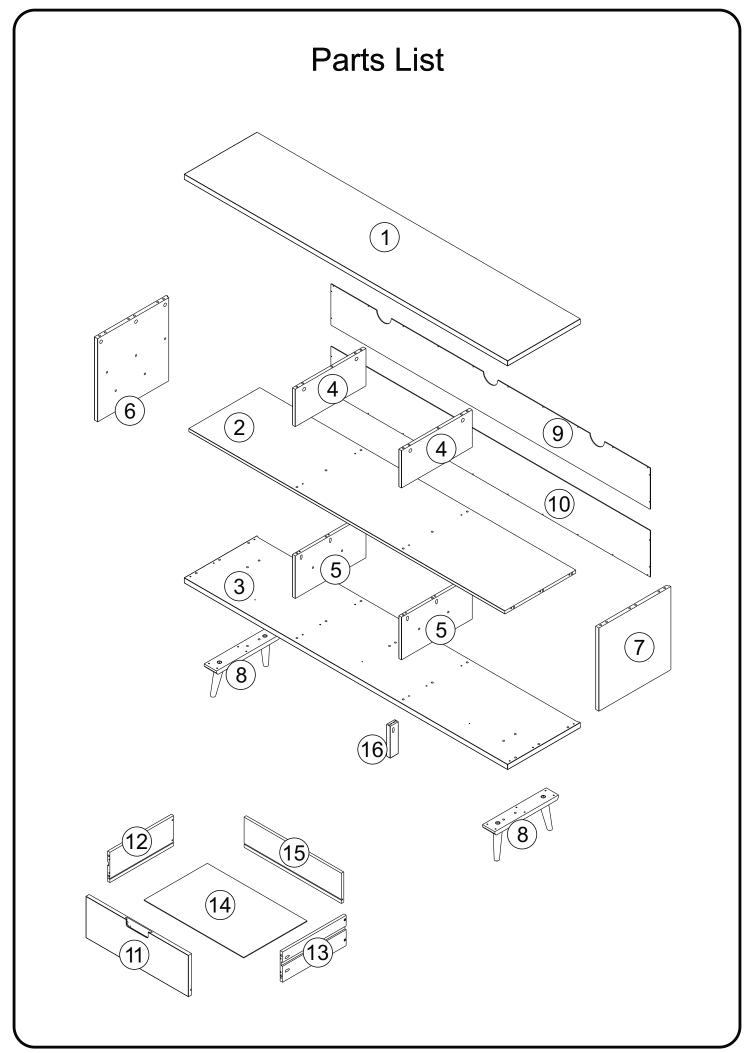



#### **Hardware List** Α Ø 5,5x28mm Cam Bolt 10 pcs В Ø 14x14mm Cam Lock 10 pcs C Ø 3,5x30 mm Screw 50 pcs Wood dowel D Ø 8,0x30 mm 48 pcs Ε Ø 3,5x16 mm Screw 43 pcs F Plastic Slide 06 pcs G Ø 4,0x40 mm Screw 16 pcs Η 08 pcs Ø 3,5x20 mm Screw 08 pcs **Drawer Limiter** 03 pcs Wood dowel Ø 8,0x50 mm K 06 pcs Philips head screwdriver required for assembly (not included)

The hardware quantities listed above are required for proper assembly.


Some extra hardware may also have been included.

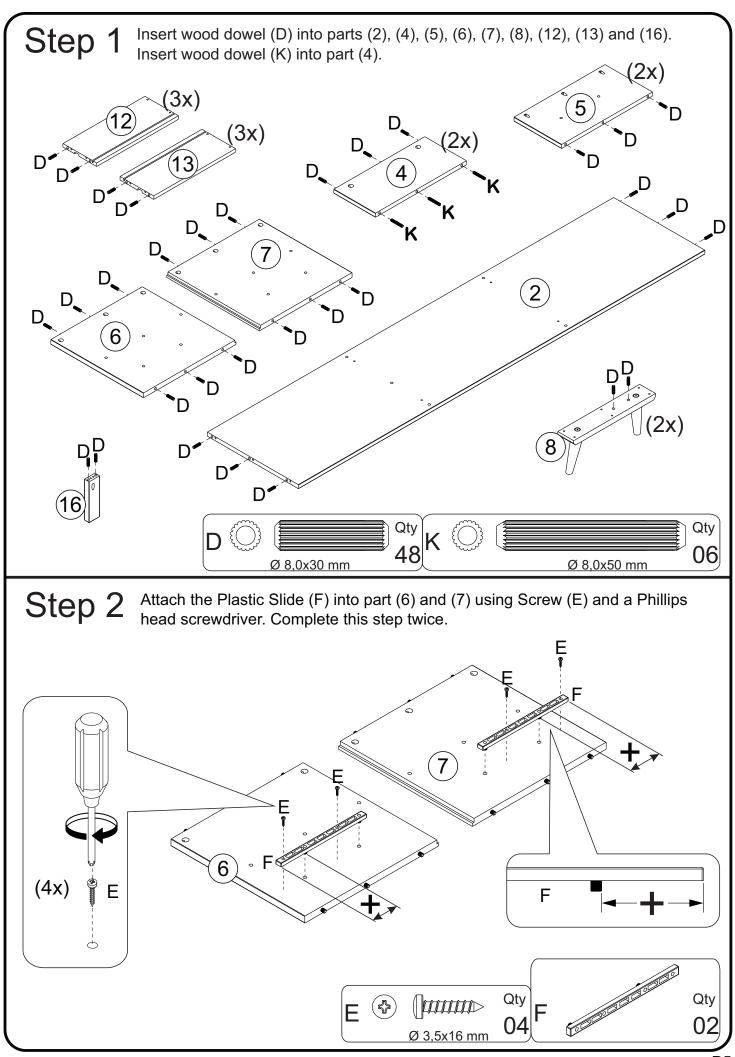


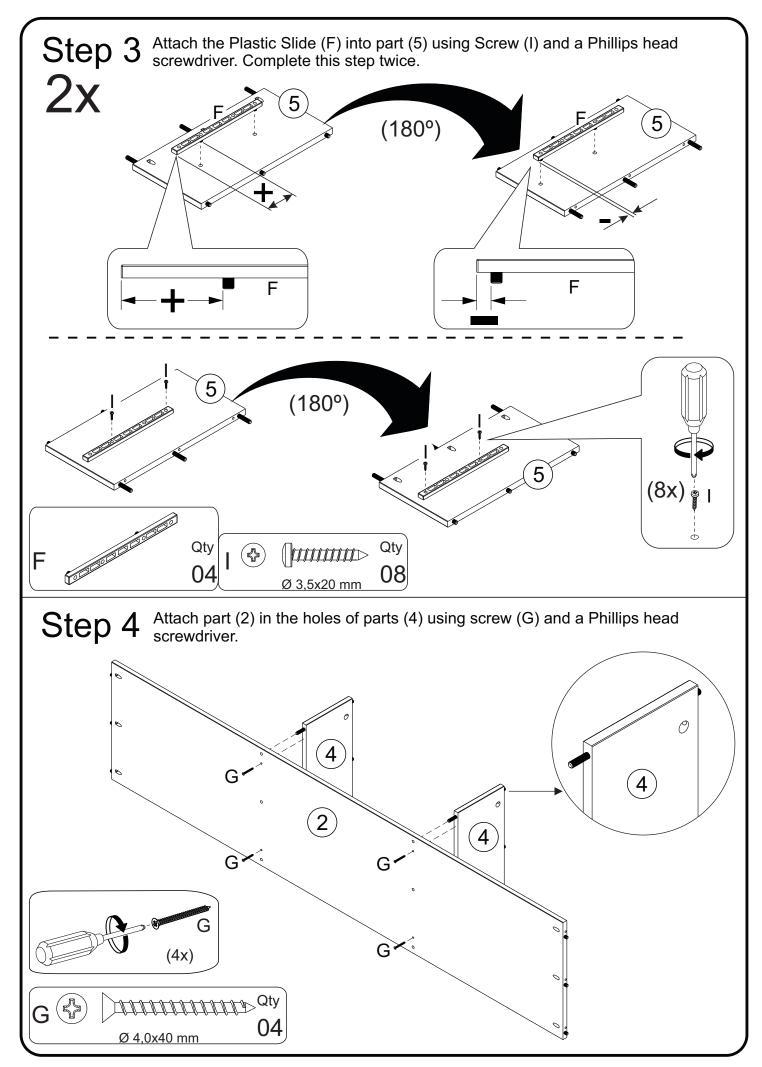


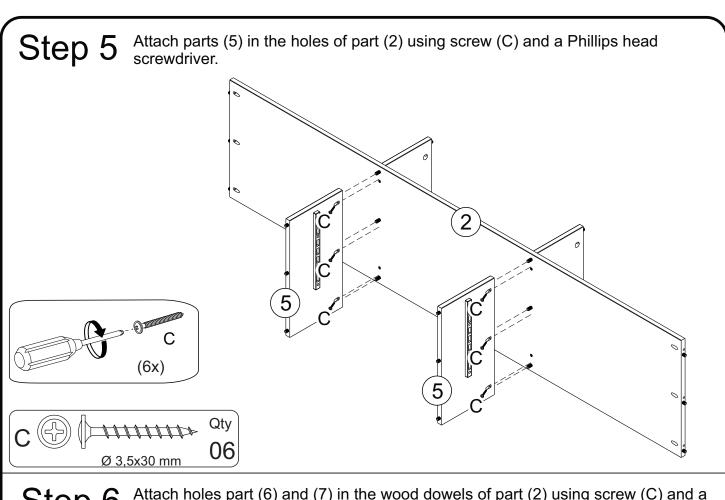

Step 6 Attach holes part (6) and (7) in the wood dowels of part (2) using screw (C) and a Phillips head screwdriver.

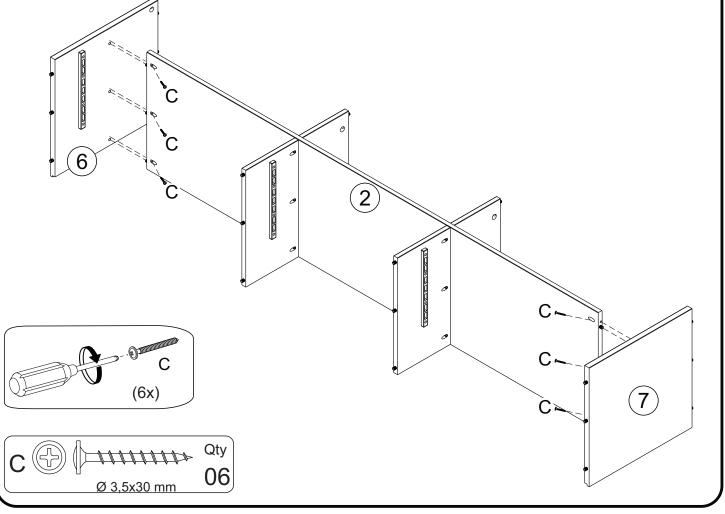


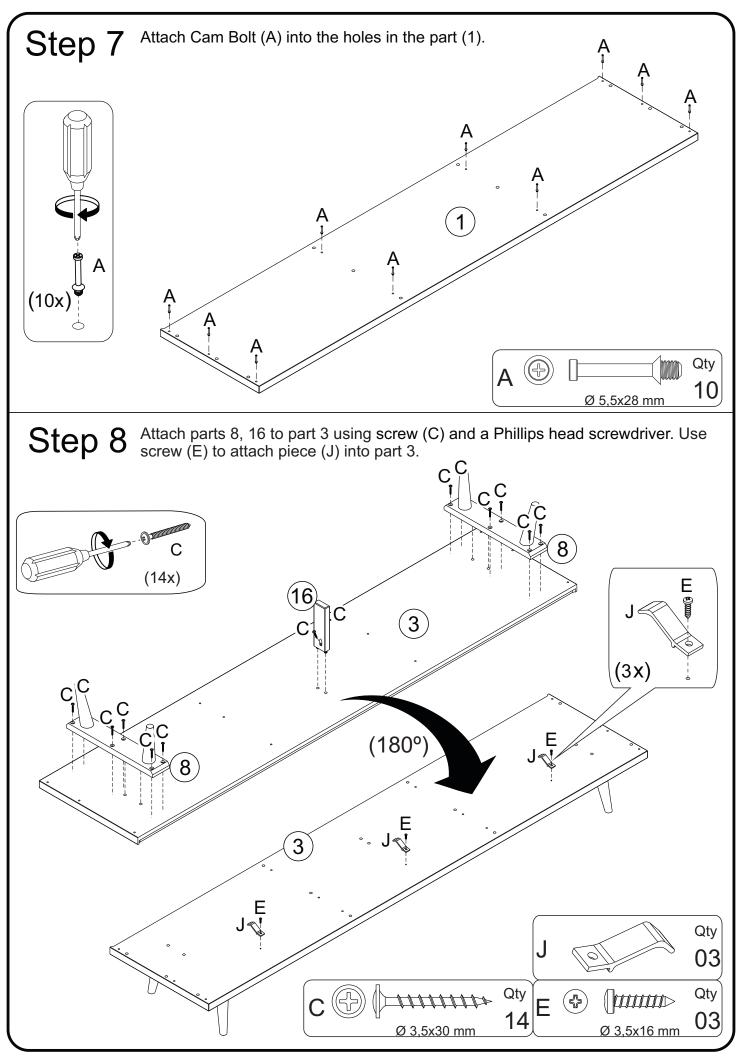


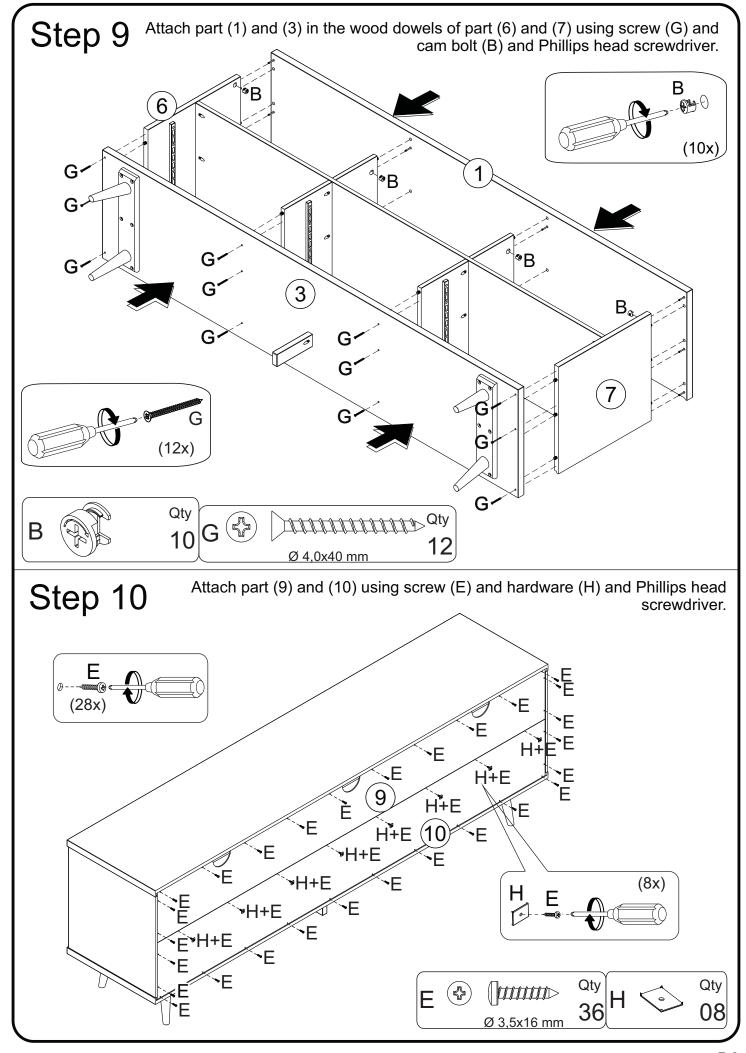

# Step 11 3x

Attach part (12) and (13) in the part (11) using screw (C) and Phillips head screwdriver.

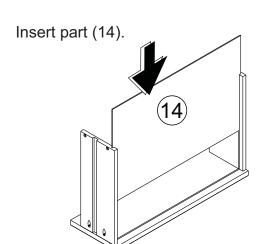

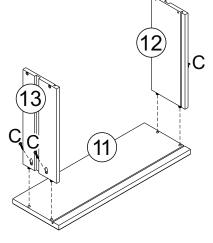

Attach part (12) and (13) in the part (15) using screw (C) and Phillips head screwdriver.

