



Assembly Instructions


7102901 Del Mar Desk
7102801 La Jolla Desk

Product Issues? Please Call Us Before Contacting Your Retailer At
1-800-549-3300, email customerservice@mshome.co, or visit mshome.co
We can help with Assembly Issues, Part Requests, Damages, & All
Other Product Related Questions

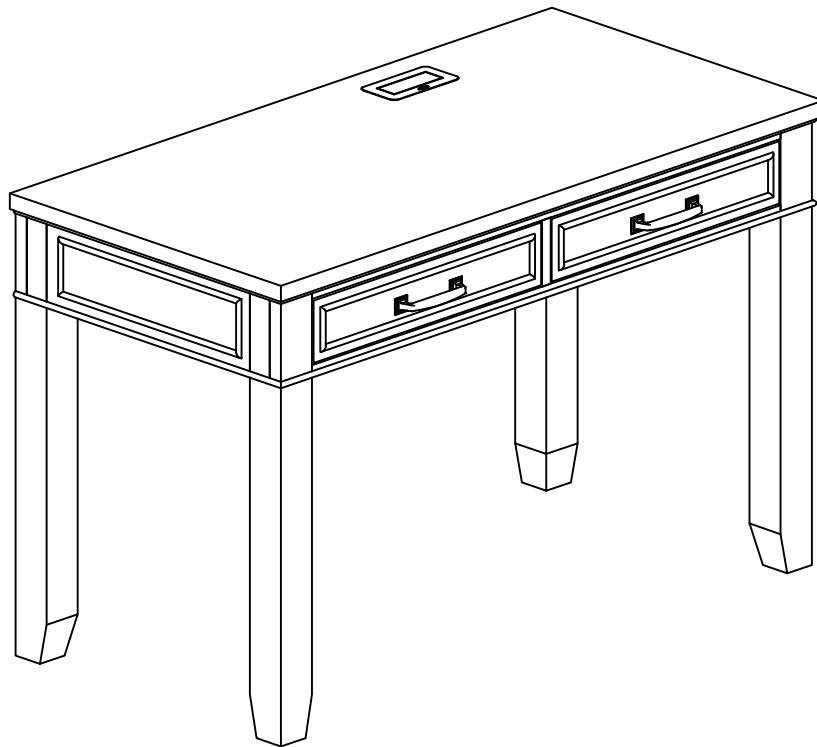


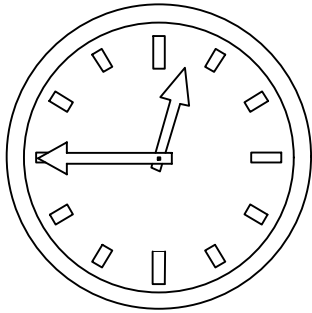

10 min

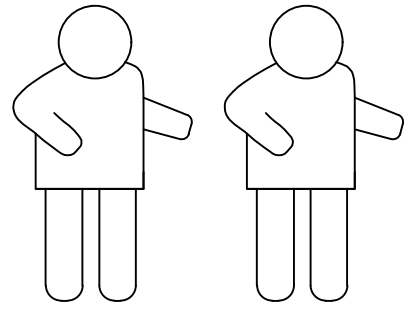


Two People Required

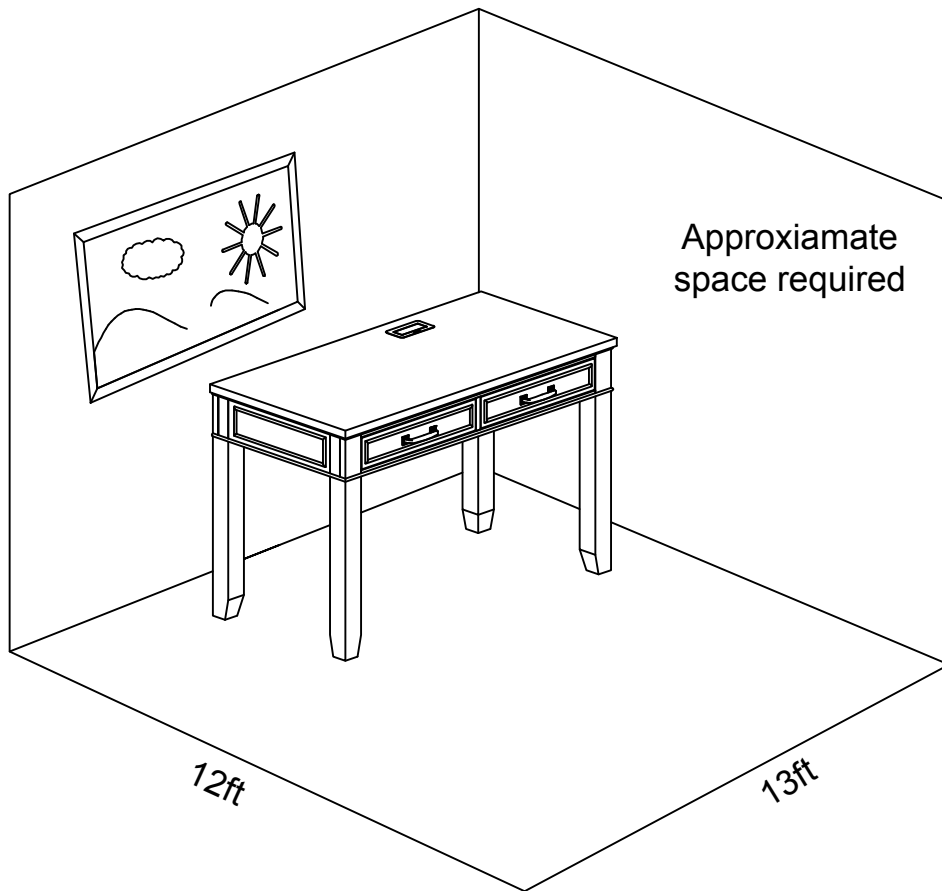


Approximate
space required

12ft

13ft

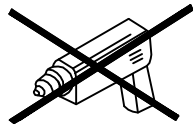


Do not use power tools

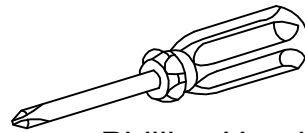



Phillips Head

Parts:

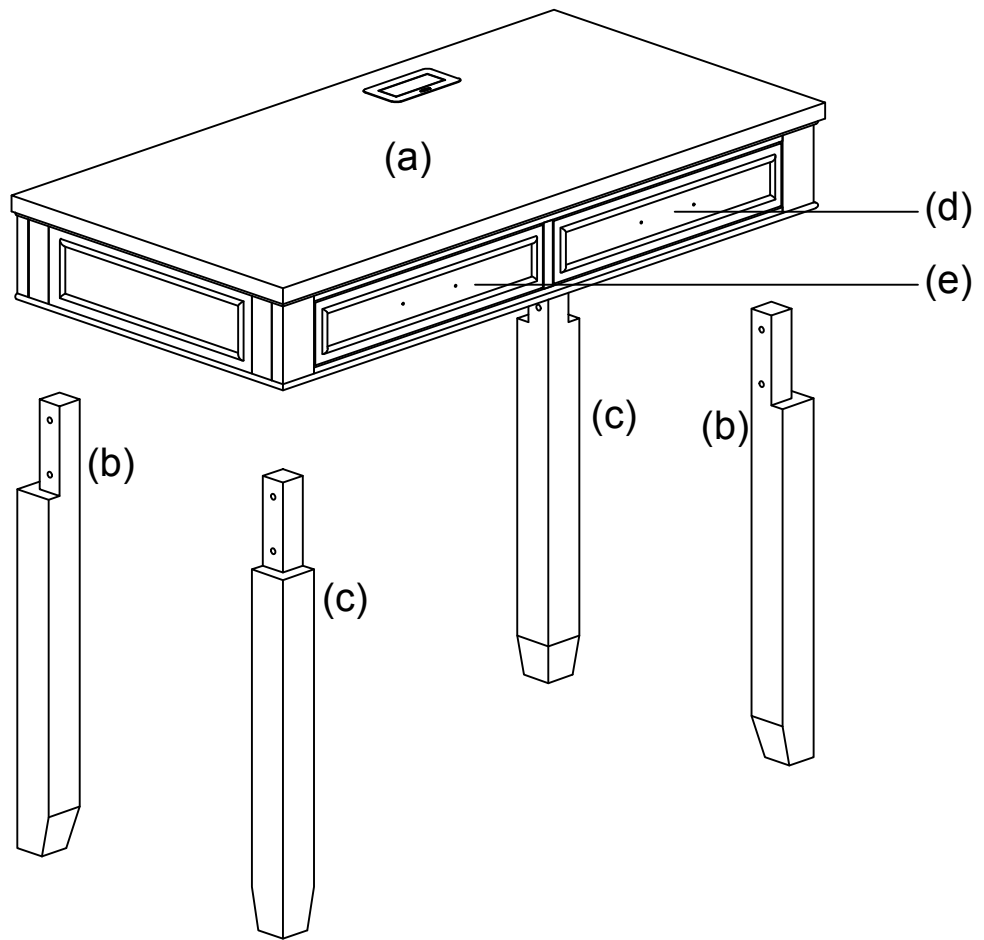
- (a) - Top
- (b) - Legs B x2
- (c) - Legs C x2
- (d) - Right Drawer
- (e) - Left Drawer



Hardware Pack



A x 08  Ø5/16"x60 (mm)	B x 01 
-----------------------------------------------------------------------------------------------------------------	-----------------------------------------------------------------------------------------------

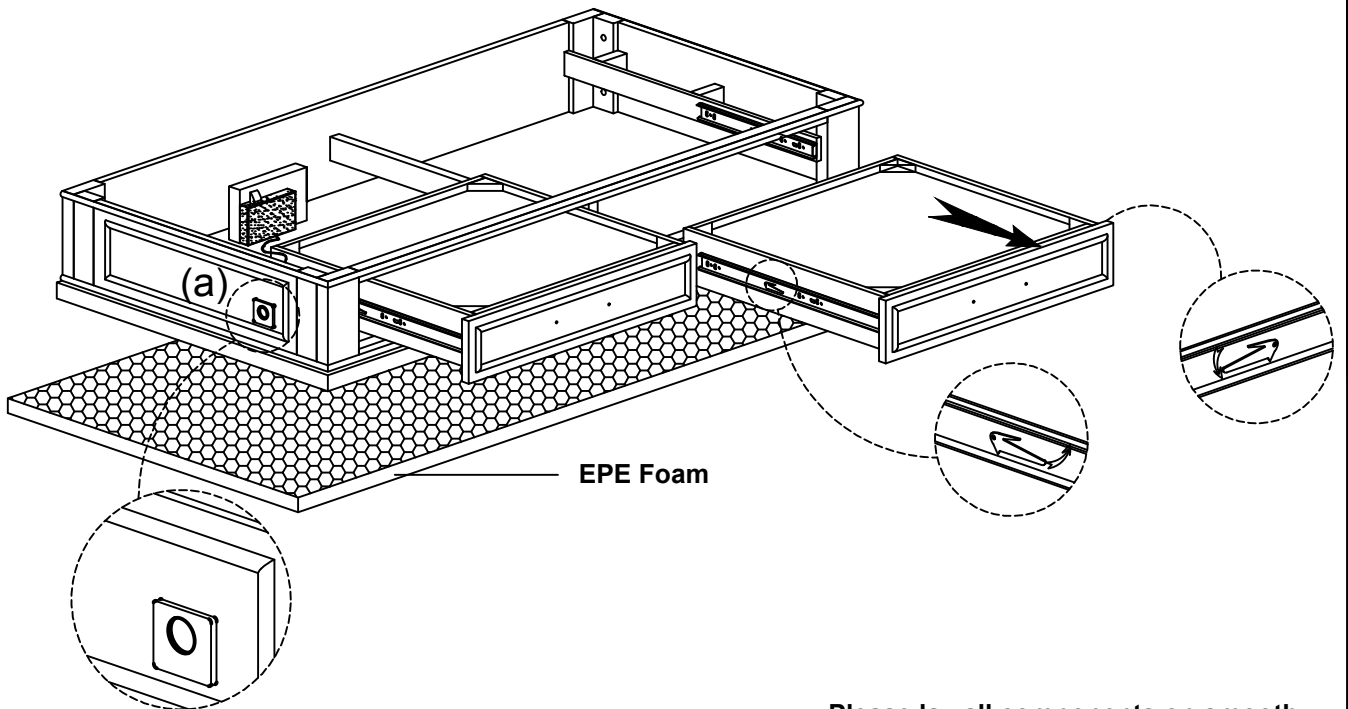
1. Change to remove drawers for assembly




Touch and Hold Fingerprint Lock
before open drawer

- Please lay all components on smooth flat surface to prevent scratches
- Use the EPE foam to protect the finish before assembly


2 A x 6  B x 1 

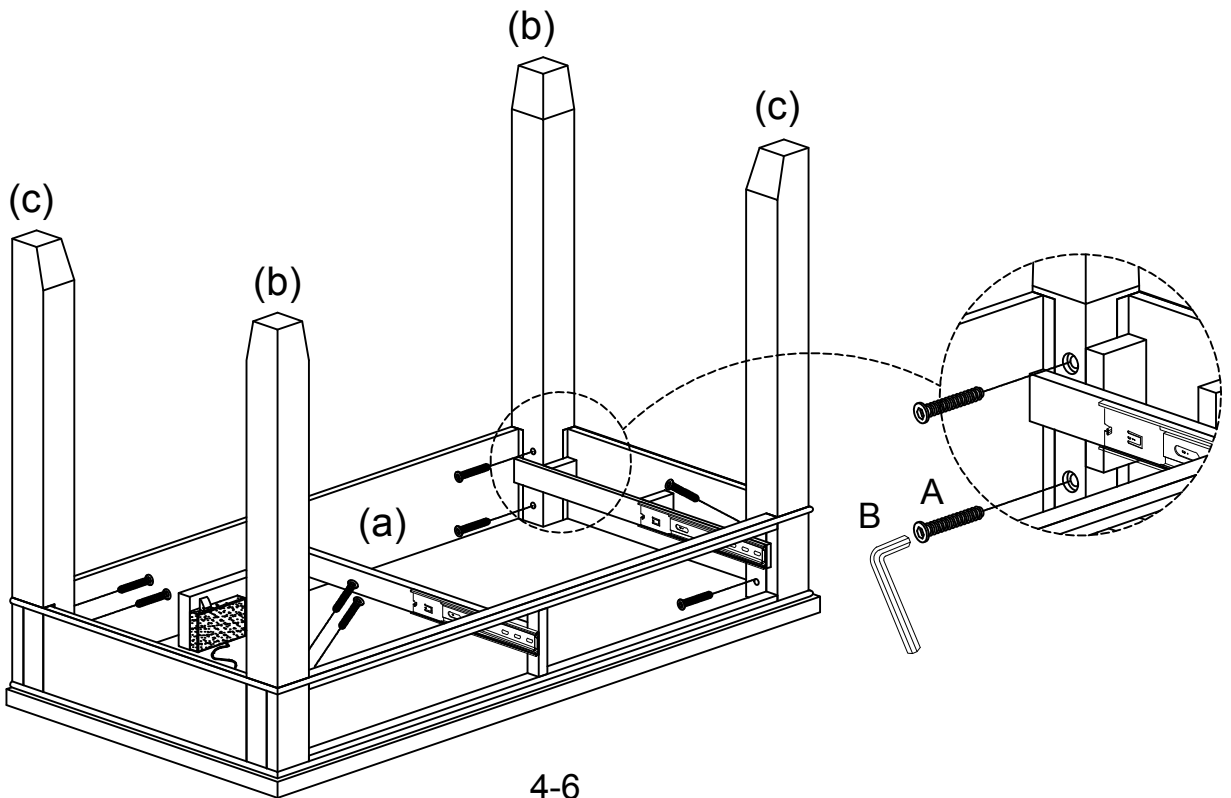


3

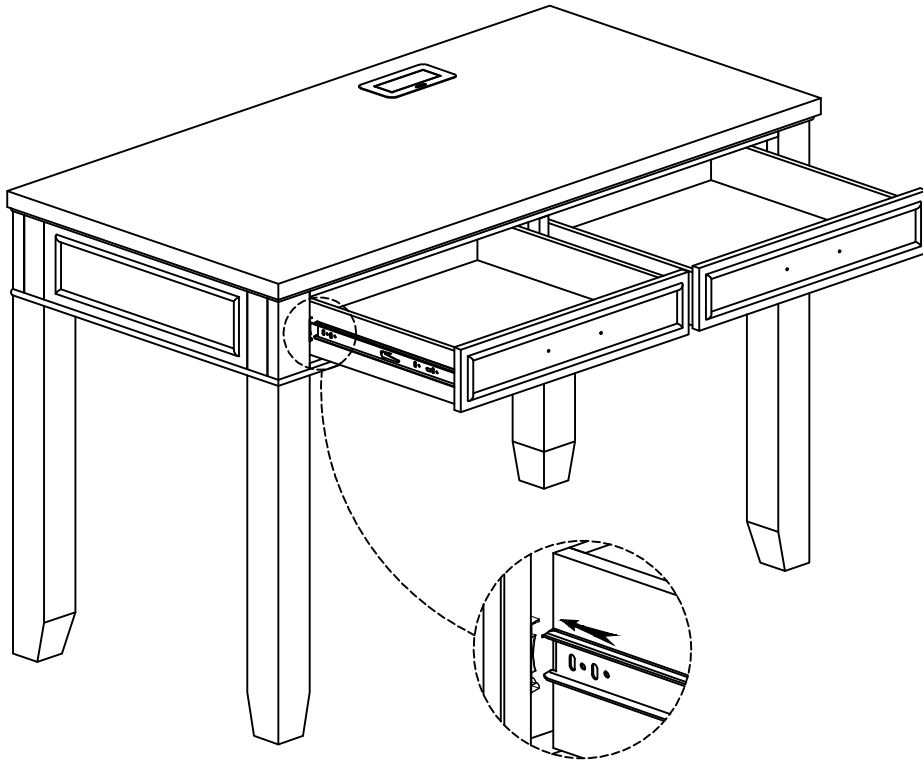

4

 


Handles intentionally placed backwards for shipping purposes. Please remove and re-install as pictured.

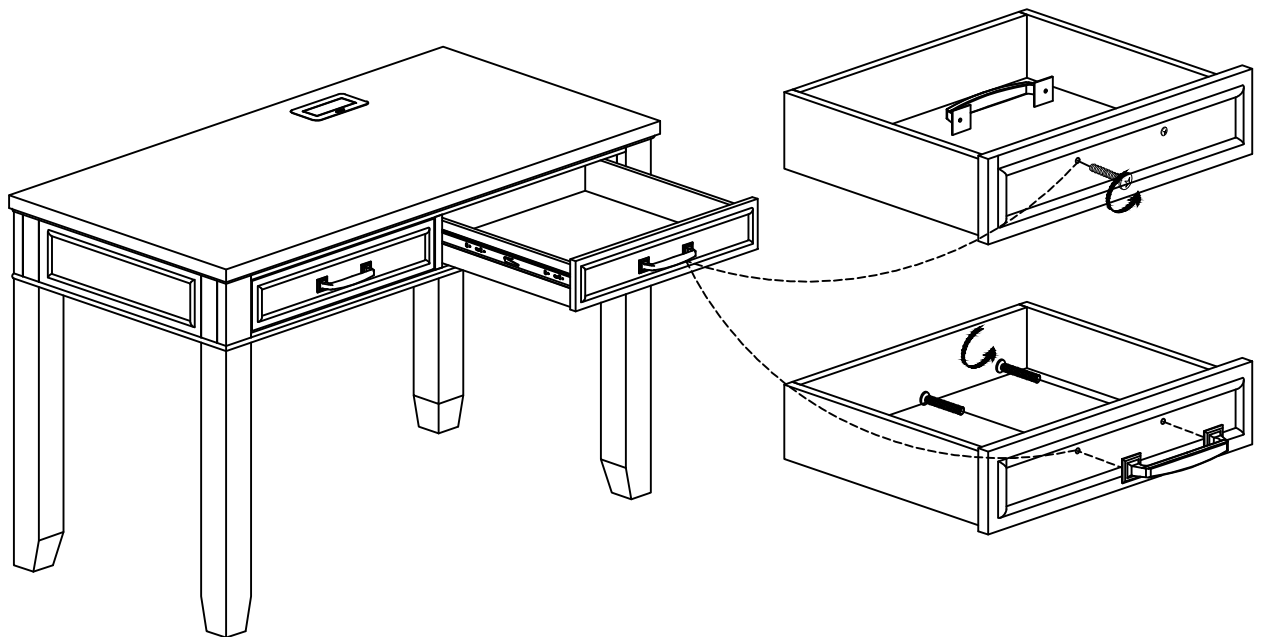

5

Fingerprint Lock

The Smart Button
of Power Strip.

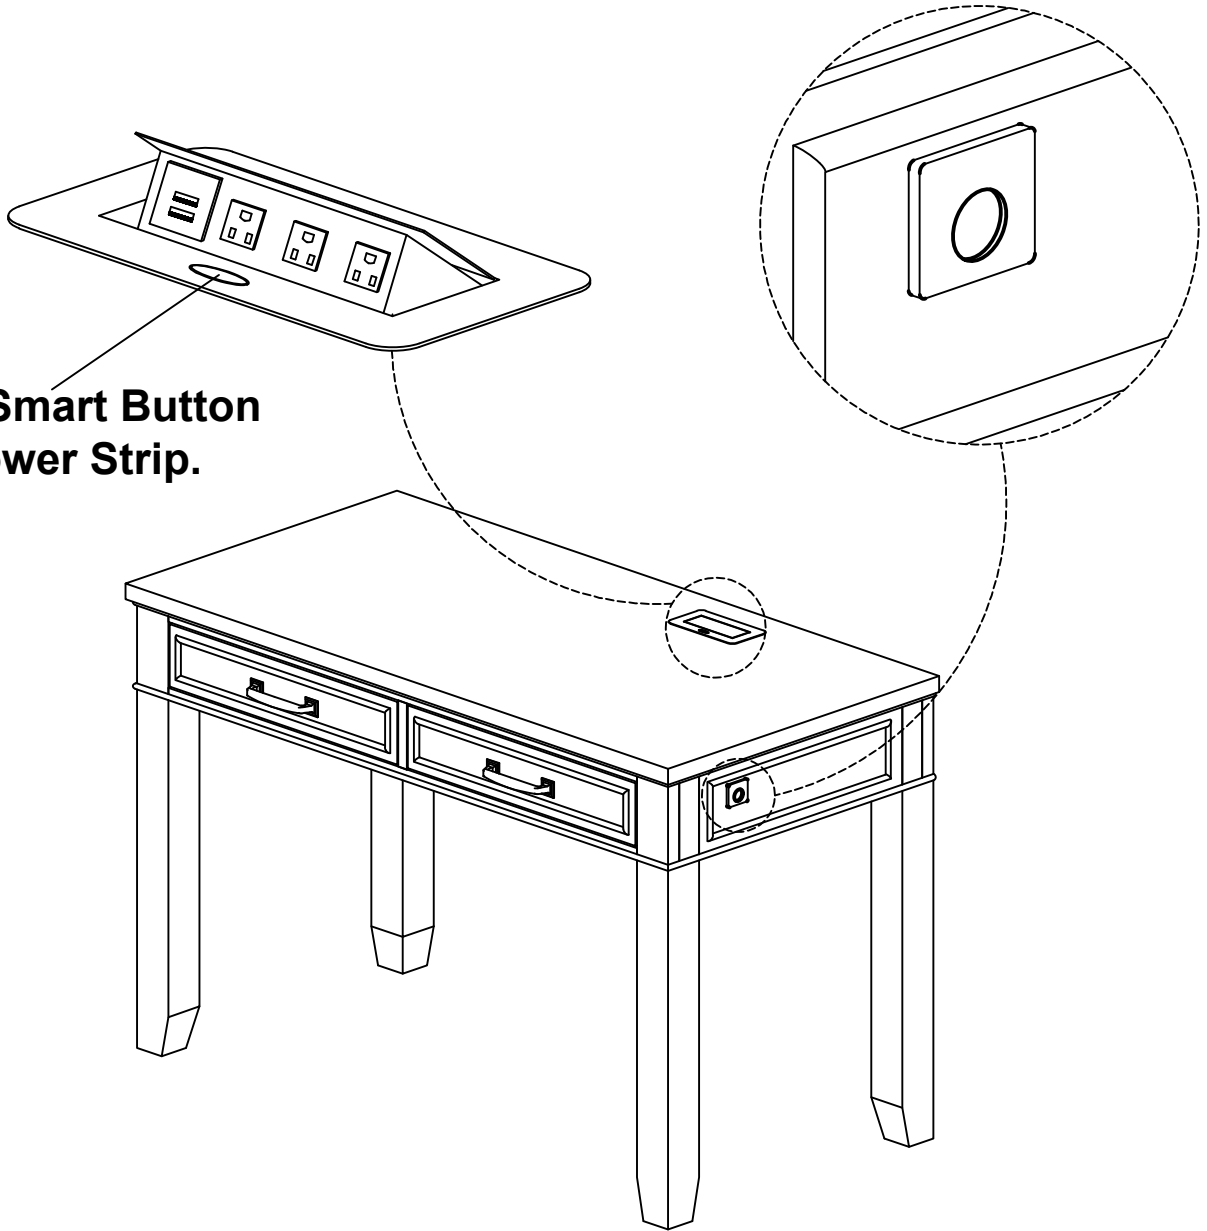

Personal Security Drawer User Guide

IMPORTANT:

Read all instructions prior to using the Personal Security Drawer Fingerprint Lock.

The Nightstand with Personal Security Drawer Fingerprint Lock is **NOT** a safe or lock box and is designed only to limit access.

The Personal Security Drawer Fingerprint Lock is in Factory Default mode, ANY fingerprint can open the lock. Only successfully registered fingerprints can terminate Factory Default mode.

Before using the fingerprint lock, please fully charge the finger pad with a micro-USB cable (not provided)

Fingerprint Registration:

Administrator Fingerprint Registration:

Please note the first three (3) registered fingerprints are administrator fingerprints

1. Hold fingerprint for 5 seconds on the fingerprint reader and wait for the indicator light to flash blue
2. Remove finger and the indicator light will be solid blue, proceed to register fingerprint
3. Place finger on the reader and remove five (5) times
 - a. If a red light flashes, re-enter fingerprint
4. After five (5) successful entries, the indicator light will flash green indicating a successful entry
5. For Administrator Fingerprints 2-3 follow the "Additional Fingerprint" steps below and note that the 2nd and 3rd fingerprints are an Administrator

Additional Fingerprints:

1. Hold fingerprint for 5 seconds on the fingerprint reader and wait for the indicator light to flash blue
2. Use the Administrator fingerprint to authorize access to set new fingerprint and wait for approval
3. Place new finger on the reader and remove repeating five (5) times
 - a. Green flash will indicate successful reading
 - b. If a red light flashes, re-enter fingerprint
4. After five (5) successful entries, the indicator light will flash green indicating a successful entry for fingerprint

Fingerprint Deletion:

Option 1:

1. Hold fingerprint for ten (10) seconds
2. Blue light will flash when it switches to flashing red light remove finger
3. Enter Administrator fingerprint

4. Green light will flash when successful
5. All fingerprints will be deleted

Option 2:

1. Carefully insert the white micro-USB device into the side of finger pad unit
2. Touch the finger pad and the light will flash multiple colors
3. The lights will turn off indicating the fingerprint registration has been successfully deleted



Using the Personal Security Drawer Fingerprint Lock:

To unlock the drawer use a fingerprint that has been successfully added

Green light will indicate that access has been granted for two (2) seconds and gently pull open the drawer. Please note that after two (2) seconds if the drawer is not opened it will automatically lock with the blue light.

Red light will indicate that the verification has not passed and will not grant access.

Low Power Notice:

The indicator will flash red three times after unlocking indicating that the power is low and the battery needs to be charged.

The battery is rechargeable with a micro-USB cable (not provided). Please allow for approximately one (1) hour to charge. The battery charge will last approximately 3 months depending on how often one uses the lock.

Tips:

When entering a fingerprint, please enter at different angles to expand the fingerprint database.

Unable to unlock may mean the power is out and the battery needs to be fully charged.