

ASSEMBLY INSTRUCTIONS

Mason Accent Bench

Important safety instructions:

- Please read carefully all instructions before assembling the accent bench.
- For your safety and ease, assembly by two or more adults is recommended.
- Keep instructions for future use.

Pre-assembly:

- Do not discard any content until assembly is completed to avoid accidentally discarding small parts or hardware.
- Remove all parts and hardware from box.

 
Parts List

Item	Description	DRAWING	QTY
P1	Accent Bench		1
P2	Legs		2


Hardware List

i lai attaro Elot				
Item	Description	DRAWING	QTY	
H1	Boltsφ5/16*2-3/4"	9	6	
H2	Lock Washers φ5/16"	0	6	
Н3	Flat Washers φ5/16"	0	6	
H4	Allen Wrench	_	1	
Н5	Wood Plug		4	


Step 1.Remove all the legs and hardware from small box.




Step 2.Turn the bench(P1) upside down and lay on protective carpet. Using bolts (H1), lock washers (H2), flat washers(H3), connect legs(P2) to bench (P1). Tighten bolts (H1) with allen wrench (H4).

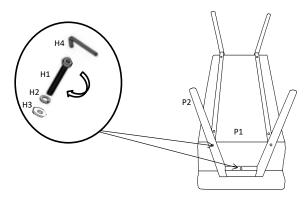

Step 3. Place the wood plug(H5) into the hole as illustration. \int_{Ω}

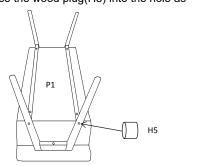

Step 4. Place bench upright on a level surface. Assembly is complete.

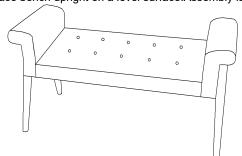

ADDITIONAL NOTE ABOUT SAFETY: BOLTS MAY LOOSEN DURING NORMAL EVERYDAY USE. THEY SHOULD BE PERIODICALLY INSPECTED AND RE-TIGHTENED TO PREVENT DAMAGE OR INJURY. ALWAYS CHECK TO ENSURE THAT ALL HARDWARE IS KEPT TIGHTENED.