



Assembly Instructions


7908902 - Monterey Lift Top Desk - White & Grey

**Product Issues? Please Call Us Before Contacting Your Retailer At
1-800-549-3300, email customerservice@mshome.co, or visit www.mshome.co
We can help with Assembly Issues, Part Requests, Damages, & All Other
Product Related Questions**

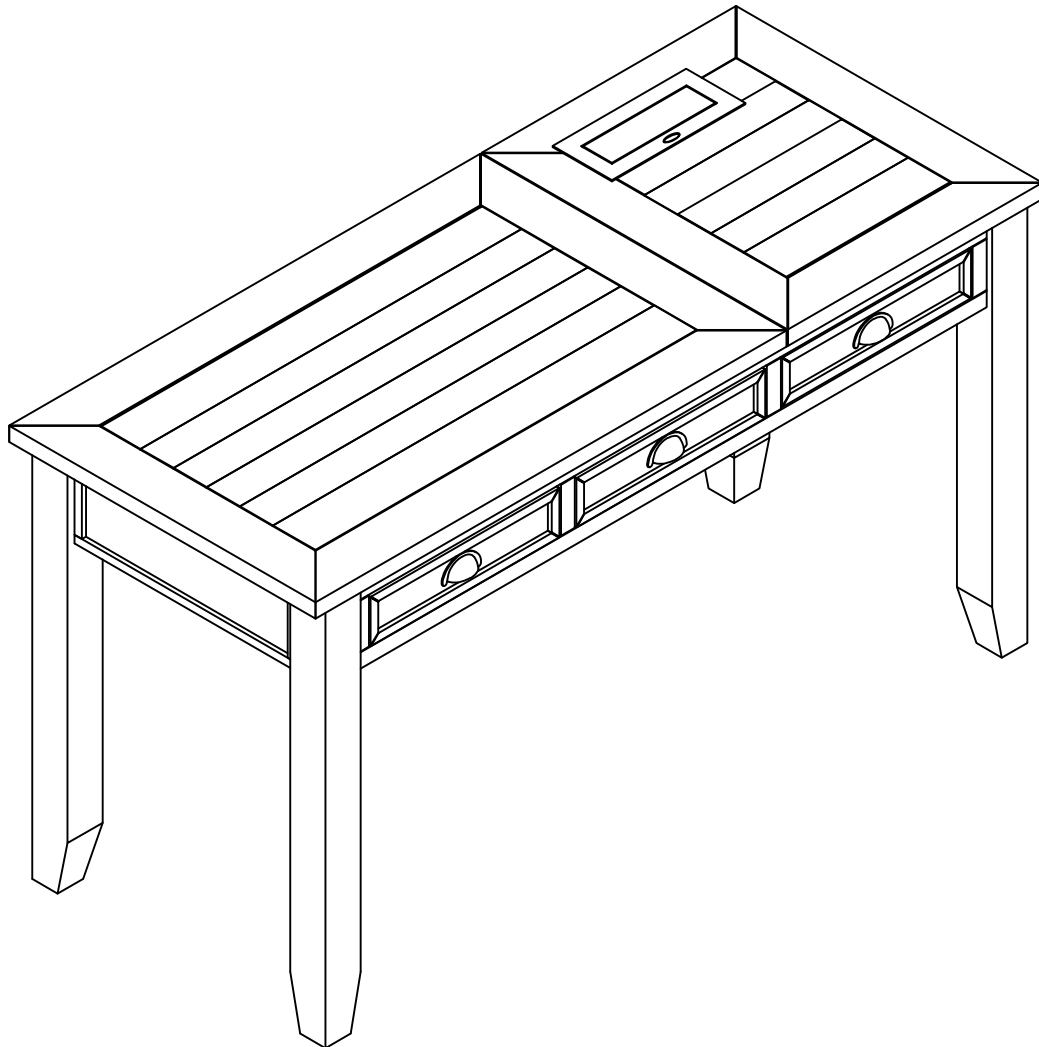


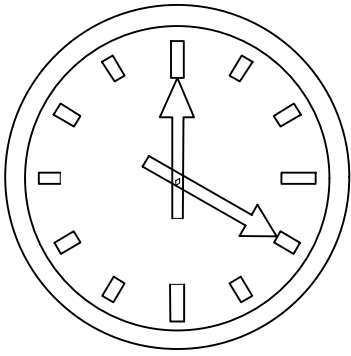

20 min

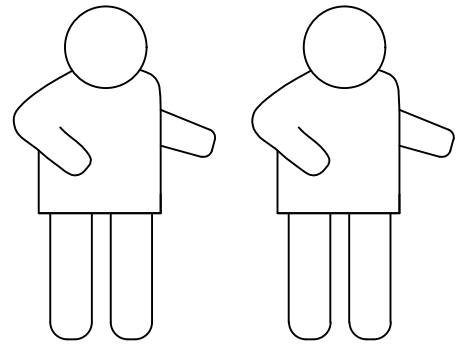

Two People Required

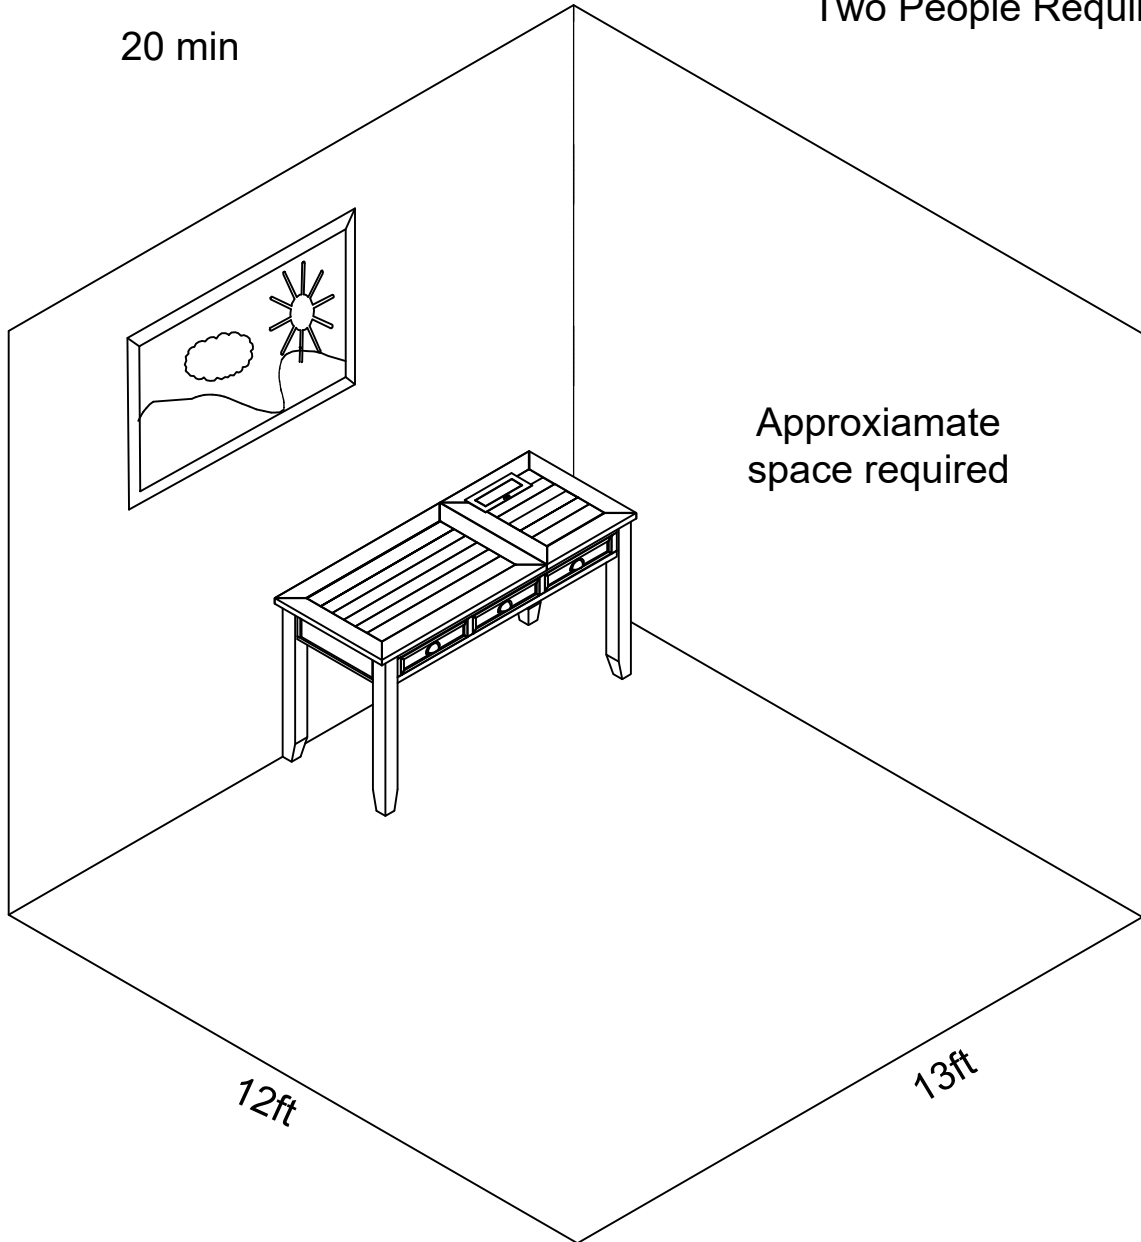


Approxiamate
space required

12ft




13ft




- Part List :
- C1 Top
 - C2 Legs x 4
 - D1 Lift Top
 - D2 Drawer

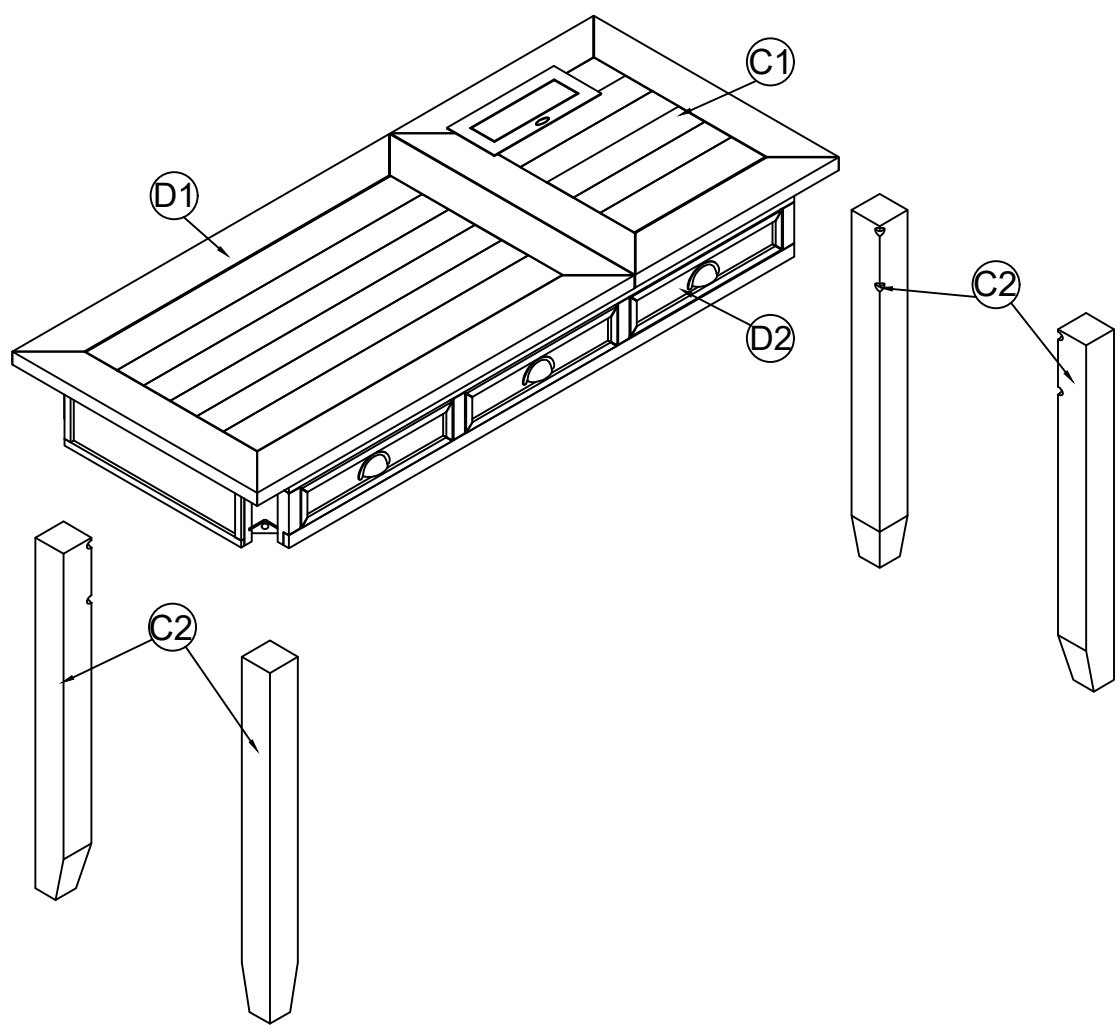


 
Hardware Pack:

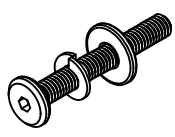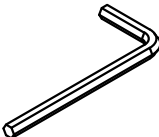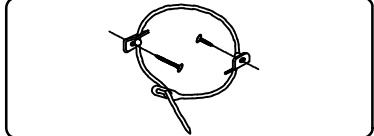
<p>A</p>  <p>Ø6x60 (mm) : 8pcs</p>	<p>B</p>  <p>Ø4 : 1 pc</p>
 <p>ANTI-TIP SET</p>	

- 1 Please lay all components on smooth flat surface to prevent scratches
Use the EPE foam to protect the plastic hardware before assembly

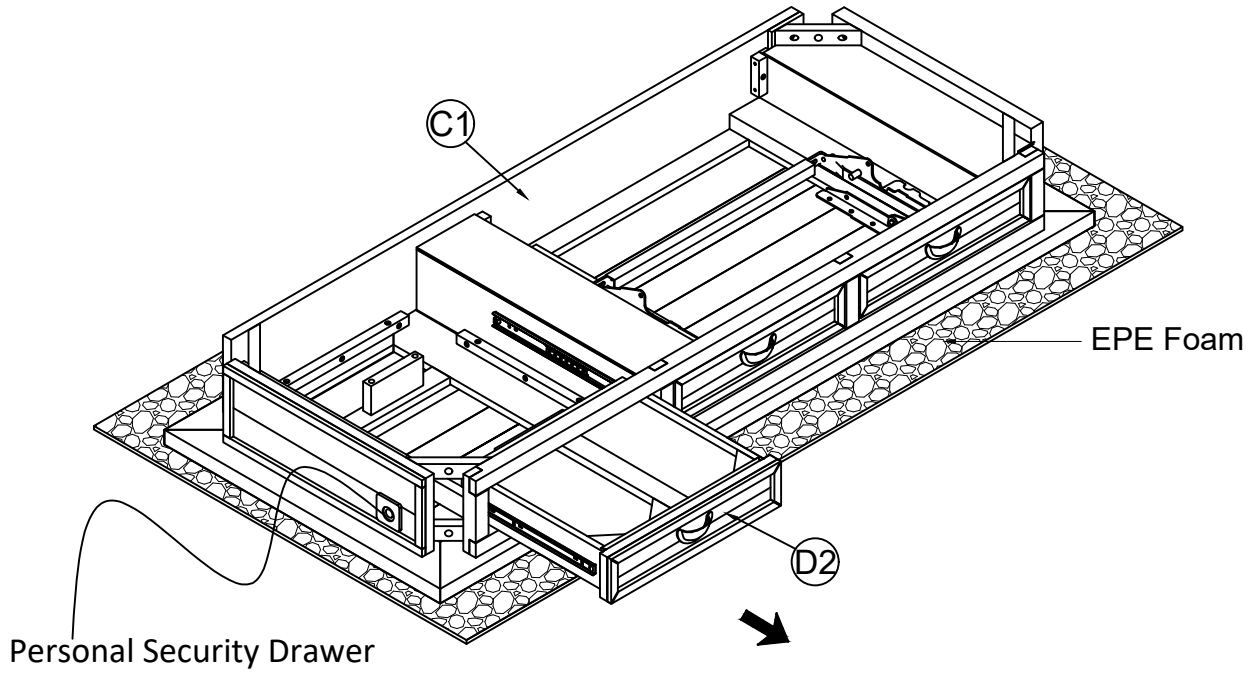

2

A x 4		Ø6x60 (mm)	B x 1	
-------	---	------------	-------	---

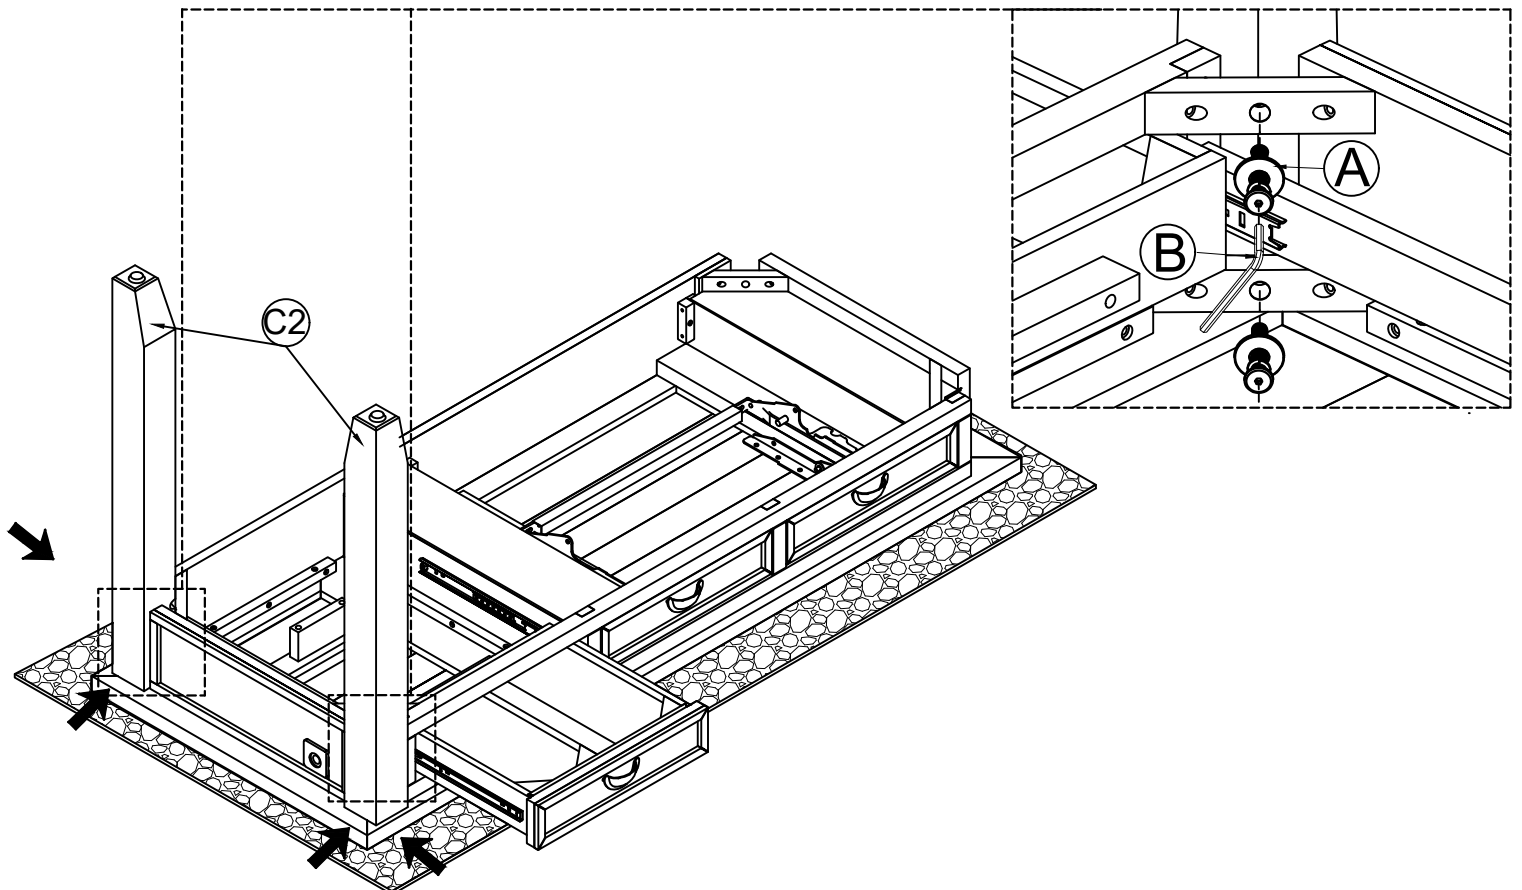




3

A x 2



Ø6x60 (mm)

 B x 1

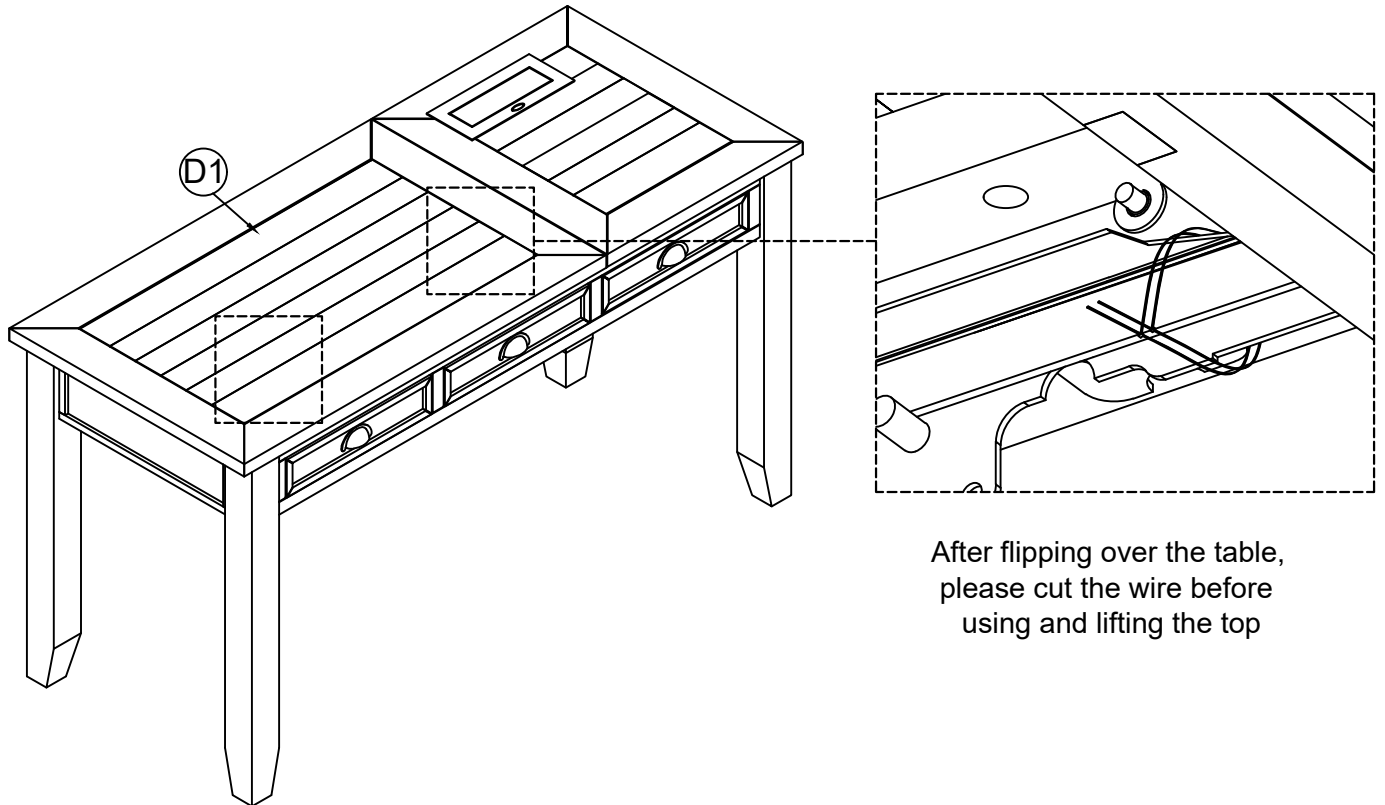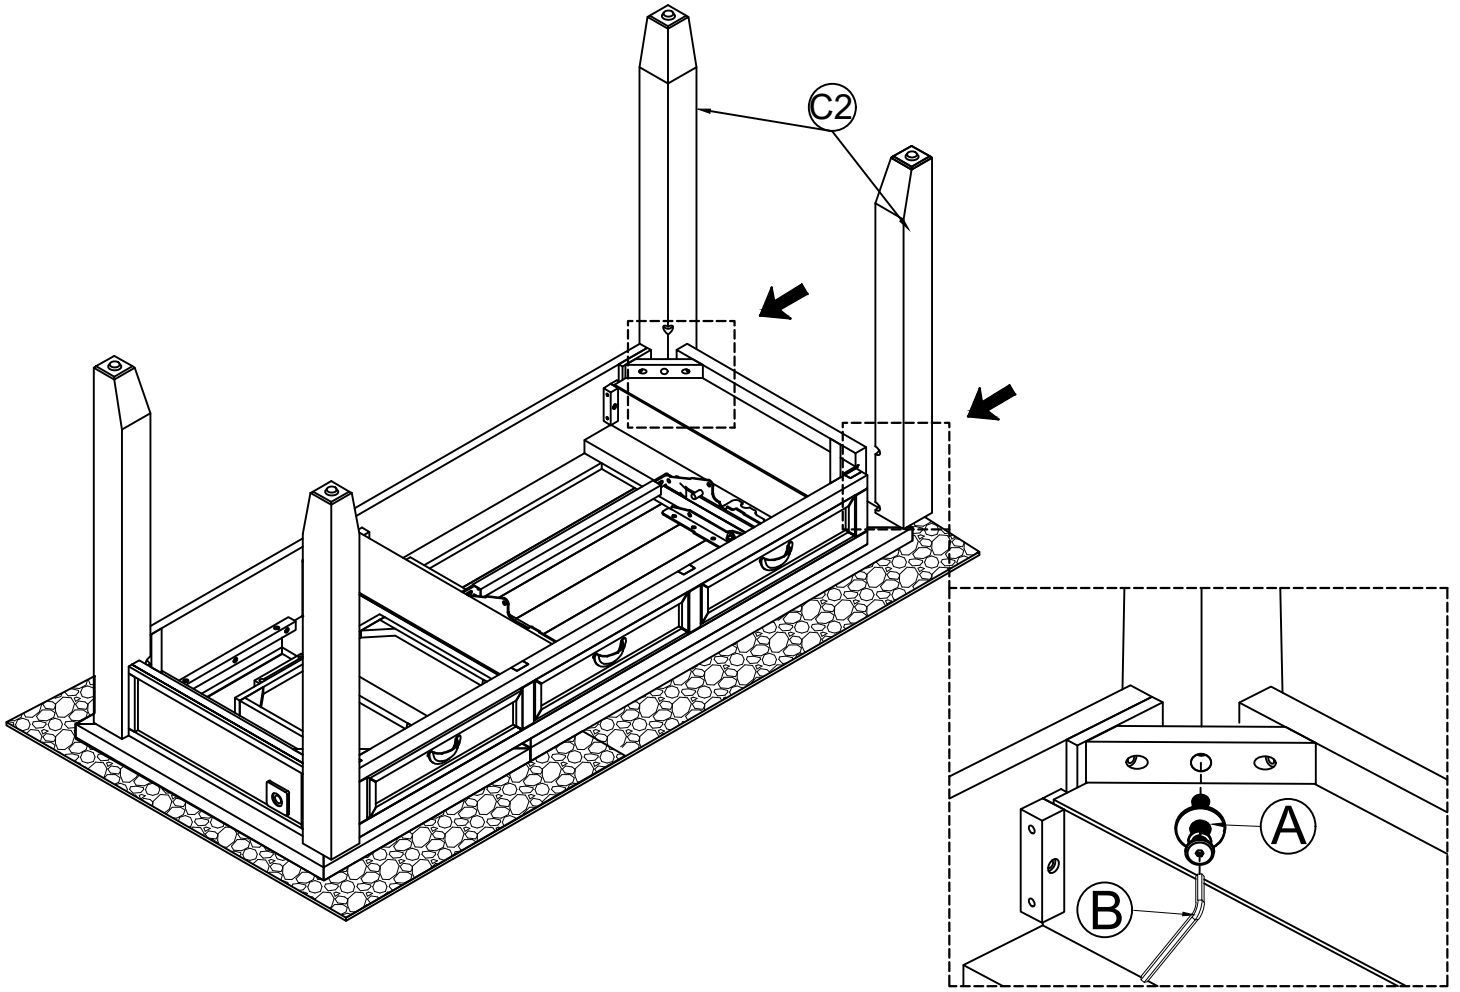

After flipping over the table,
please cut the wire before
using and lifting the top

4

A x 2





Ø6x60 (mm)

B x 1



CAUTION: When table top is in the lifted position it is required to use the lock and keep it in the locked position. Failure to do so may lead to injury or damage to the product

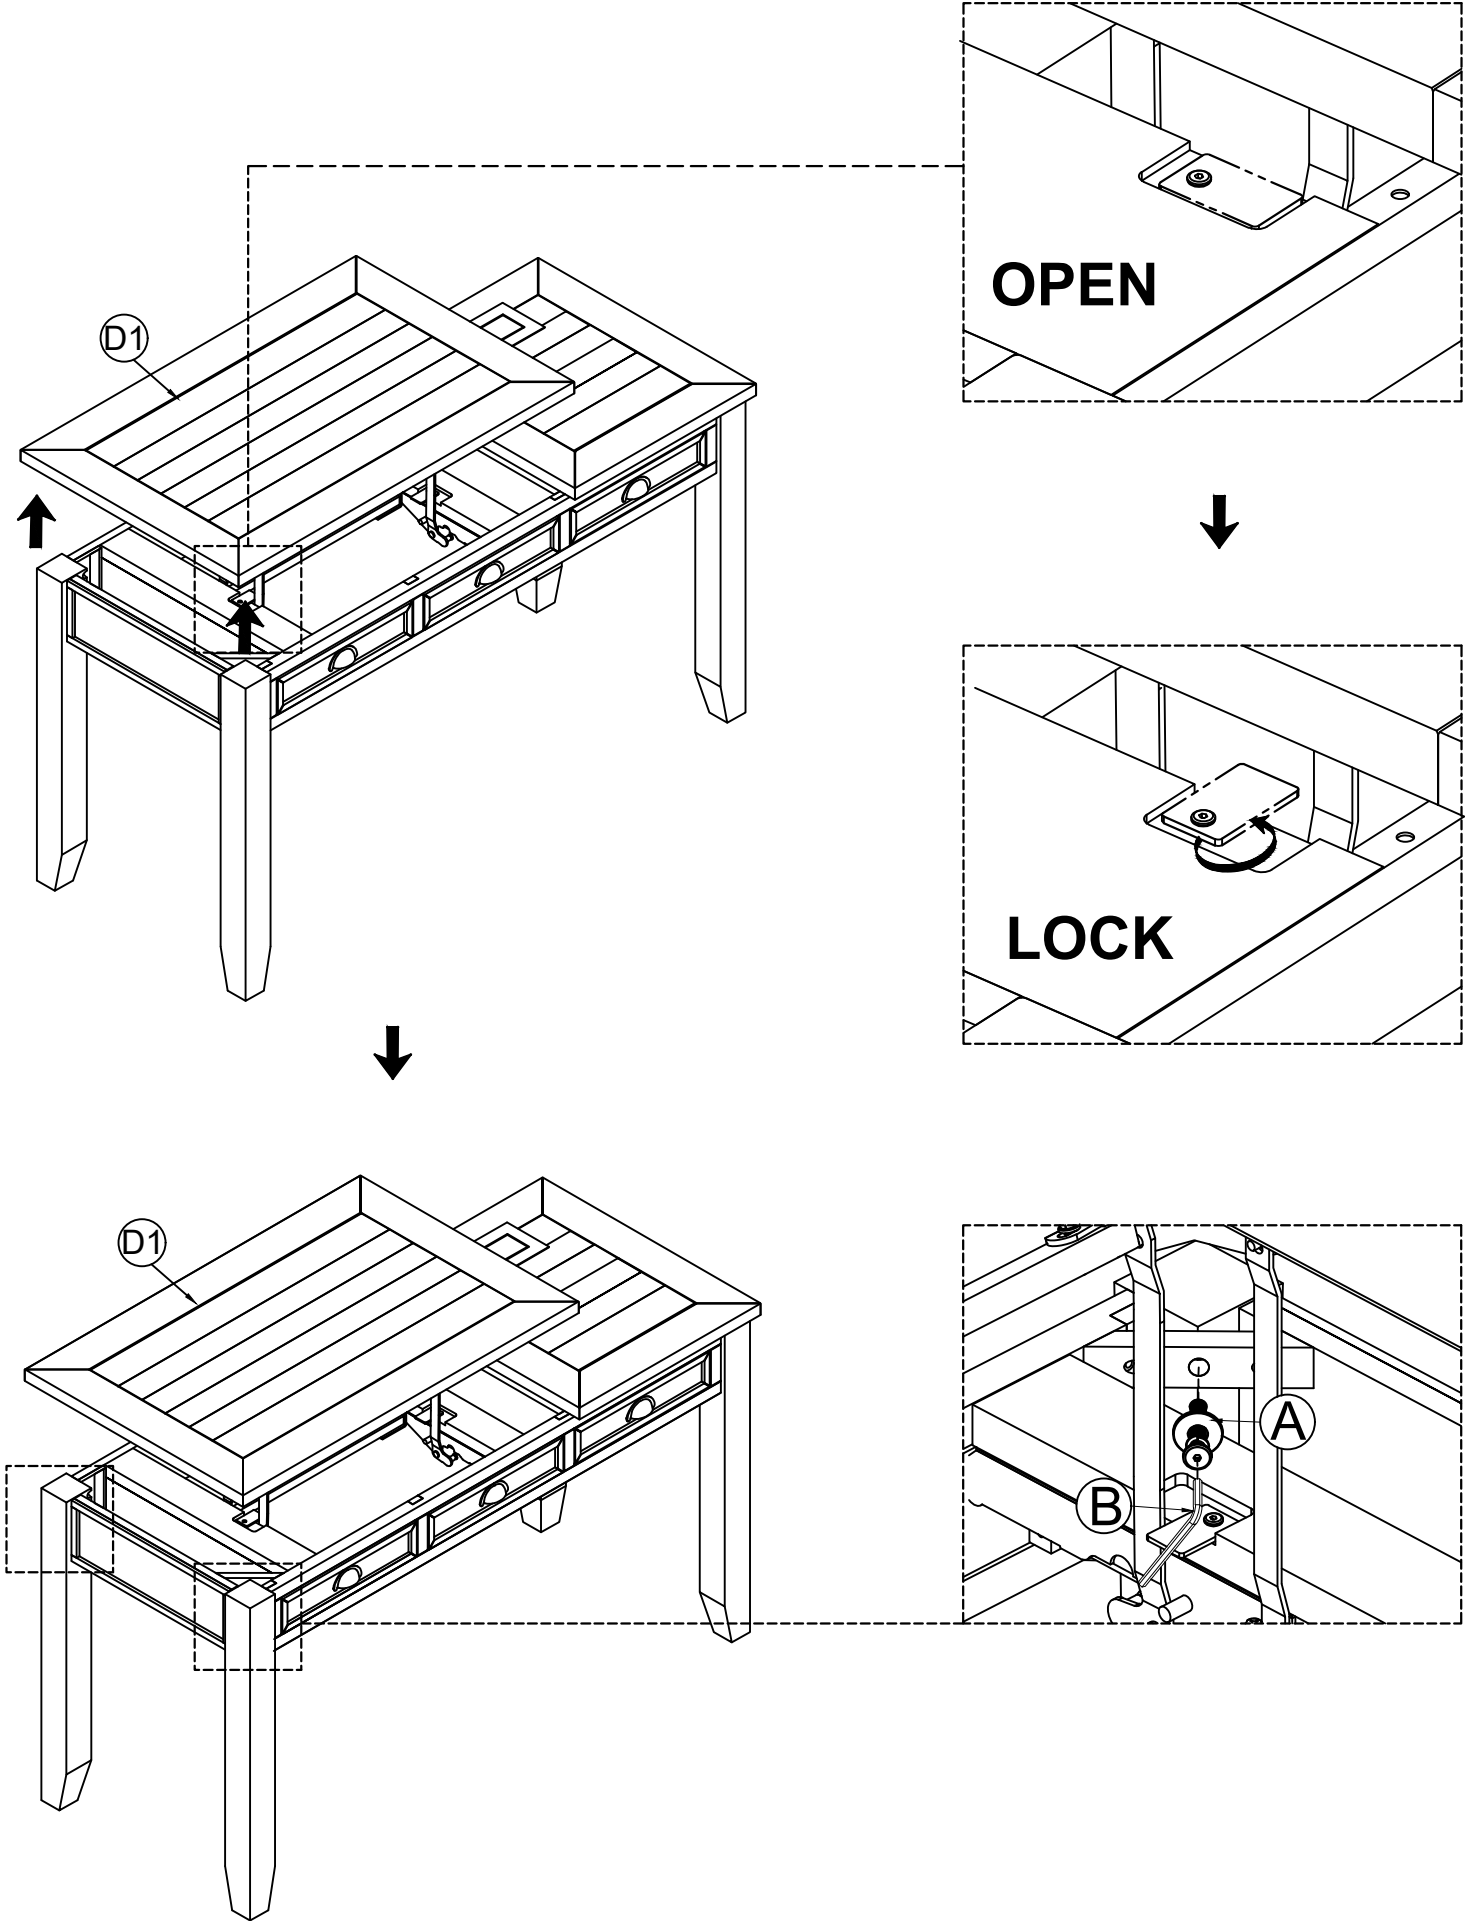

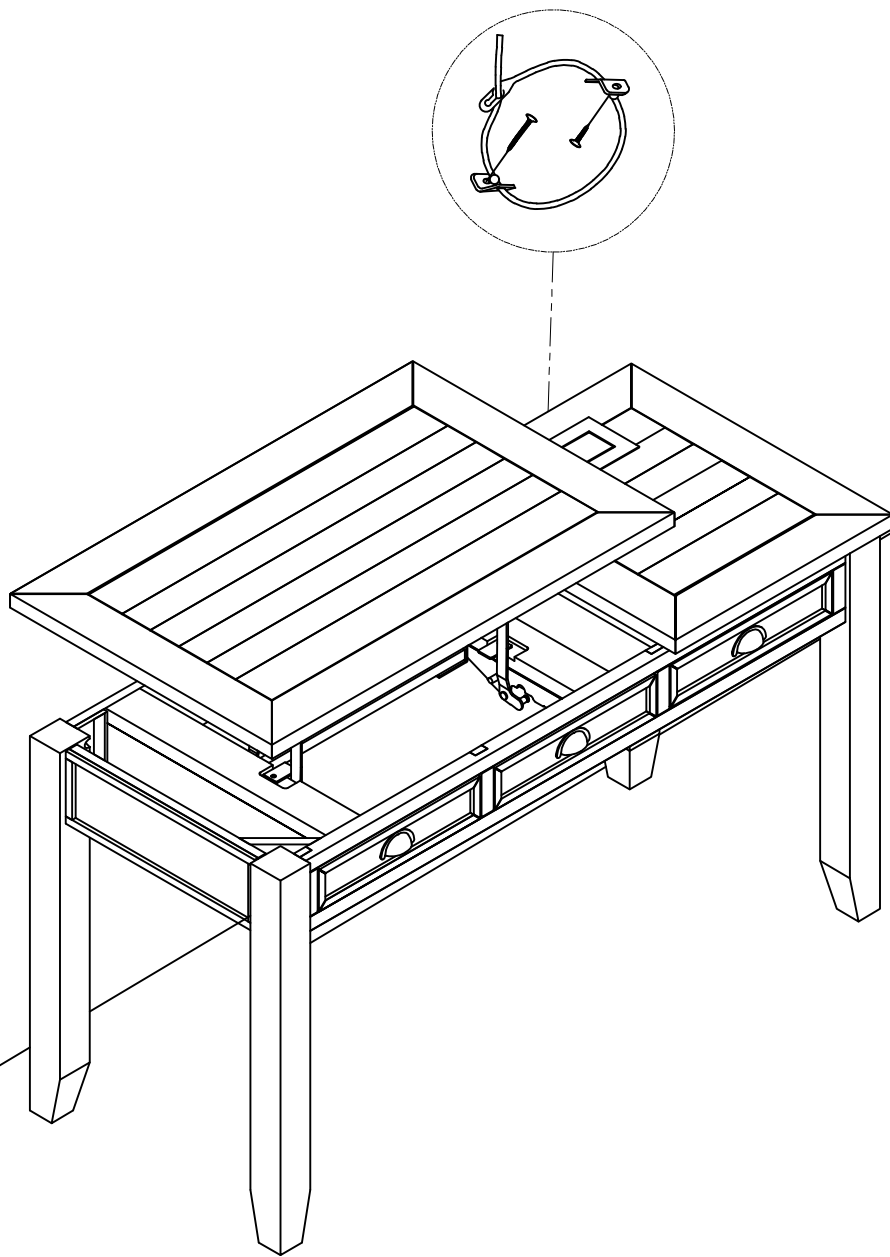

Personal Security Drawer User Guide

IMPORTANT:

Read all instructions prior to using the Personal Security Drawer Fingerprint Lock.

The Personal Security Drawer Fingerprint Lock is **NOT** a safe or lock box and is designed only to limit access.

The Personal Security Drawer Fingerprint Lock is in Factory Default mode, ANY fingerprint can open the lock.

Only successfully registered fingerprints can terminate Factory Default mode.

Before using the fingerprint lock, please fully charge the finger pad with a micro-USB cable (not provided)

Fingerprint Registration:

Administrator Fingerprint Registration:

Please note the first three (3) registered fingerprints are administrator fingerprints

1. Hold fingerprint for 5 seconds on the fingerprint reader and wait for the indicator light to flash blue
2. Remove finger and the indicator light will be solid blue, proceed to register fingerprint
3. Place finger on the reader and remove five (5) times
 - a. If a red light flashes, re-enter fingerprint
4. After five (5) successful entries, the indicator light will flash green indicating a successful entry
5. For Administrator Fingerprints 2-3 follow the "Additional Fingerprint" steps below and note that the 2nd and 3rd fingerprints are an Administrator

Additional Fingerprints:

1. Hold fingerprint for 5 seconds on the fingerprint reader and wait for the indicator light to flash blue
2. Use the Administrator fingerprint to authorize access to set new fingerprint and wait for approval
3. Place new finger on the reader and remove repeating five (5) times
 - a. Green flash will indicate successful reading
 - b. If a red light flashes, re-enter fingerprint
4. After five (5) successful entries, the indicator light will flash green indicating a successful entry for fingerprint

Fingerprint Deletion:

Option 1:

1. Hold fingerprint for ten (10) seconds
2. Blue light will flash when it switches to flashing red light remove finger
3. Enter Administrator fingerprint
4. Green light will flash when successful

5. All fingerprints will be deleted

Option 2:

1. Carefully insert the white micro-USB device into the side of finger pad unit
2. Touch the finger pad and the light will flash multiple colors
3. The lights will turnoff indicating the fingerprint registration has been successfully deleted



Using the Personal Security Drawer Fingerprint Lock:

To unlock the drawer use a fingerprint that has been successfully added

Green light will indicate that access has been granted for two (2) seconds and gently pull open the drawer.

Please note that after two (2) seconds if the drawer is not opened it will automatically lock with the blue light.

Red light will indicate that the verification has not passed and will not grant access.

Low Power Notice:

The indicator will flash red three times after unlocking indicating that the power is low and the battery needs to be charged.

The battery is rechargeable with a micro-USB cable (not provided). Please allow for approximately one (1) hour to charge. The battery charge will last approximately 3 months depending on how often one uses the lock.

Tips:

When entering a fingerprint, please enter at different angles to expand the fingerprint database.

Unable to unlock may mean the power is out and the battery needs to be fully charged.