



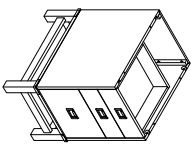



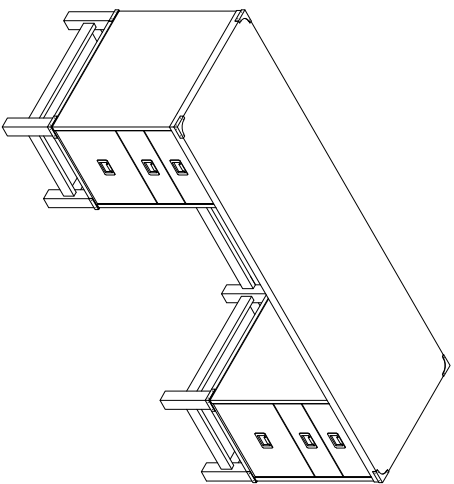




<p><b>(A)</b></p> <p>X1 Top panel *          X1 Panneau supérieur          X1 Panel superior</p> 		<p><b>(E)</b></p> <p>X2 Spring washer Ø1/4" *          X2 Rondelle à ressort Ø1/4"          X2 Arandela elástica Ø1/4"</p> 	
<p><b>(B)</b></p> <p>X1 Stretcher *          X1 Tendeur          X1 Camilla</p> 		<p><b>(F)</b></p> <p>X2 Flat washer Ø1/4" *          X2 Rondelle plate Ø1/4"          X2 Arandela plana Ø1/4"</p> 	
<p><b>(C)</b></p> <p>X2 Base *          X2 Basé          X2 Base</p> 		<p><b>(G)</b></p> <p>X1 Allen Key 4mm *          X1 Clé hexagonale 4mm          X1 Llave Allen 4mm</p> 	
<p><b>(D)</b></p> <p>X2 Short bolt Ø1/4" x20mm *          X2 Vis courte Ø1/4" x20mm          X2 Perno corto Ø1/4" x20mm</p> 		<p><b>(H)</b></p> <p>X8 Wood dowel (8x30mm) *          X8 Goujons de bois (8x30mm)          X8 Tarugo de madera (8x30mm)</p> 	<p>* Replaceable Part</p>




**Step 1.**

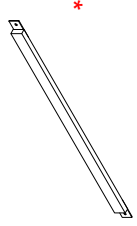Insert Wood dowels (Part H) on the side panel of base (Part C). Make sure that all of the switch locking hardware in the panels are in the open position as indicated by the straight arrow in the diagram. Align the hardware in the Top Panel (Part A) with the hardware on the side panel of base and press down so make sure the top panel is flush with the panels. Lock the top panel into place by turning the switches indicated the by the curved arrow in the diagram below.

\*\*\*Note that the file cabinet base ships in a separate carton which contains separate assembly instructions. Assembly of the file cabinet base should be completed before performing these steps.

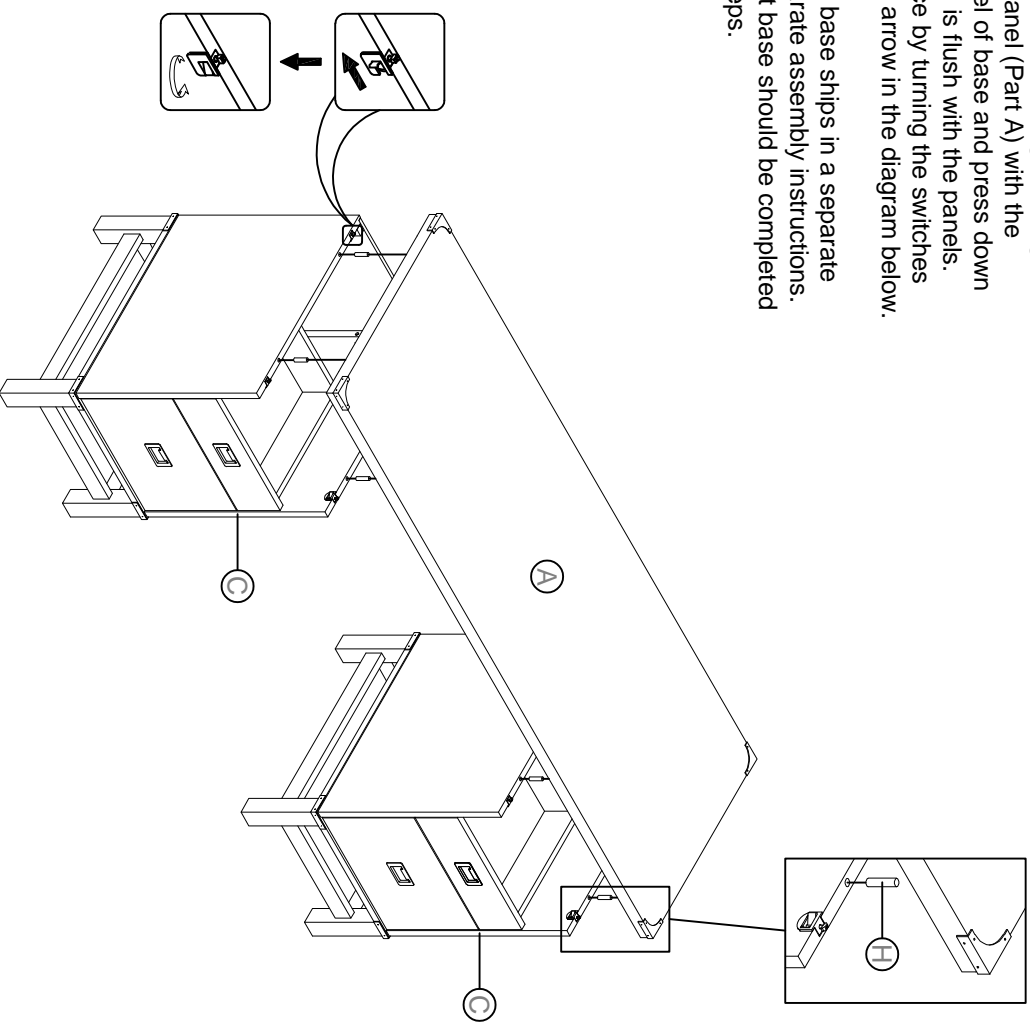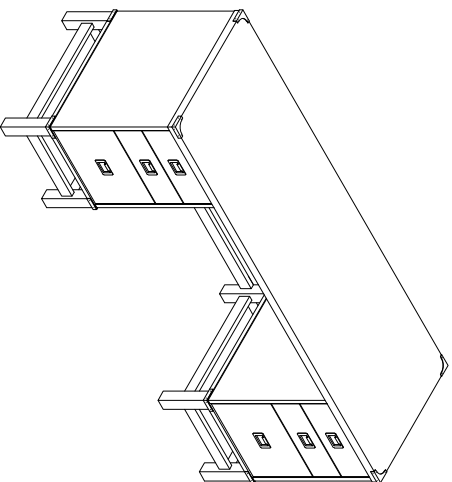


\* Replaceable Part

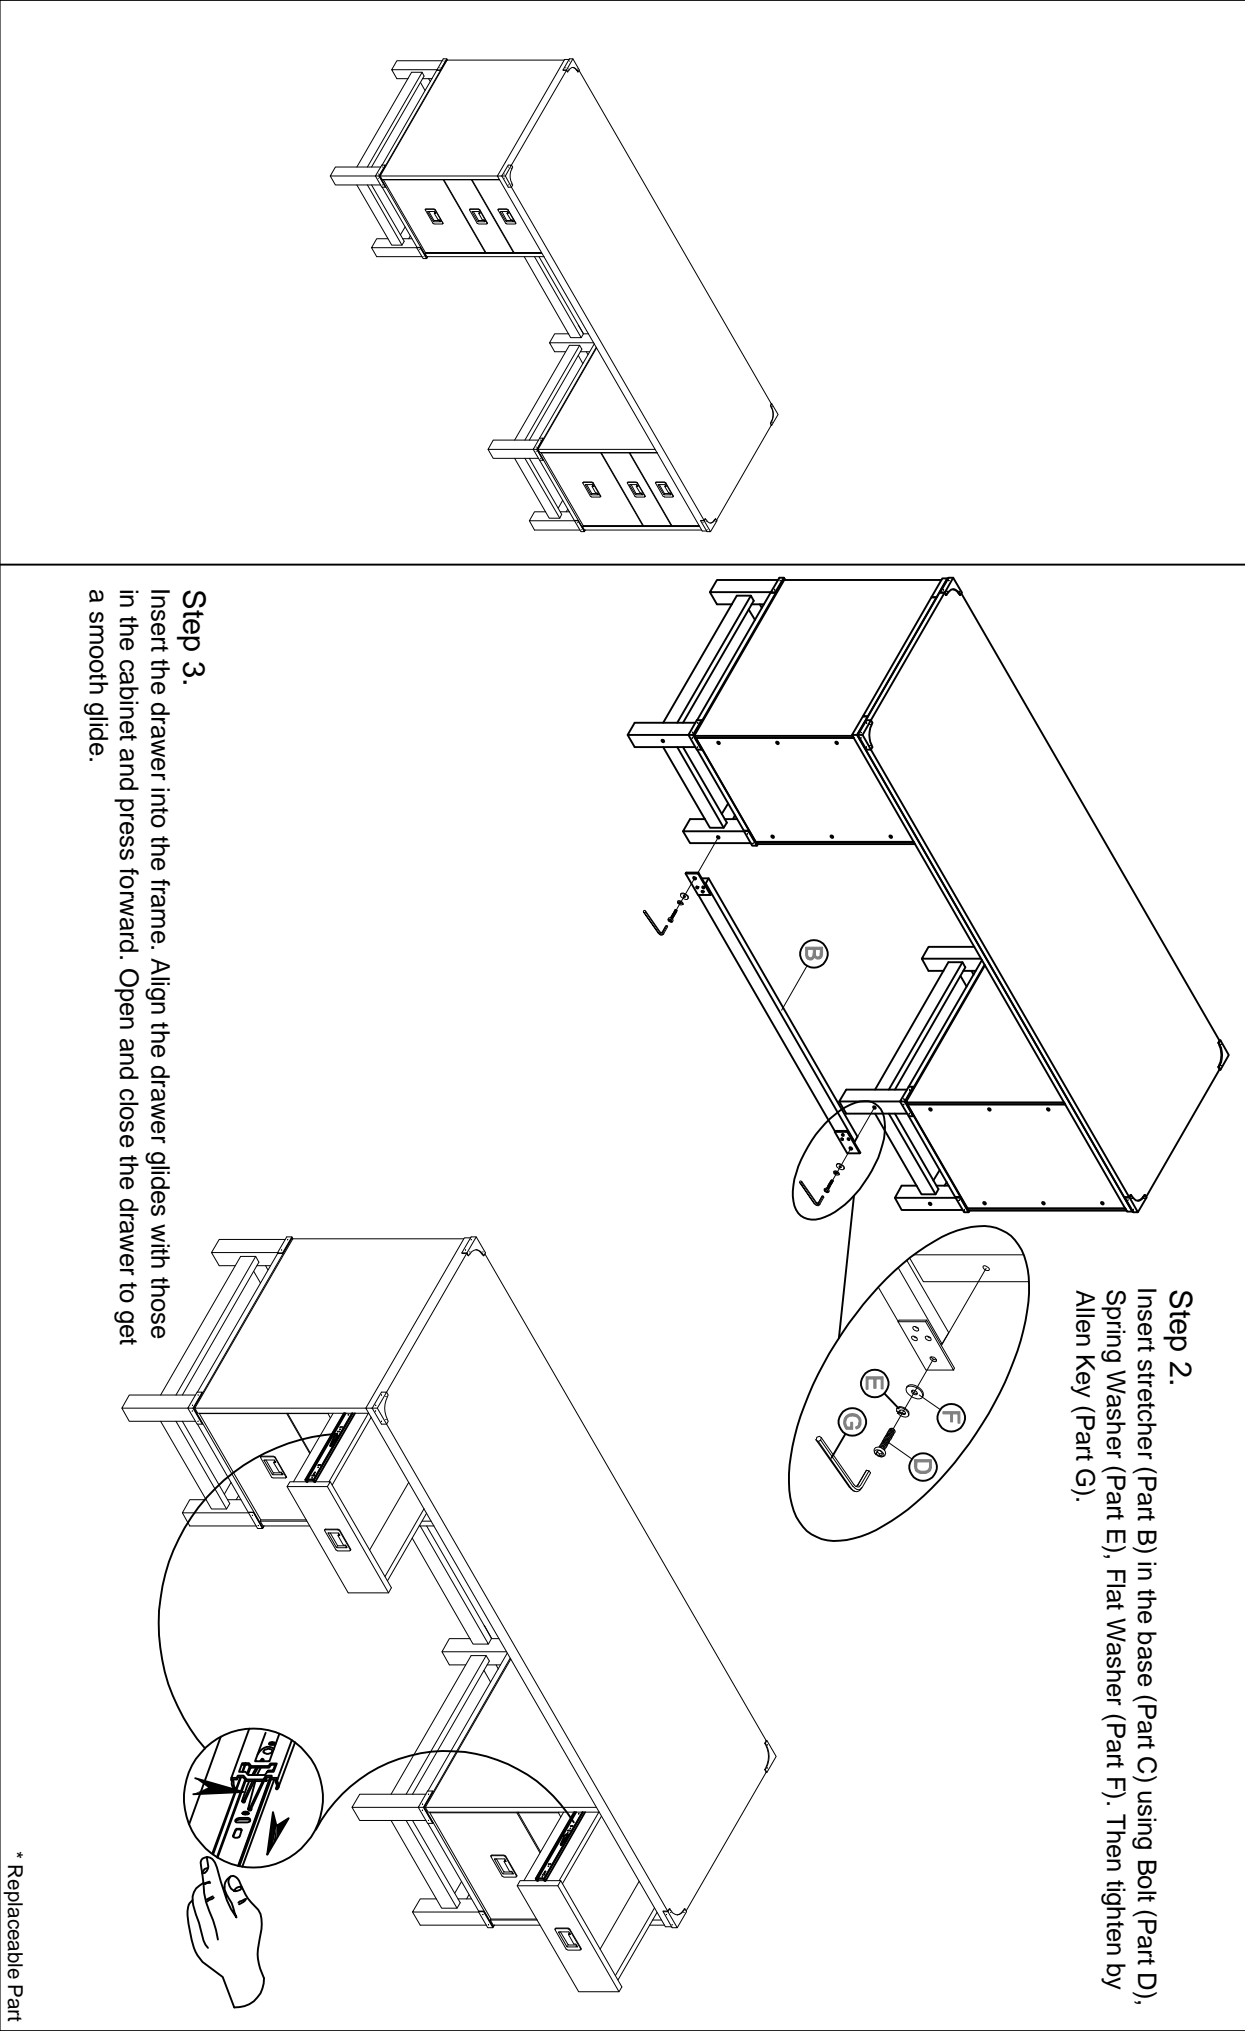

**Step 2.**  
 Insert stretcher (Part B) in the base (Part C) using Bolt (Part D), Spring Washer (Part E), Flat Washer (Part F). Then tighten by Allen Key (Part G).


**Step 3.**  
 Insert the drawer into the frame. Align the drawer glides with those in the cabinet and press forward. Open and close the drawer to get a smooth glide.

\* Replaceable Part

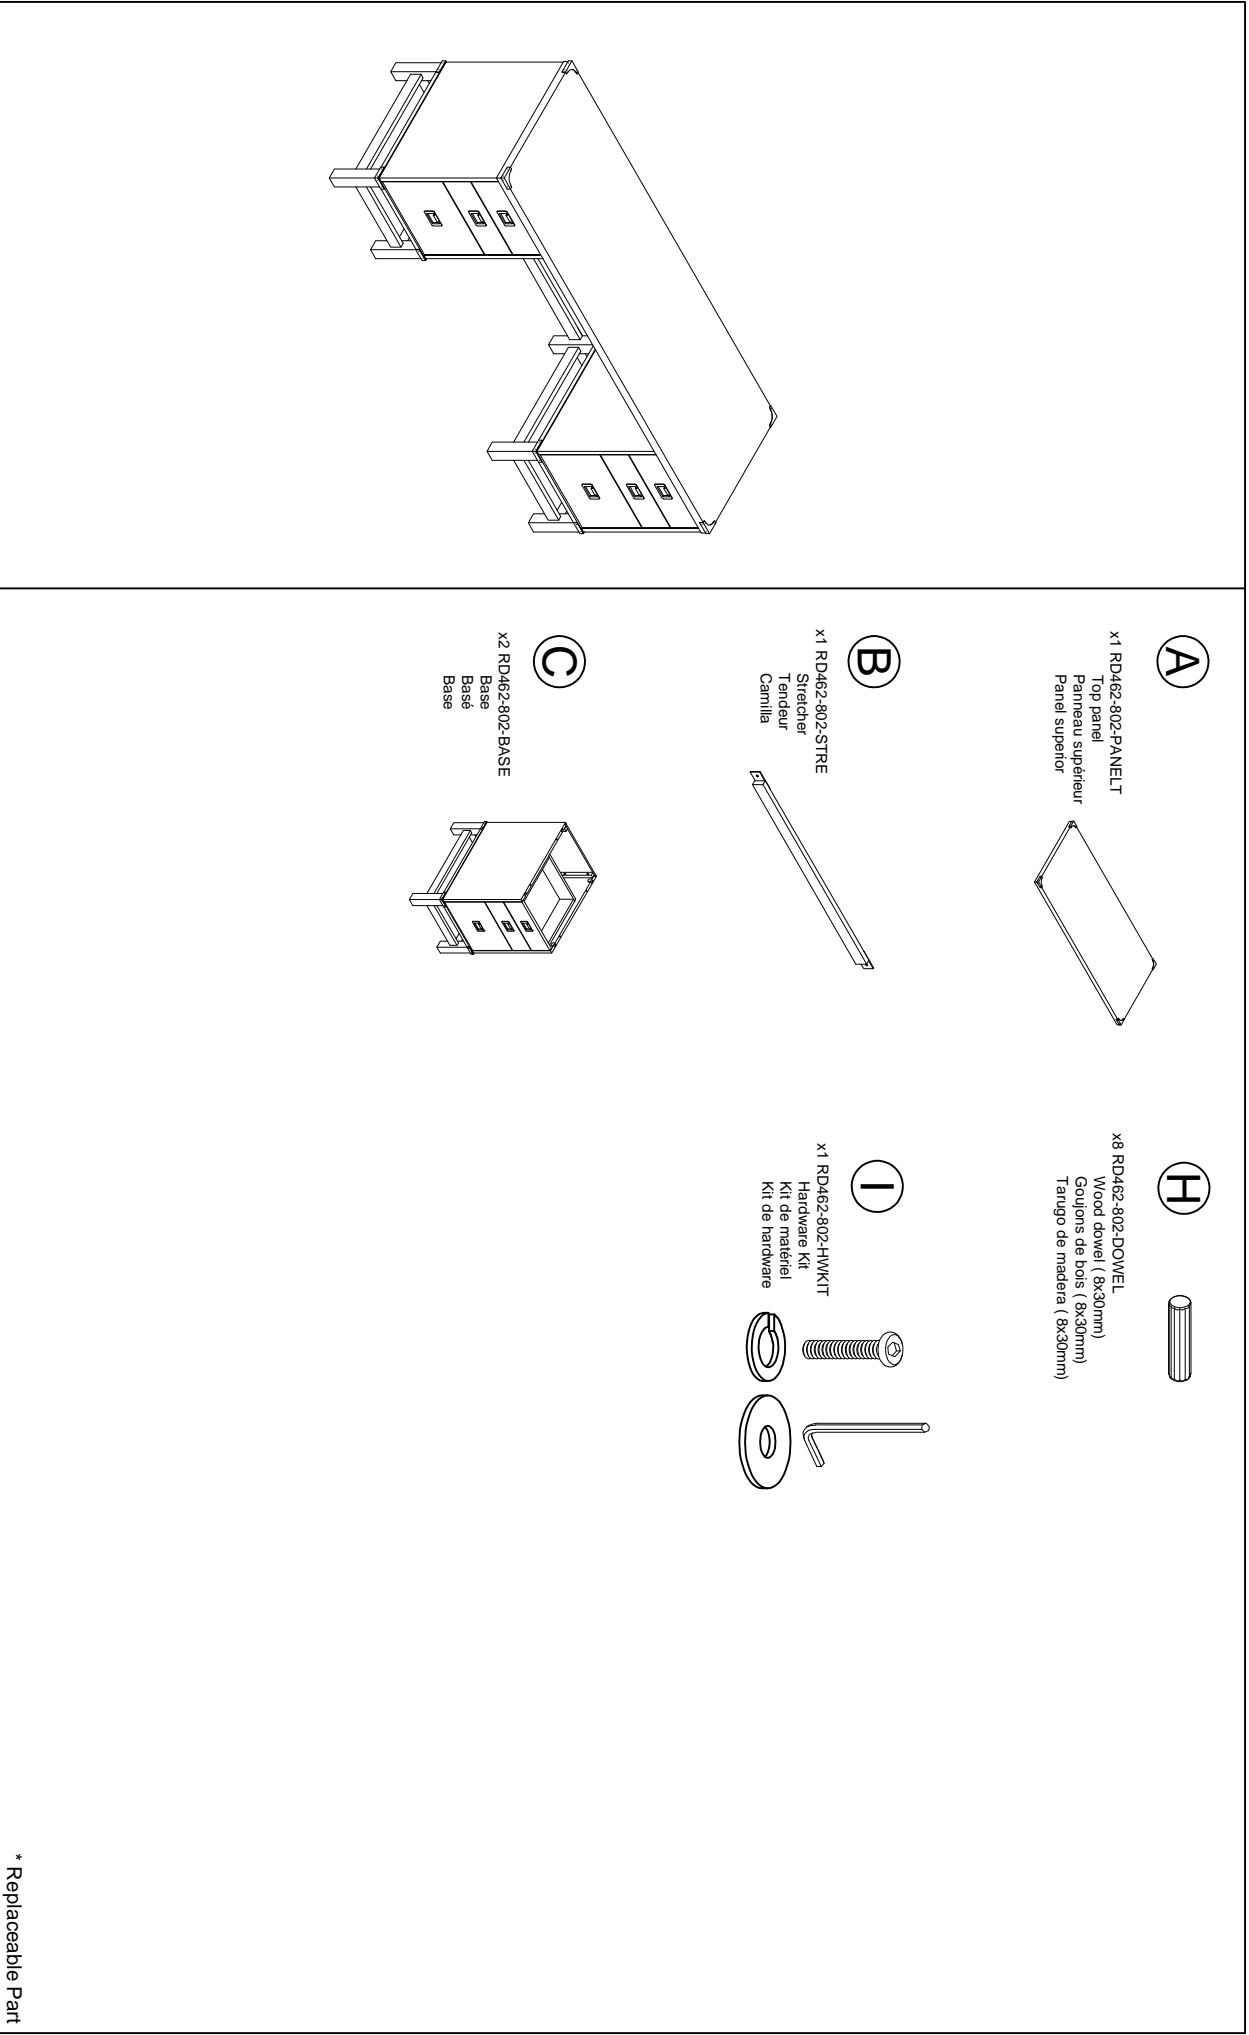

(A)

x1 RD462-802-PANELT  
 Top panel  
 Panneau supérieur  
 Panel superior

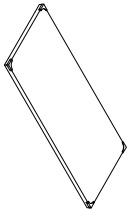


(H)

x8 RD462-802-DOWEL  
 Wood dowel ( 8x30mm)  
 Goujons de bois ( 8x30mm)  
 Tarugo de madera ( 8x30mm)




(B)

x1 RD462-802-STRE  
 Stretcher  
 Tendeur  
 Camilla

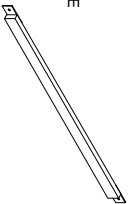


(I)

x1 RD462-802-HWKIT  
 Hardware Kit  
 Kit de matériel  
 Kit de hardware

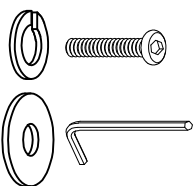

(C)

x2 RD462-802-BASE  
 Base  
 Basé  
 Base

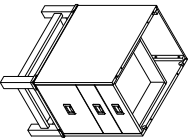

\* Replaceable Part