

 
FIBI

STYLE
7030
SKU
24070310-24070312


REV. **0**
Item Description
Transformation from TV cabinet
to fireplace cabinet

Date 15/06/2022
Sheet 1/2
Designer:
Luca Tontini


Hardware:
NOTE: Screwdriver NOT



- 1** Partially unscrew the screws that tighten the metal plates on the backpanel.
Rotate the metal plates downwards and fix in this position.
NOTE: Screwdriver NOT included

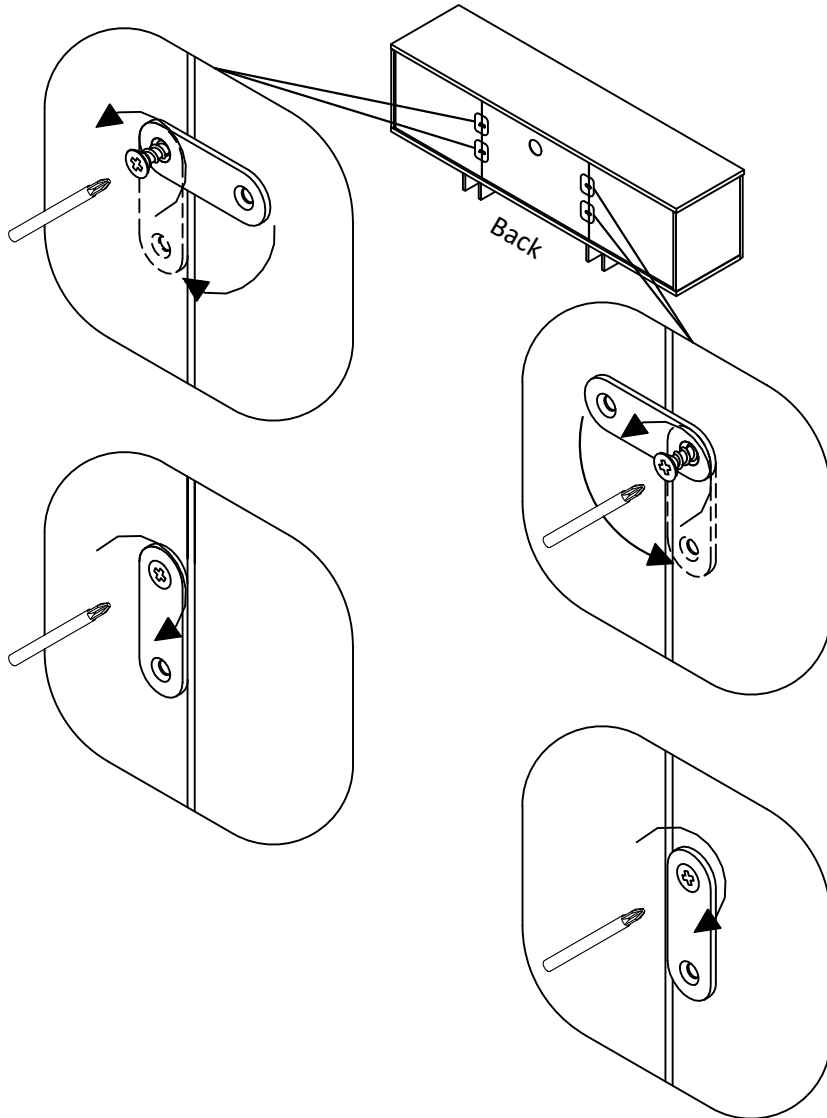


- 2** Remove central backpanel (backpanel with hole).

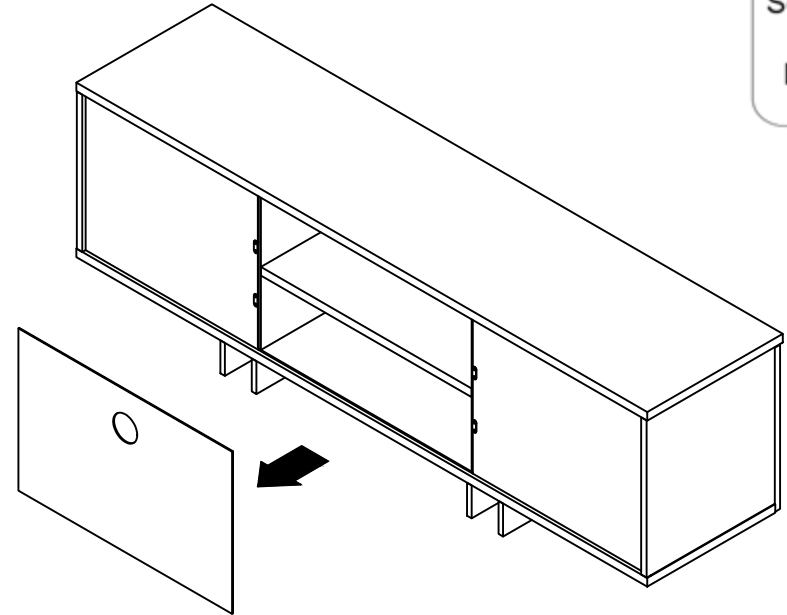

Screwdriver
Not
Included

- 3** Remove shelf.

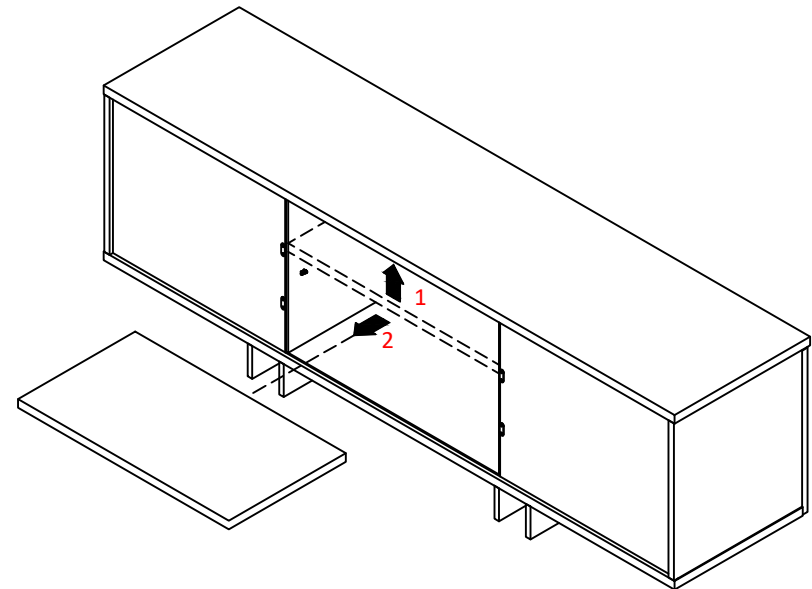





OR



4 Remove shelf supports (n° 4 pieces).

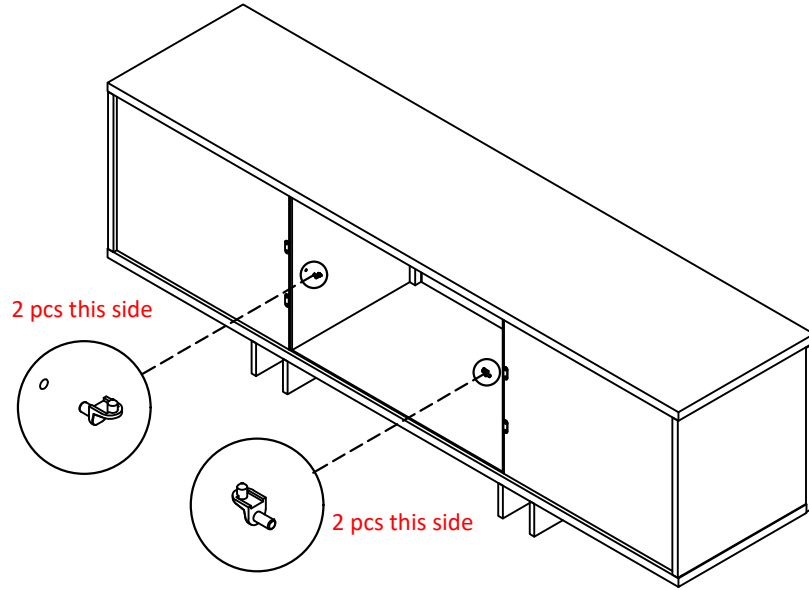

5 Place the electrical appliance and push it into the compartment.

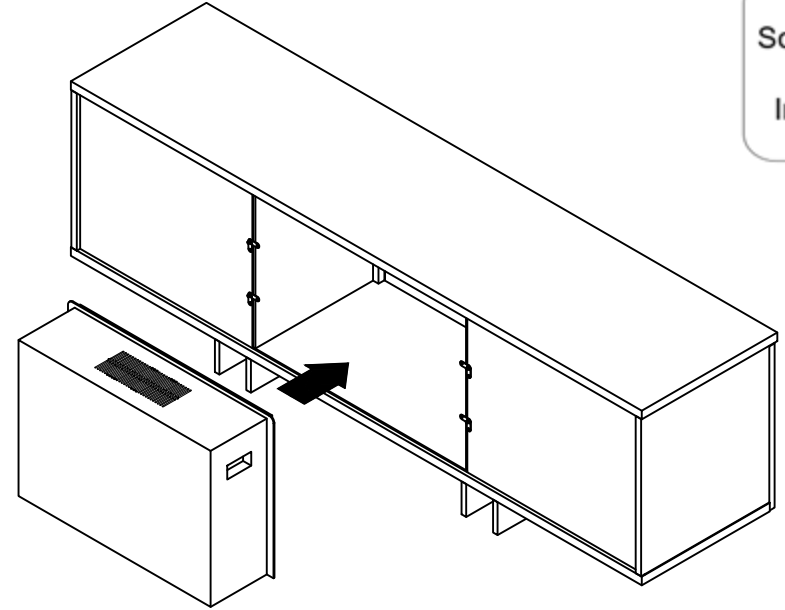

Screwdriver
Not
Included

6

