



 

 
# ASSEMBLY INSTRUCTIONS


MNFD 3603-72C 77" CONSOLE W/ CRYSTAL FIREBOX - SKU # 24136031

Manufactured by MNFD for Rooms To Go

Version 1.0 11-8-2024

THANK YOU FOR PURCHASING THIS QUALITY PRODUCT. BE SURE TO CHECK ALL PACKING MATERIALS CAREFULLY FOR SMALL HARDWARE WHICH MAY HAVE COME LOOSE INSIDE THE CARTON DURING SHIPMENT. IDENTIFY AND COUNT ALL HARDWARE AND COMPARE WITH THE HARDWARE LIST BELOW.

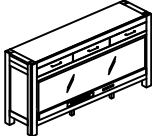
PARTS LIST			
NO.	Description	Sketch	Q' TY
A	Timber Console w/ Crystal Firebox		1 pc.
B	Firebox Remote Control		1 pc.
C	Firebox Decorative Glass		1 box.

HARDWARE			
NO.	Description	Sketch	Q' TY
1	Furniture Tipping Restraint		1set

Toll required (not provided)



 Philip Head Screwdriver

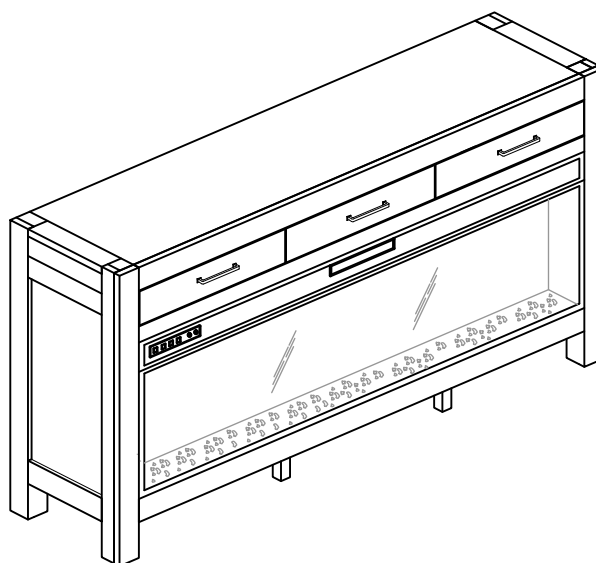



# ASSEMBLY INSTRUCTIONS

MNFD 3603-72C 77" CONSOLE W/ CRYSTAL FIREBOX - SKU # 24136031

Manufactured by MNFD for Rooms To Go


Version 1.0 11-8-2024



For Firebox installation and operating instructions, please refer to its manual for complete guidance.

## Anti-Tip hardware instruction

 Position 77" Console in its desired location. Refer to the assembly instruction of Anti tipping kit to fit **77" Console** to the wall.

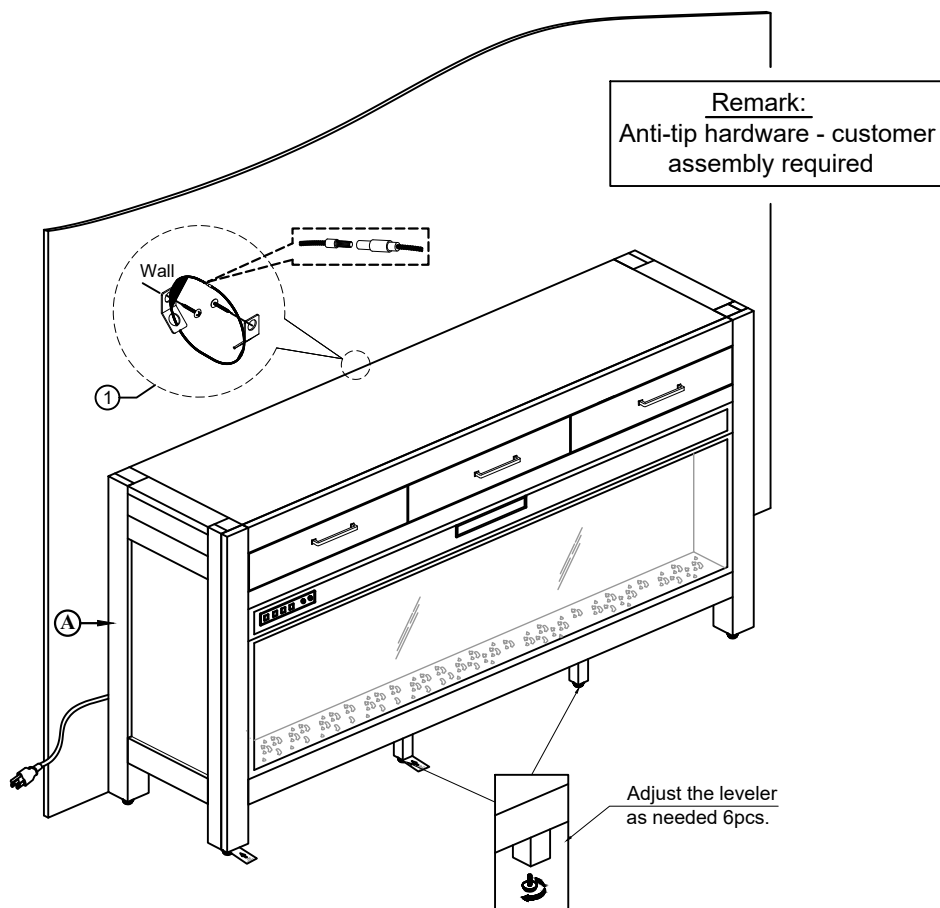



## ASSEMBLY INSTRUCTIONS

MNFD 3603-72C 77" CONSOLE W/ CRYSTAL FIREBOX - SKU # 24136031

Manufactured by MNFD for Rooms To Go

Version 1.0 11-8-2024

THANK YOU FOR PURCHASING THIS QUALITY PRODUCT. BE SURE TO CHECK ALL PACKING MATERIALS CAREFULLY FOR SMALL HARDWARE WHICH MAY HAVE COME LOOSE INSIDE THE CARTON DURING SHIPMENT. IDENTIFY AND COUNT ALL HARDWARE AND COMPARE WITH THE HARDWARE LIST BELOW.

**WARNING** - For use with televisions weighing 90lbs/ 40.82 Kgs or less.

Use with heavier televisions may result in instability causing tip over resulting in death or serious injury.

Plasma/ LCD-flat panel TV screen of various screen size to a maximum TV screen size 77 inches. Each shelf should not be loaded more than 20lbs/ 9.07 Kgs. Each drawer should not be loaded more than 10lbs/ 4.54 Kgs.

**DO NOT EXCEED RECOMMENDED LOAD.** Use with products heavier than the maximum in instability causing possible injury. Do not allow children under 16 years old to move unit. Always place TV no more than two inches from the back edge of the console. Placing TV more than two inches from the back edge may increase the risk that the console will tip over.

**DO NOT REMOVE THIS LABEL**

**WARNING** - Death or serious injury may occur when children climb on audio and/ or video equipment furniture. A remote control or toys placed on the furnishing may encourage a child to climb on the furnishing and as a result the furnishing may tip over on to the child.

**WARNING** - Relocate audio and/ or video equipment to furniture not specifically designed to support audio and/ or video equipment may result in death or serious injury due to the furnishing collapsing or overturning onto the child.

 
Manufactured by **DUNG KHANH COMPANY LIMITED**  
Address: **THANH PHU AREA INDUSTRIAL PARK, THIEN  
TAN COMMUNE, VINH CUU DISTRICT,  
DONG NAI PROVINCE**

# Using the Remote Control


## 1 Installing the battery

The battery is supplied with the remote control. The first thing to do with the remote control is to remove the plastic sheet insulated the battery. For replacement battery, use lithium-based CR2025 battery. Please follow the sequence below to replace the battery.


- Follow the guide below to take out the battery bracket.

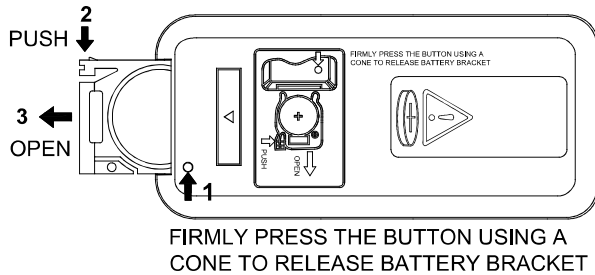

 - Insert the battery with the button side into the battery bracket, making sure the battery is firmly seated.

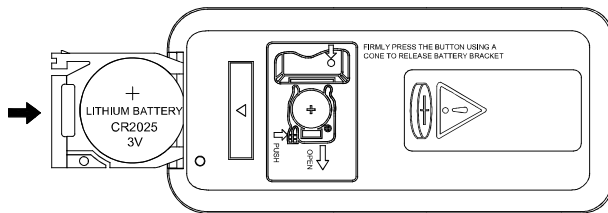

 - Press the battery bracket into the remote control, making sure it snaps into position.

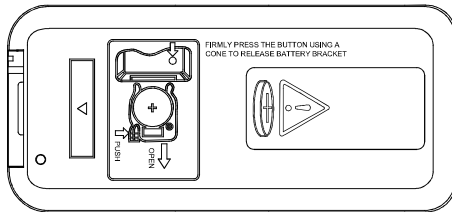

- Turn the remote over and aim it towards the fireplace/heater unit.
- Press the power button on the top and see if the light on the fireplace/heater turns on or off.
- If nothing appears to happen, check to make sure the battery is installed correctly, and try again.


## Battery Safety Warning

 - Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate.
- Even used batteries may cause severe injury or death.
- Call a local poison control center for treatment information.
- Compatible battery type: CR2025.
- Nominal battery voltage: 3 V.
- Non-rechargeable batteries are not to be recharged.
- Do not force discharge, recharge, disassemble, heat above 60°C or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.
- Ensure the batteries are installed correctly according to polarity (+ and -).
- Do not mix old and new batteries, different brands or types of batteries, such as alkaline, carbon-zinc, or rechargeable batteries.
- Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations.
- Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children.



### NOTE:


Battery disposal  
Please always dispose of batteries at a suitable recycling point.



## Using the Remote Control (continued)

### 2 Using the remote control

 - The operation of the remote control buttons works the same as the buttons on the front panel of the fireplace/heater. Review the operation section for more information on the functionality of these buttons.

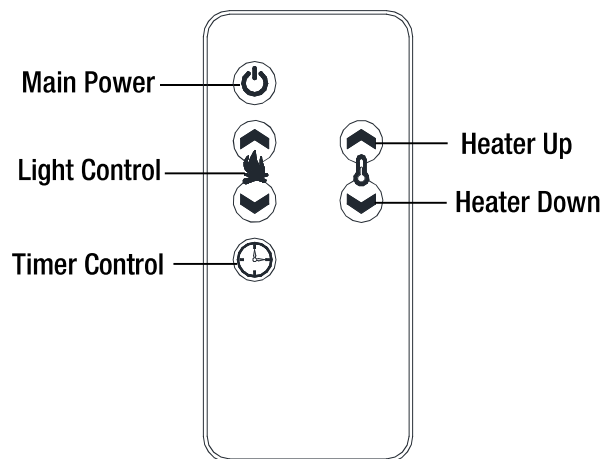

## Care and Maintenance



**WARNING:** Always disconnect from the power supply before cleaning the heater. First turn off the main power. Then remove the electrical plug from the wall outlet.

 


**WARNING:** Do not use this fireplace insert if any part of it has been under water. Immediately call a qualified service technician to inspect the firebox and replace any part of the electrical system which has been under water.

The blower motor and light motor are pre-lubricated for a durable using time and need no further lubrication or maintenance. To remove any accumulation of dust or debris, the soft brush attachment of a vacuum cleaner should occasionally be used to clean the outlet grille of the fan heater.

- Use a soft, clean cloth that will not scratch the surface when dusting.
- Use a clean, soft cloth dampened with warm water to clean the fireplace surface. DO NOT use household or abrasive cleaners, as these products may damage the surface.
- When cleaning the glass viewing screen use a non-abrasive damp cloth with liquid cleaner or soft soap if necessary; DO NOT use cleaning powders or any other substance with abrasives since these substances will scratch glass.
- Under no circumstances should this product be operated with a broken or chipped glass panel.
- Do not strike or slam the glass.
- In the event that your appliance is stained or otherwise damaged during use, we recommend that you call a professional to repair it.
- When not in use please unplug the cord from the outlet to prevent any damage or accidents.

# IMPORTANT SAFETY INSTRUCTIONS

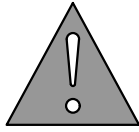

## WARNING

Misuse can result in FIRE or DEATH by ELECTRICAL SHOCK

ELECTRICAL RATING: 120V / 11.7A / 1500W

MANUFACTURER: Viet Nam Smart Electronic Production CO.,LTD

MODEL # IMFB26L / IMFB42L / IMFB60L / IMFB72L / IMFB26C IMFB42C  
/ IMFB42C / IMFB60C / IMFB72L

Read all instructions before using this furnishing.

**DANGER** - To reduce the risk of electrical shock

- Always unplug this furnishing from the electrical outlet before cleaning or servicing.

**WARNING** - To reduce the risk of burns, fire, electrical shock, or injury to persons:

- Unplug from outlet before putting on or taking off parts.
- Never operate this furnishing if it has a damaged electrical cord or plug, if it is not working properly, or if the electrical cord or plug has been damaged or dropped into water. Stop using this furnishing and call a service center for examination and repair.
- Keep the electrical cord and plug away from heated surfaces and other heat sources.
- To disconnect, turn all controls to the off position, then remove plug from outlet.
- When operating, ensure that electrical cord is not under the base, legs, or motion mechanism to avoid damage to electrical cord or plug.
- Do not strain or stretch electrical cord.
- Do not use extension cords or power strips.
- Keep out of reach of children. This is not a toy.
- Plug directly into a compatible electrical socket.
- Do not modify the plug or use any adapters.

## INSTRUCCIONES DE SEGURIDAD IMPORTANTES



# WARNING

**El mal uso puede provocar INCENDIO o MUERTE por DESCARGA ELÉCTRICA**

CLASIFICACION ELECTTRICA: 120 V / 11.7 A / 1500

FA BRICANTE: Viet Nam Smart Electronic Production CO.,LTD

MODELO #IMFB26L / IMFB42L / IMFB60L /IMFB72L /IMFB26C /  
IMFB42C / IMFB60C / IMFB72C

**Leer todas las instrucciones antes de usar este mobiliario.**

**PELIGRO – Para reducir el riesgo de descarga electrica:**

- Siempre desenchufe este accesorio de la toma de corriente eléctrica antes de limpiarlo o re pararlo.

**ADVERTENCIA: para reducir el riesgo de quemaduras, incendios, descargas eléctricas o lesiones a personas:**

- Desenchufe del tomacorriente antes de colocar o quitar partes.
- Nunca opere este accesorio si tiene un cable o enchufe eléctrico dañado, si no funciona correctamente, o si el cable o el enchufe eléctrico se ha dañado o se ha caído al agua. Deje de usar este equipamiento y llame a un centro de servicio para que lo examinen y lo reparen.
- Mantenga el cable eléctrico y el enchufe lejos de superficies calientes y otras fuentes de calor.
- Para desconectar, gire todos los controles a la posición de apagado, luego retire el enchufe del tomacorriente.
- Al operar, asegúrese de que el cable eléctrico no esté debajo de la base, las patas o el mecanismo de movimiento para evitar dañar el cable eléctrico o el enchufe.
- No fuerce ni estire el cable eléctrico.
- No utilizar cables de extensión o tomas de corriente.
- Mantener fuera del alcance de los niños. Esto no es un juguete.
- Enchúfelo directamente a una toma de corriente compatible.
- No modifique el enchufe ni utilice adaptadores.