

# ASSEMBLY INSTRUCTIONS

## TALL TV CONSOLE

**MODEL No. 6176X-HF**  
**6176X-BL**  
**6176X-HB**  
**6176X-CH**

**Important:** Be sure to check all packing material carefully for small parts which may come loose inside carton during shipment. separate, identify and count all parts and metal hardware. compare with parts list and hardware illustrations to be sure all parts are present. if any part(s) are missing or damage, contact your dealers customer services department. for efficient and fast service, please indicate the model number and the parst needed.

**ATTENTION:** Some lettered parts listed on the instruction sheets may not be in the parts bag, they may already be assembled.

**TOOLS REQUIRED**  
(Not included)  
Phillips Screwdriver


**HARDWARE:**  
CAP NUT 1/4-20 X 17 Part No. HIN-17 (1 Pc)  
BOLT 1/4-20 X 30mm Part No.HCPP-30 (1 Pcs)  
L-Allen key 4mm Part No.HIN-04 (1 Pcs)  
Anti-Tip Part No. HB-488 (1 pc.)



**6176X-HF**  
**6176X-BL**  
**6176X-HB**  
**6176X-CH**

**6149X-HF**  
**6149X-BL**  
**6149X-HB**  
**6149X-CH**

**6176X-HF**  
**6176X-BL**  
**6176X-HB**  
**6176X-CH**

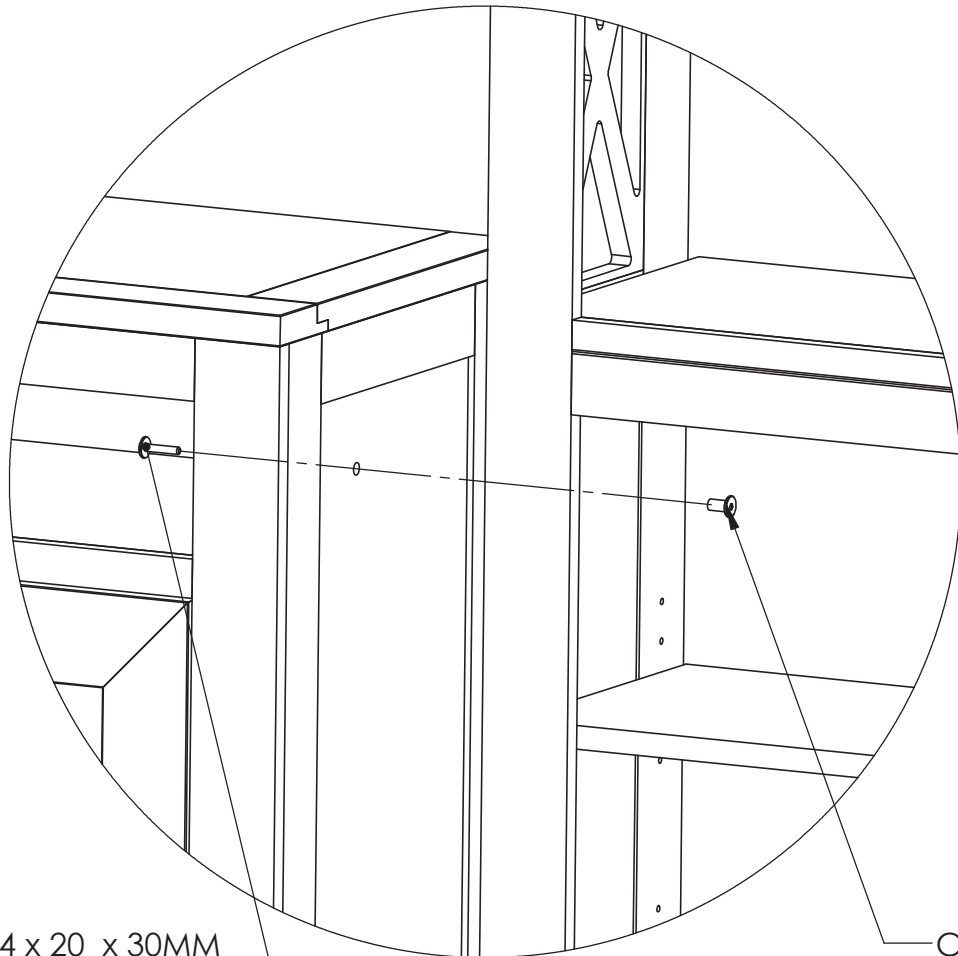

Bolt 1/4 x 20 x 30MM  
HCPP-30

Cap Nut  
HIN-17