

FIBI

STYLE
7030
SKU
24170324-24070322

REV.
0

Item Description
Transformation from TV cabinet
to fireplace cabinet

Date 15/06/2022

Sheet 1/2

Designer:
Luca Tontini

Hardware:


NOTE: Screwdriver NOT included




OR




- 1** Partially unscrew the screws that tighten the metal plates on the backpanel.
Rotate the metal plates downwards and fix in this position.
NOTE: Screwdriver NOT included

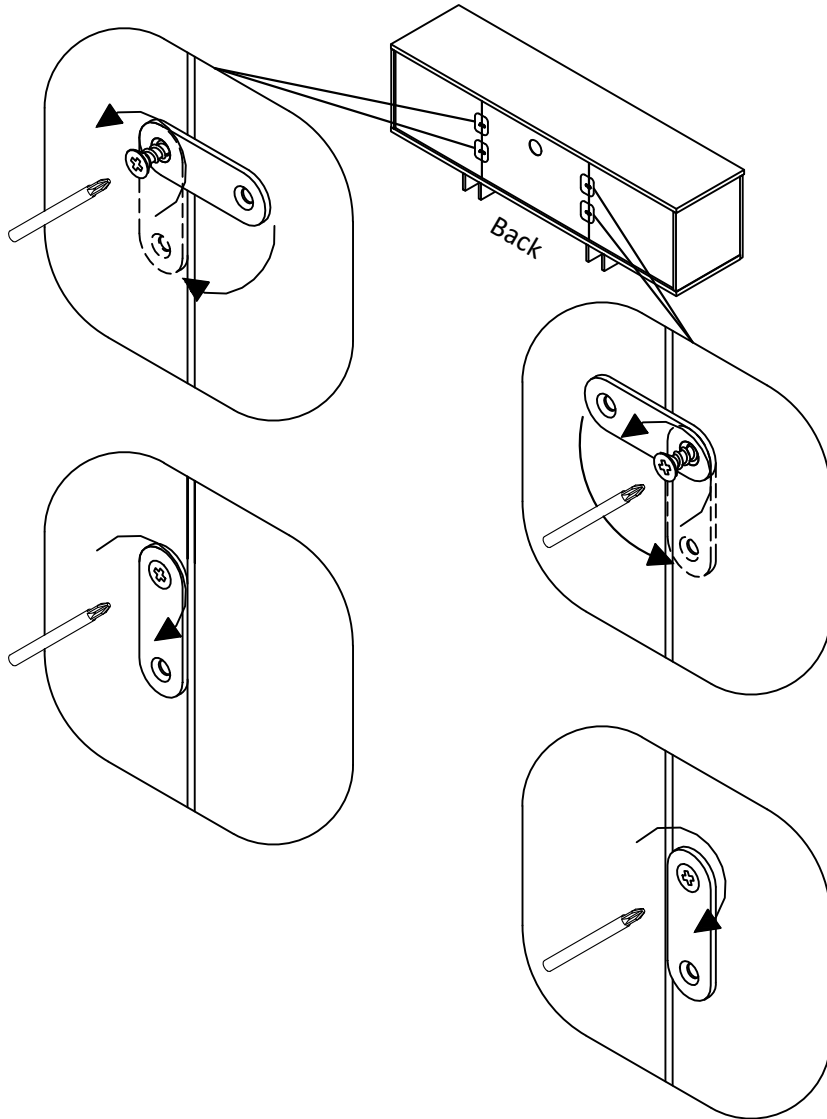

- 2** Remove central backpanel (backpanel with hole).

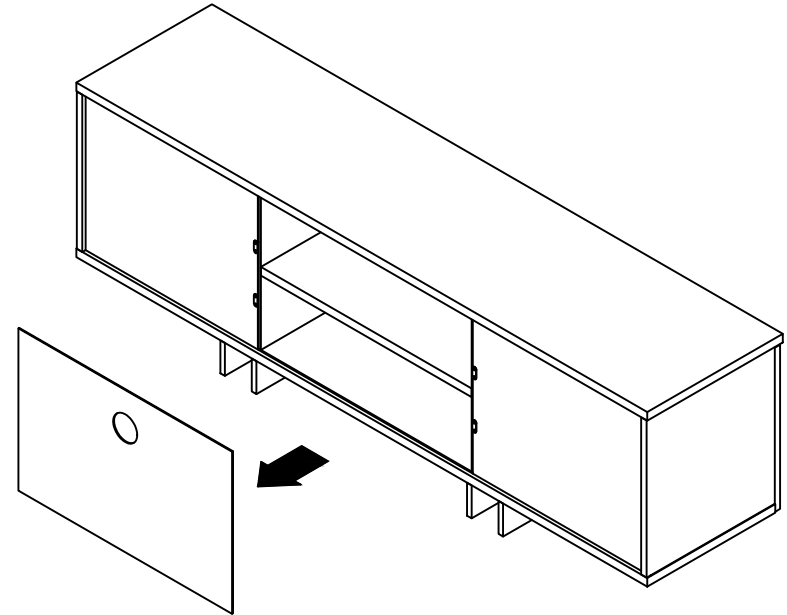


- 3** Remove shelf.

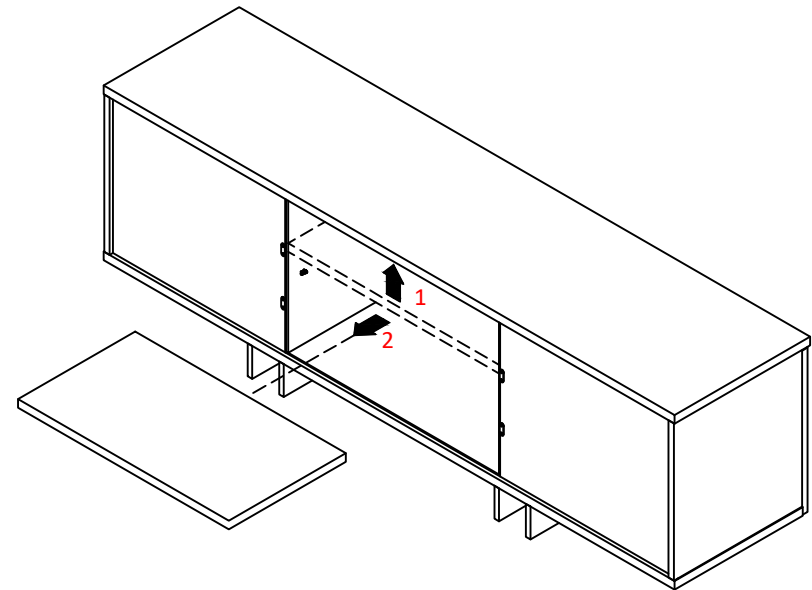




OR

 


4

Remove shelf supports (n° 4 pieces).

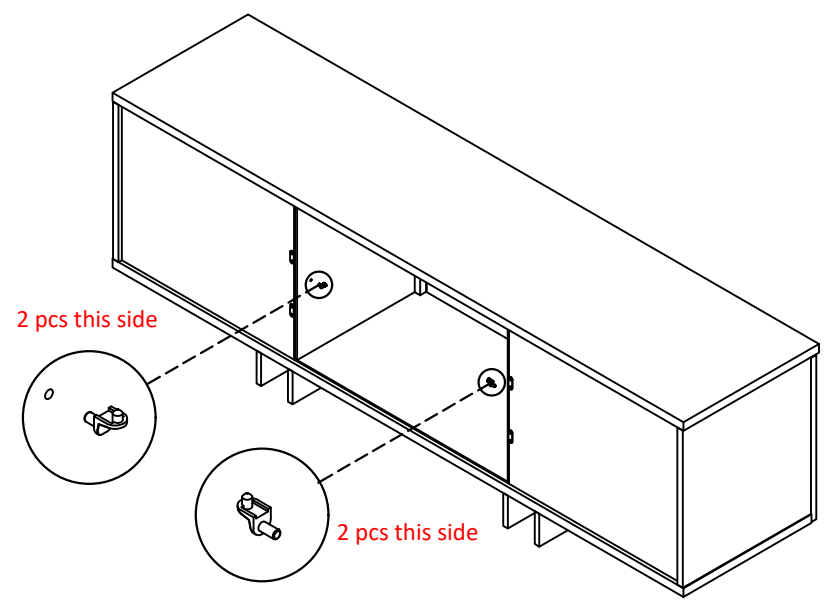

5

Place the electrical appliance and push it into the compartment.

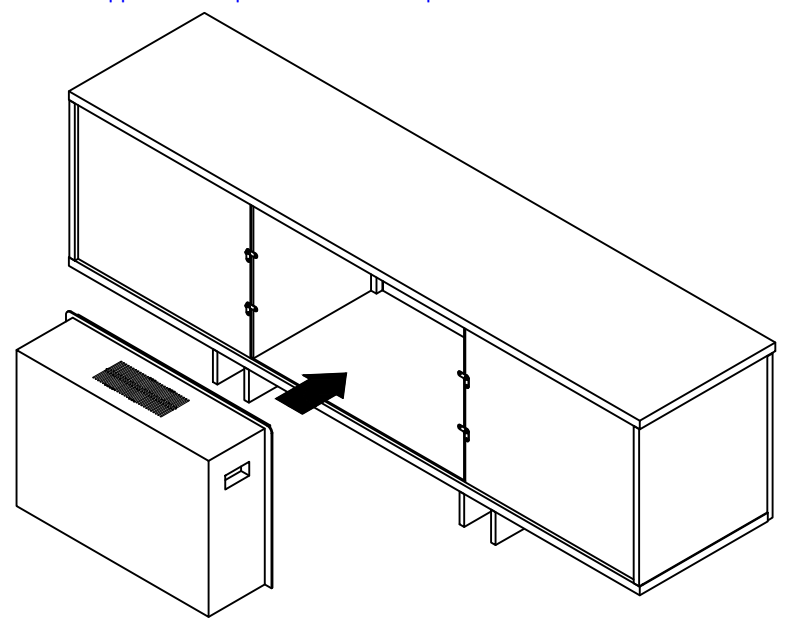

6

