

Assembly Instructions

ASPN I3314-284-BLU 84" CONSOLE W/ 2 DOORS SKU # 24233140

ASPN I3314-284-WHT 84" CONSOLE W/ 2 DOORS SKU # 24233152

Version #1 - 2025/06/09

***Caution: Please read all instructions carefully before starting the assembly process. These parts are cumbersome and heavy. Therefore, two people are recommended in order to prevent personal injury and ensure the parts are not damaged during the assembly.

No.	Parts List	Q'ty
1	84" CONSOLE W/ 2 DOORS	1 PC
2	LEG	4 PCS
3	SUPPORT LEG	1 PC
4	SUPPORT LEG - BACK	2 PCS

TOOLS REQUIRED (NOT PROVIDED)


PHILLIPS SCREWDRIVER




HARDWARE LIST

No.	Description	Sketch	Quantity
A	Allen Key 4mm		1 PC
B	Anti-Tip Device		1 Set
Pre-installed on Part 1&4	Allen Bolt Ø5/16"x18x2"		18 PCS
	Lock Washer Ø5/16"		18 PCS
	Flat Washer Ø5/16"x3/4"x1/16"		18 PCS
	T Nut Ø5/16"x3/4"x3/8"		18 PCS

ANTI-TIP DEVICE MUST BE INSTALLED BY CUSTOMER

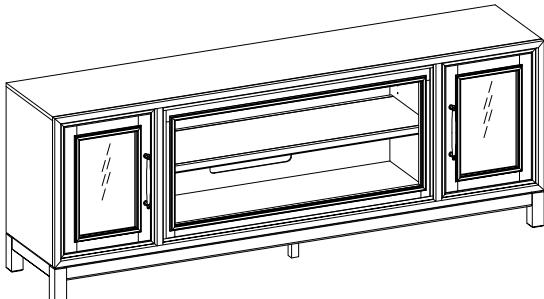


Option 1

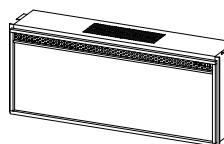

Fireplace

User manual for the 42" fireplace is in the fireplace package. Follow the below instructions when attaching the fireplace to this TV stand.

Note: The fireplace isn't provided

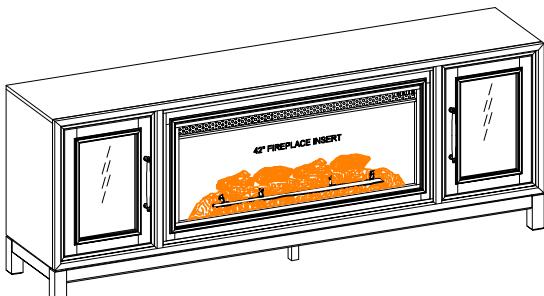

Option 2

Hardware Pack Location(S):

ASPN I3314-284-BLU 84" CONSOLE W/ 2 DOORS SKU # 24233140

ASPN I3314-284-WHT 84" CONSOLE W/ 2 DOORS SKU # 24233152

This product is manufactured by ASPN for

ROOMS TO GO ▶

MADE IN VIETNAM

1 OF 5

Assembly Instructions

ASPN I3314-284-BLU 84" CONSOLE W/ 2 DOORS SKU # 24233140
ASPN I3314-284-WHT 84" CONSOLE W/ 2 DOORS SKU # 24233152


Version #1 - 2025/06/09

***Caution: Please read all instructions carefully before starting the assembly process. These parts are cumbersome and heavy. Therefore, two people are recommended in order to prevent personal injury and ensure the parts are not damaged during the assembly.

STEP 1: Put the console (1) face down on a soft surface.

STEP 2: Attach the legs (2) and Support Legs-Back (4) to the bottom of console (1), then use an allen wrench (A) to tighten all the bolts.

STEP 3: Attach the support leg (3) as shown below.

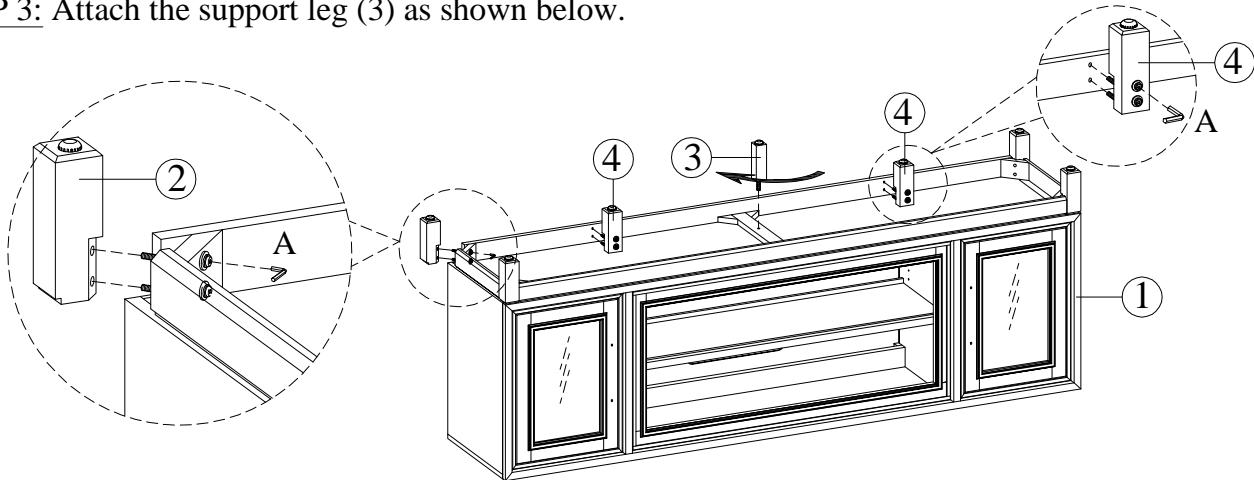


STEP 4: Return the assembled console to the upright position.

STEP 5: Reverse each handle by removing the screws while each door is open and attach all handles to the front of the doors with screws as shown below.

FUNCTIONALITY INSTRUCTION

OPTION 1:

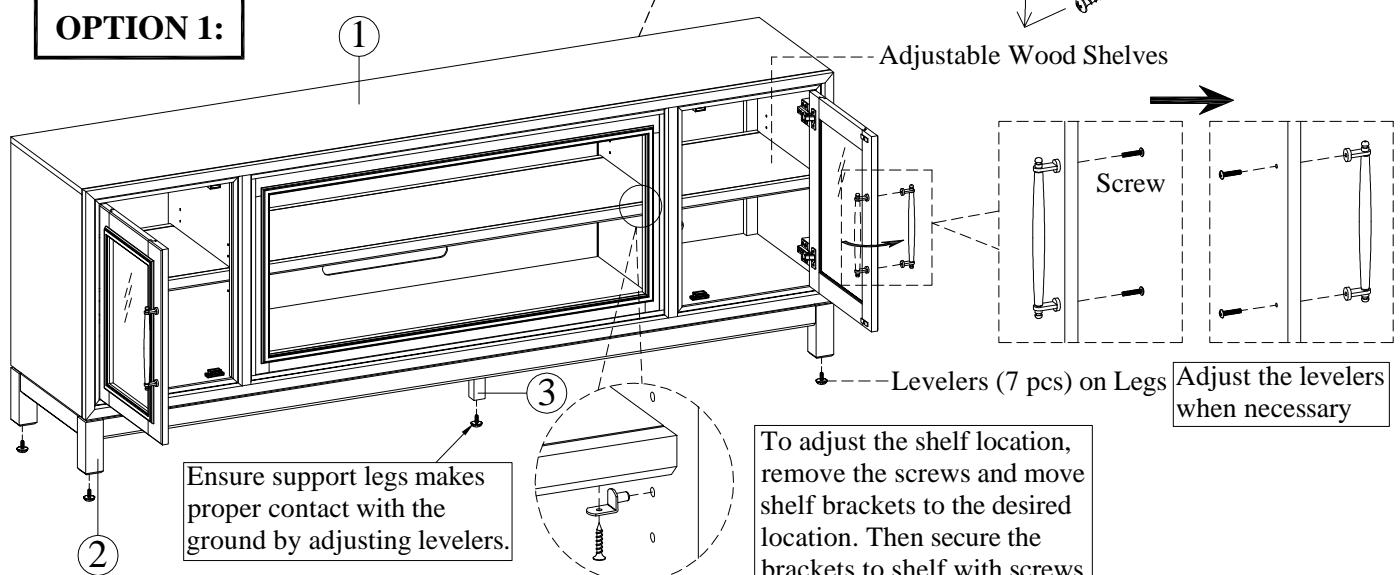

This product is manufactured by ASPN for

ROOMS TO GO 

MADE IN VIETNAM

2 OF 5

Assembly Instructions

ASPN I3314-284-BLU 84" CONSOLE W/ 2 DOORS SKU # 24233140


ASPN I3314-284-WHT 84" CONSOLE W/ 2 DOORS SKU # 24233152

Version #1 - 2025/06/09


***Caution: Please read all instructions carefully before starting the assembly process. These parts are cumbersome and heavy. Therefore, two people are recommended in order to prevent personal injury and ensure the parts are not damaged during the assembly.

For OPTION 2:

STEP 6: Remove the back panel as shown.

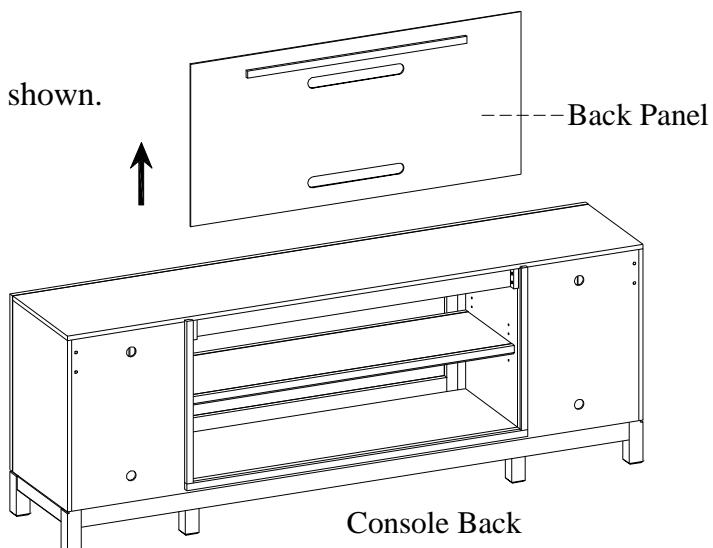


STEP 7: Remove the back rail w/pre-installed hardware as shown below. Save it to re-attach in STEP 11.

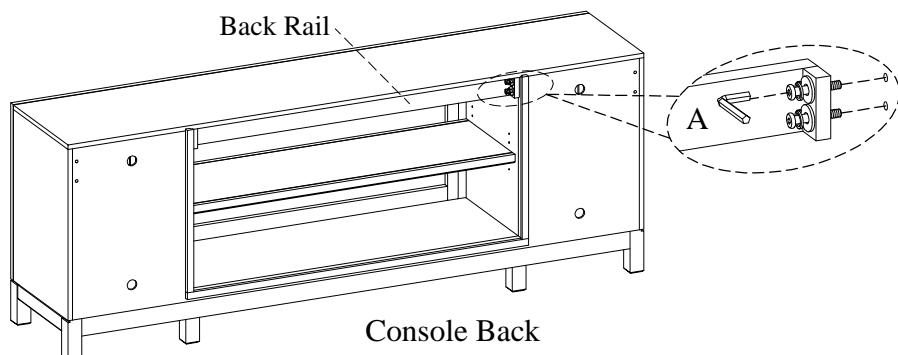

STEP 8-1: Remove the screws on shelf brackets, take out the wood shelf and the shelf brackets as shown below. Keep the wood shelf and its hardware in a proper place for future use.

STEP 8-2: Remove the wood blocks w/pre-installed hardware under the top panel as shown below, save them to re-attach in STEP 10.

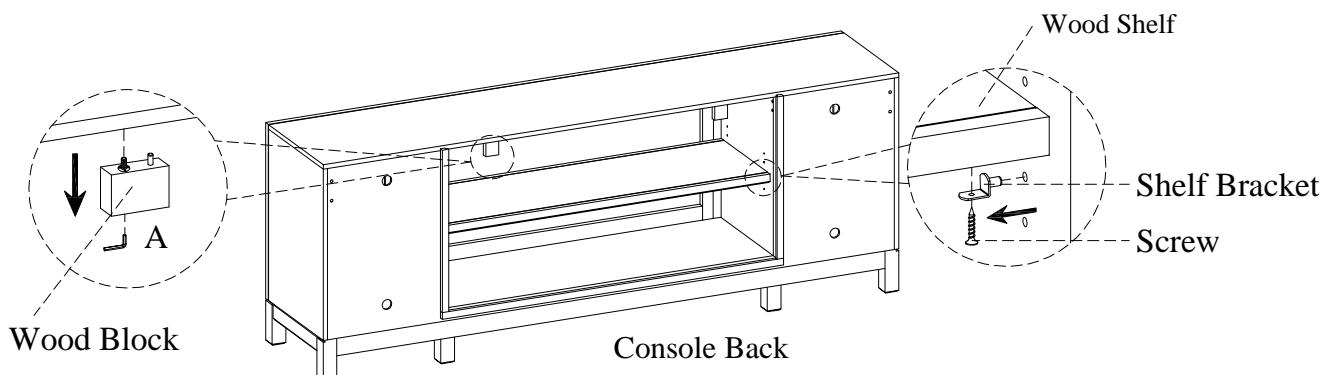

Assembly Instructions


ASPN I3314-284-BLU 84" CONSOLE W/ 2 DOORS SKU # 24233140

ASPN I3314-284-WHT 84" CONSOLE W/ 2 DOORS SKU # 24233152


Version #1 - 2025/06/09

***Caution: Please read all instructions carefully before starting the assembly process. These parts are cumbersome and heavy. Therefore, two people are recommended in order to prevent personal injury and ensure the parts are not damaged during the assembly.

STEP 9: Insert the 42" fireplace.

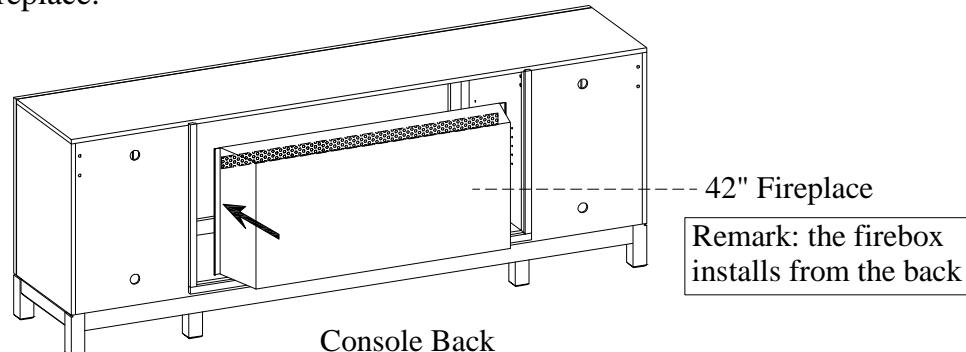


STEP 10: Attach the wood blocks w/pre-installed hardware under the top panel by using an allen wrench (A).

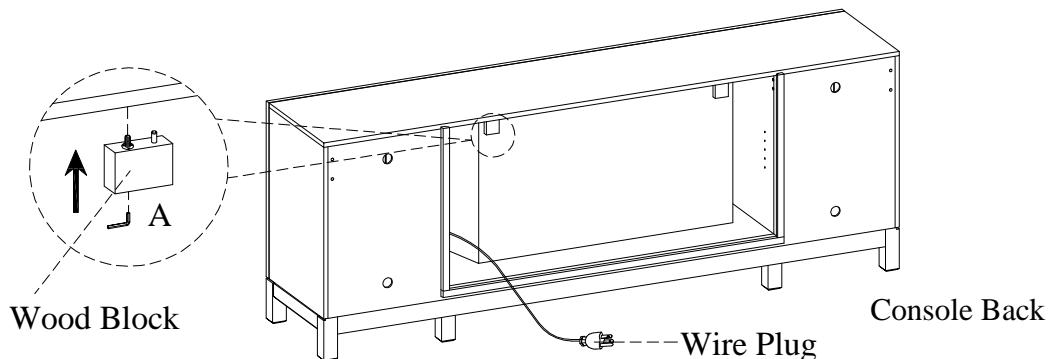

STEP 11: Attach the back rail w/pre-installed hardware by using an allen wrench (A).

NOTE: WHEN USING OPTION 2, FIREPLACE, DO NOT RE-ATTACH THE BACK PANEL FOR VENTILATION PURPOSE.

Keep the back panel in a proper place for future use.

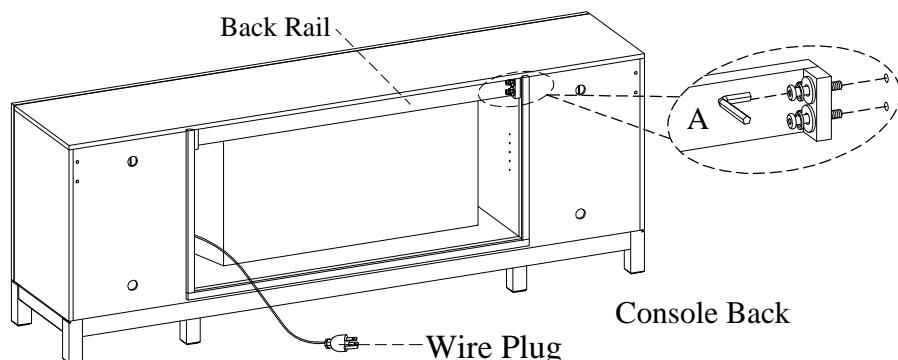

Assembly Instructions

ASPN I3314-284-BLU 84" CONSOLE W/ 2 DOORS SKU # 24233140


ASPN I3314-284-WHT 84" CONSOLE W/ 2 DOORS SKU # 24233152

Version #1 - 2025/06/09

***Caution: Please read all instructions carefully before starting the assembly process. These parts are cumbersome and heavy. Therefore, two people are recommended in order to prevent personal injury and ensure the parts are not damaged during the assembly.

FUNCTIONALITY INSTRUCTION

OPTION 2:

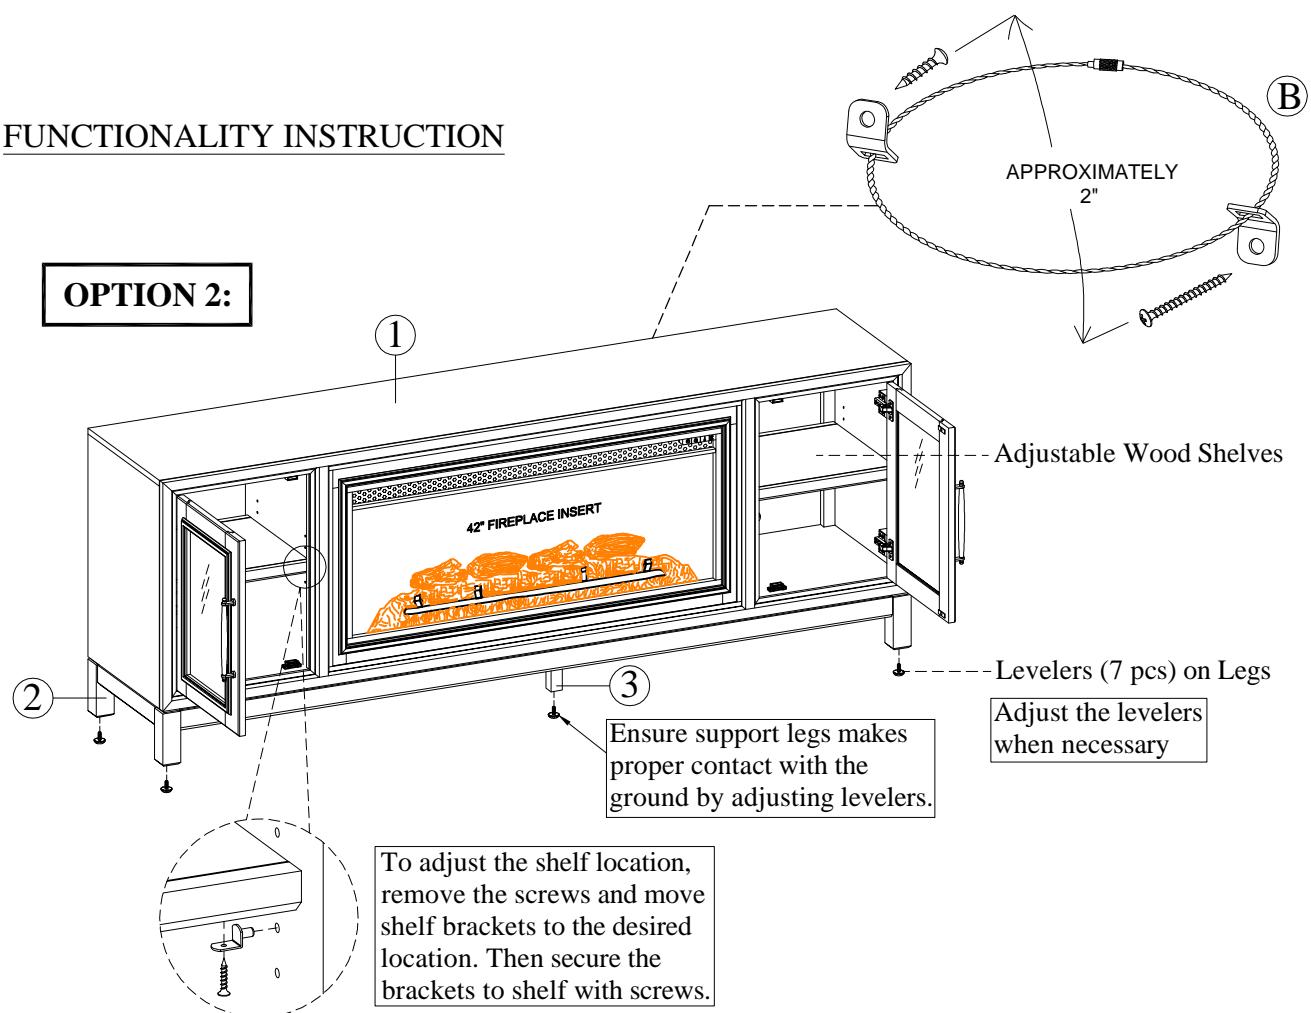

Use and Care Instructions



WARNING - Death or serious injury may occur when children climb on audio and/or video equipment furniture. A remote control or toys placed on the furnishing may encourage a child to climb on the furnishing and as a result the furnishing may tip over on to the child.



WARNING - Relocating audio and/or video equipment to furniture not specifically designed to support audio and/or video equipment may result in death or serious injury due to the furnishing collapsing or over turning onto the child.



WARNING - For use with televisions weighing 90 lbs. /40.8 Kgs or less. Use with heavier televisions may result in instability causing tip over resulting in death or serious injury

TV Accommodates Most:

- 72" CONSOLE: Plasma/LCD-flat panel TV screen of various screen size to a maximum TV screen size 70 inches.
- 84" CONSOLE: Plasma/LCD-flat panel TV screen of various screen size to a maximum TV screen size 82 inches.

Each drawer should not be loaded more than 15 lbs. /6.8 Kgs each. Each shelf should not be loaded more than 30 lbs. /13.6 Kgs

DO NOT EXCEED RECOMMENDED LOAD. Use with products heavier than the maximum sizes and weights indicated may result in instability causing possible injury.


Do not allow children under 16 years to move unit

Manufactured for: Furniture Values International, LLC
Address: 601 N. 75th Avenue, Phoenix, AZ 85043

Always place TV no more than two inches from the back edge of the console.
Placing TV more than two inches from the back edge may increase the risk that the console will tip over

DO NOT REMOVE THIS LABEL

ANTI-TIP DEVICE

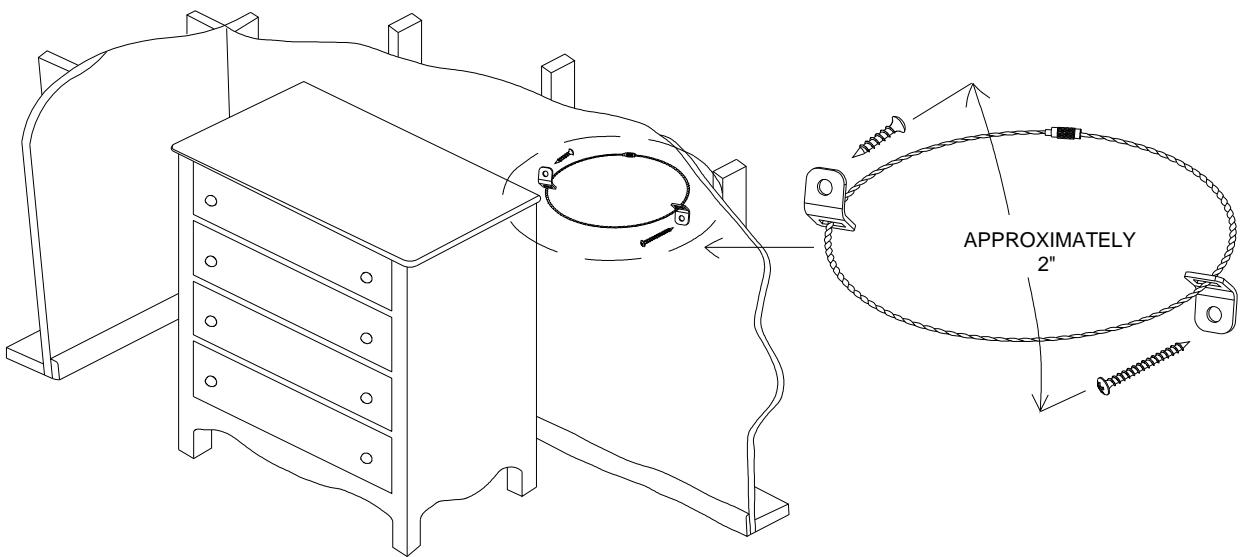

Installation Instructions:

This anti-tip device must be attached to a wall stud using the 2" screw enclosed.

1. Attach a bracket securely to the back top rail or back top edge of the furniture using the 5/8" screw provided, through the smaller hole in the bracket.
2. Locate the other bracket on the wall over a wall stud and 2 inches below the mounting bracket secured to the back of your unit. Attach to the wall stud using the 2" screw provided, through the smaller hole in the bracket.
3. Place the furniture into position so both mounting brackets are vertically in line.
4. Lace the threaded end of the restraint cable through the rectangular hole in each mounting bracket. Bring both ends together and rotate the thumb nut onto the threaded end until tight.
5. Confirm that the cable is securely laced and locked.