

 





ASSEMBLY INSTRUCTIONS

B6830 / B6832 / B6835 - 99

RANGLEY TV STAND

CRWN

(BOX 1) - BOX OF TV STAND							
PARTS LIST				HARDWARE LIST			
NO.	DESCRIPTION	SKETCH	QTY	NO.	DESCRIPTION	SKETCH	QTY
1	TV STAND		1	A	JCBC (M6 x 35mm) W/FLAT WASHER & SPRING WASHER		12
2	LEG LEFT		2	B	ALLEN KEY (M4)		1
3	LEG RIGHT		2				
4	CENTER LEG		2				

IMPORTANT NOTE :

- * Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- * Check to be sure that you have all parts and hardware.
- * Remove all wrapping materials, including staples & packing straps before you start to assemble.
- * Do not tighten all screws/bolts until all completely assembled.
- * Keep all hardware parts out of reach of children.
- * Periodically check to ensure that all connectors (bolts, screws, etc.) are tight.

