

FIBI

STYLE

3478

REV.
0

Item Description

SKU 25034783 - 25134785

Date 21/09/2023

Sheet 1/2

Designer:
Luca Tontini


Hardware:




OR




1 Slide upward the Guillotine back using the handle.

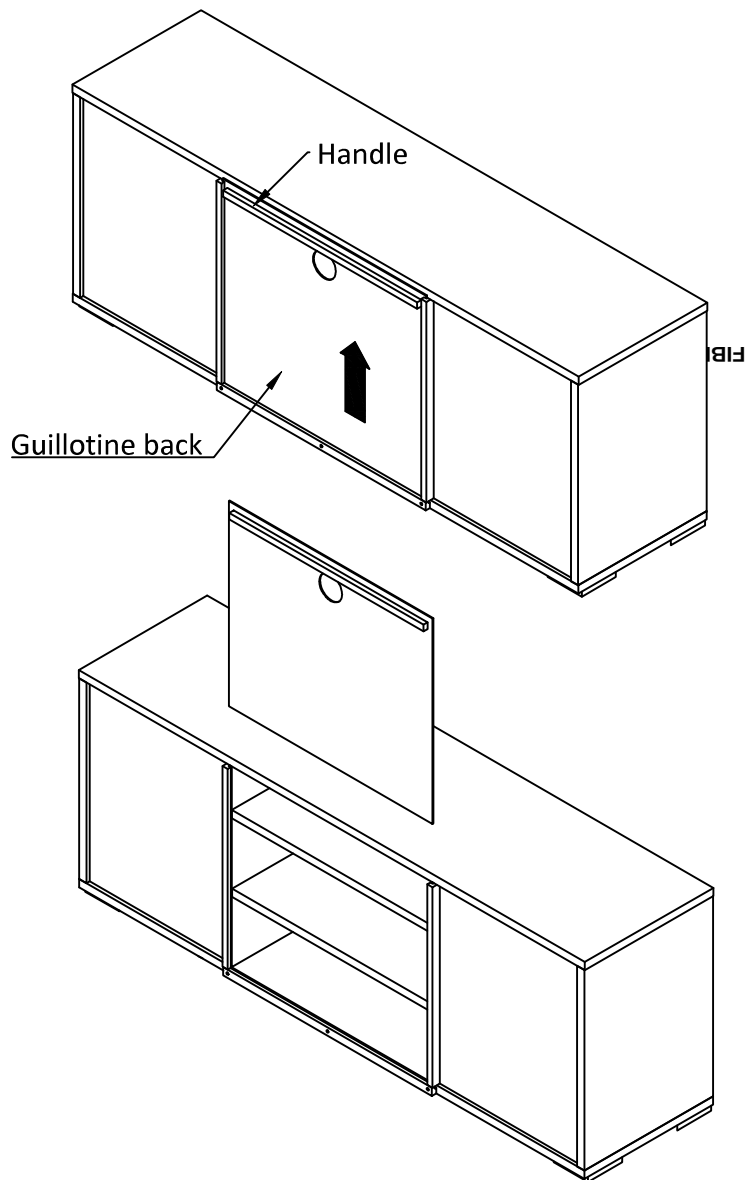

2 Remove shelf.

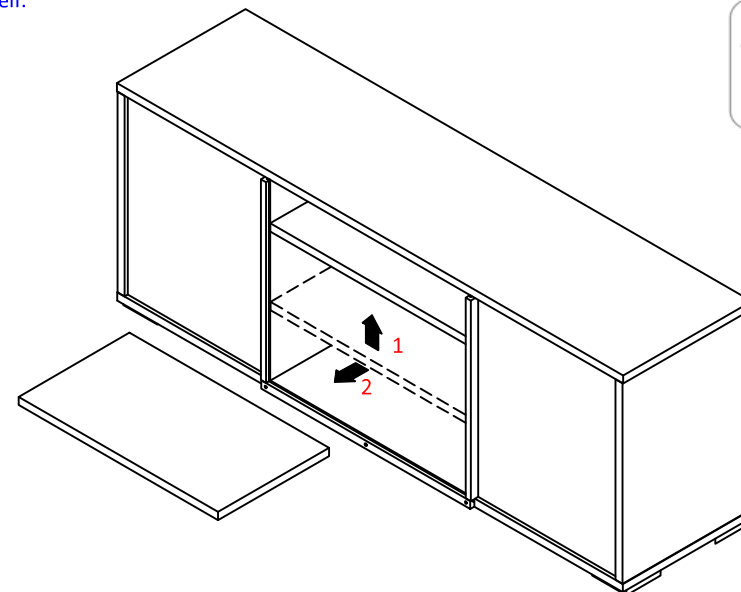

3 Remove shelf supports (n° 4 pieces).

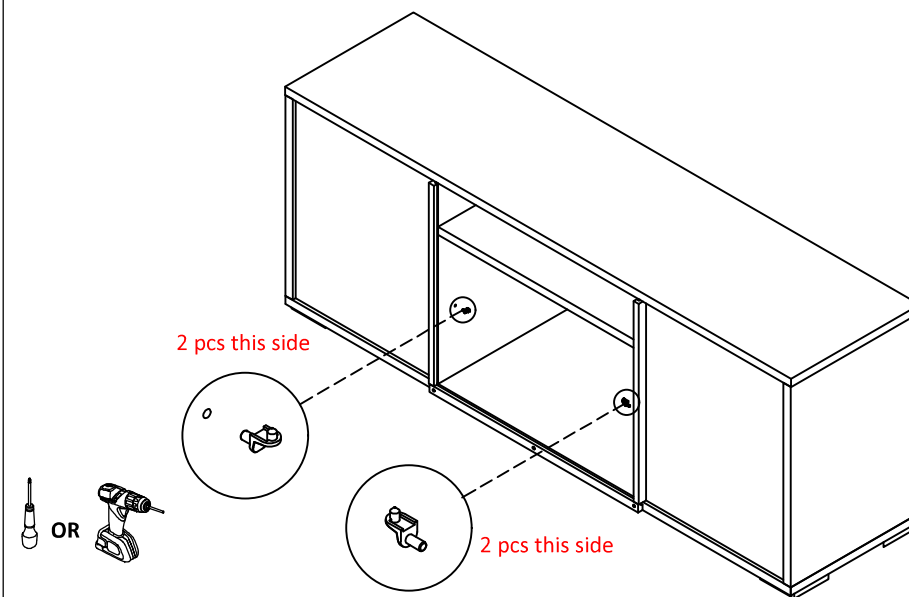

FIBI

STYLE

3478

REV.

0

Item Description

SKU 25034783 - 25134785

Date 21/09/2023

Sheet 2/2

Designer:
Luca Tontini


Hardware:




OR



4 Place the electrical appliance and push it into the compartment.

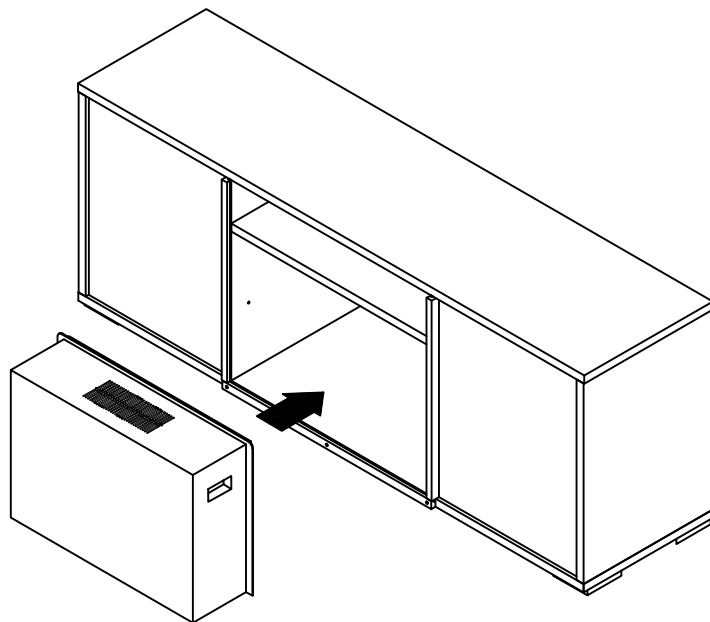

5 Replace the Guillotine back using the handle.

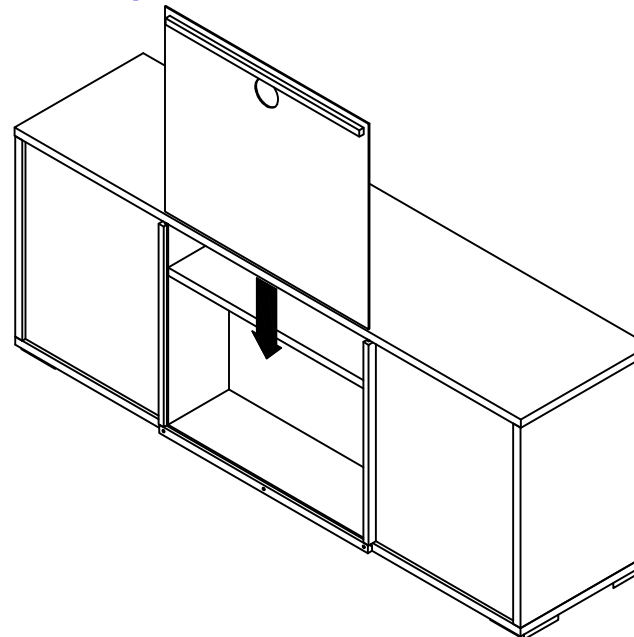

Screwdriver
Not
Included

6

