

Assembly Instructions

ASPN 345-GRY OPEN CREDENZA SKU # 26034378
 ASPN 345-BLU OPEN CREDENZA SKU # 26034479
 ASPN 345-WHI OPEN CREDENZA SKU # 26034570
 ASPN 344-GRY RETURN FOR CREDENZA SKU # 26134370
 ASPN 344-BLU RETURN FOR CREDENZA SKU # 26134471
 ASPN 344-WHI RETURN FOR CREDENZA SKU # 26134572

***Caution: Please read all instructions carefully before starting the assembly process. These parts are cumbersome and heavy. Therefore, two people are recommended in order to prevent personal injury and ensure the parts are not damaged during the assembly.


Code	Parts List for ASPN 344		
1	Return Top		1 Pc
2	End Panel		1 Pc
3	Wood Stretcher		1 Pc
4	Wood Block		2 Pcs
5	"L"Metal Bracket		2 Pcs

Step	Code	Hardware List for ASPN 344		
2-1	A	Allen Bolt - Ø1/4x38mm		14 Pcs
3		Lock Washer - Ø1/4		14 Pcs
4		Flat Washer - Ø1/4x19x1.5mm		14 Pcs
2-2	B	Allen Bolt - Ø1/4x19mm		8 Pcs
3		Lock Washer - Ø1/4		8 Pcs
		Flat Washer - Ø1/4x19x1.5mm		8 Pcs
3	C	Allen Bolt - Ø1/4x102mm		2 Pcs
		Lock Washer - Ø1/4		2 Pcs
		Flat Washer - Ø1/4x19x1.5mm		2 Pcs
2/3/4	D	Allen Key - 4mm		1 Pc

TOOLS REQUIRED (NOT PROVIDED)

PHILLIPS SCREWDRIVER


Open Credenza

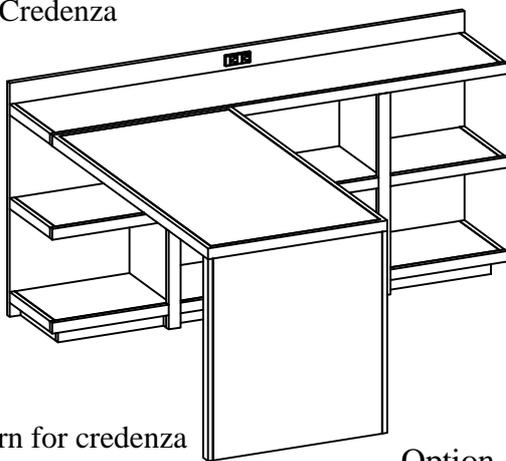

Return for credenza

Option 1

Open Credenza

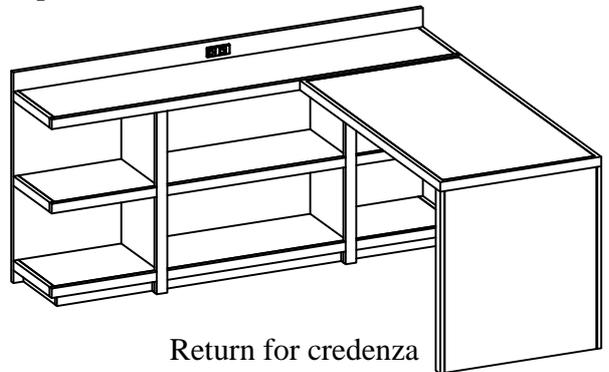

Return for credenza

Option 2

Hardware Pack Location(S):

ASPN 344-GRY RETURN FOR CREDENZA SKU # 26134370
 ASPN 344-BLU RETURN FOR CREDENZA SKU # 26134471
 ASPN 344-WHI RETURN FOR CREDENZA SKU # 26134572

This product is manufactured by ASPN for

ROOMS TO GO 

MADE IN VIETNAM

1 OF 3

Assembly Instructions


ASPN 345-GRY OPEN CREDENZA	SKU # 26034378
ASPN 345-BLU OPEN CREDENZA	SKU # 26034479
ASPN 345-WHI OPEN CREDENZA	SKU # 26034570
ASPN 344-GRY RETURN FOR CREDENZA	SKU # 26134370
ASPN 344-BLU RETURN FOR CREDENZA	SKU # 26134471
ASPN 344-WHI RETURN FOR CREDENZA	SKU # 26134572

***Caution: Please read all instructions carefully before starting the assembly process. These parts are cumbersome and heavy. Therefore, two people are recommended in order to prevent personal injury and ensure the parts are not damaged during the assembly.


STEP 1: Put the return top (1) face down on a soft surface.

STEP 2-1: Attach the wood stretcher (3) and wood blocks (4) to the return top (1) by using 7 bolts (A) with an allen key (D) as shown below. Do not completely tighten bolts.

STEP 2-2: Attach the "L" metal brackets (5) to the return top (1) by using 4 bolts (B) with an allen key (D) as shown below. Do not completely tighten bolts.

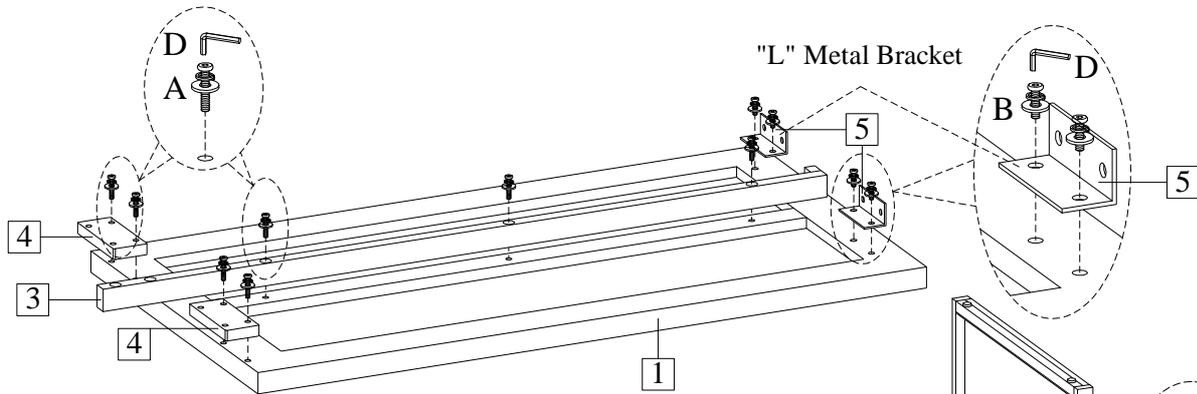


STEP 3: Attach the end panel (2) to the return top (1) by using 4 bolts (B), 1 bolt (A) and 2 bolts (C) with an allen key (D) as shown below. Completely tighten all bolts.

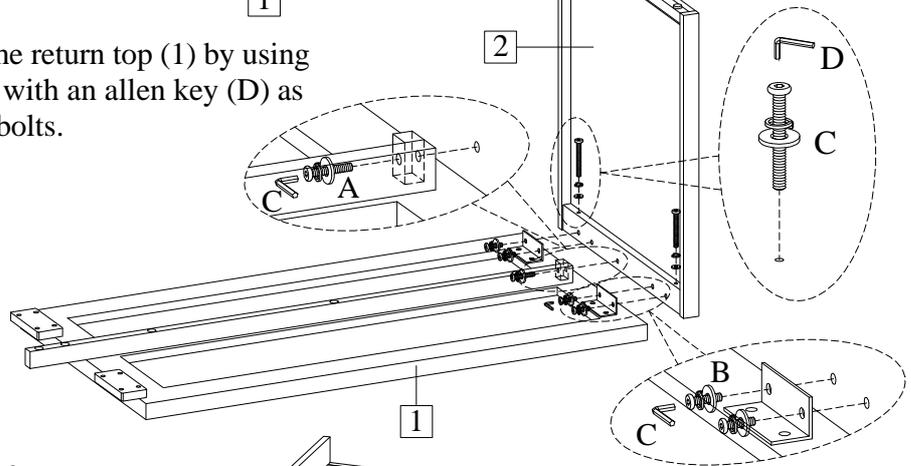

For OPTION 1:

STEP 4: Attach the assembled return for credenza to the left of the open credenza by using 6 bolts (A) with an allen key (D) as shown right. Completely tighten all bolts.

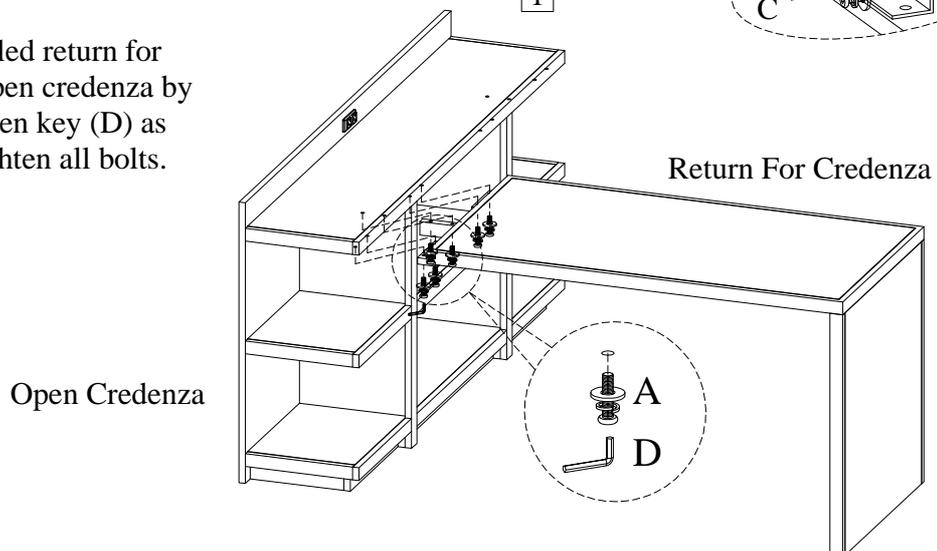

This product is manufactured by ASPN for

ROOMS TO GO

MADE IN VIETNAM

2 OF 3


Assembly Instructions

ASPN 345-GRY OPEN CREDENZA	SKU # 26034378
ASPN 345-BLU OPEN CREDENZA	SKU # 26034479
ASPN 345-WHI OPEN CREDENZA	SKU # 26034570
ASPN 344-GRY RETURN FOR CREDENZA	SKU # 26134370
ASPN 344-BLU RETURN FOR CREDENZA	SKU # 26134471
ASPN 344-WHI RETURN FOR CREDENZA	SKU # 26134572

***Caution: Please read all instructions carefully before starting the assembly process. These parts are cumbersome and heavy. Therefore, two people are recommended in order to prevent personal injury and ensure the parts are not damaged during the assembly.


For OPTION 2:

STEP 4: Attach the assembled return for credenza to the right of the open credenza by using 6 bolts (A) with an allen key (D) as shown right. Completely tighten all bolts.

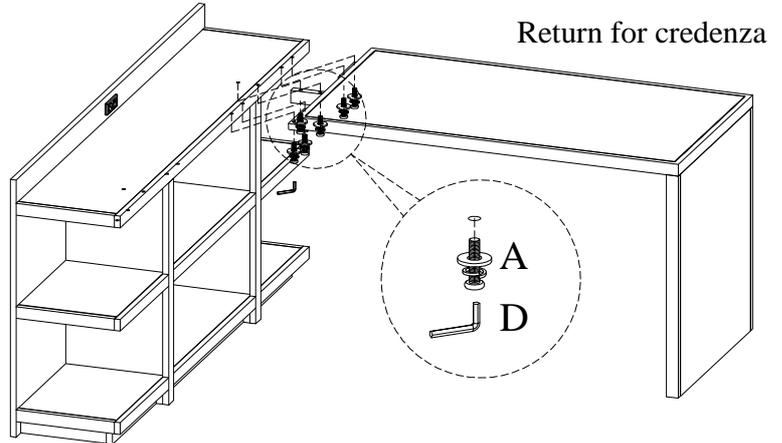


FUNCTIONALITY INSTRUCTION

OPTION 1:

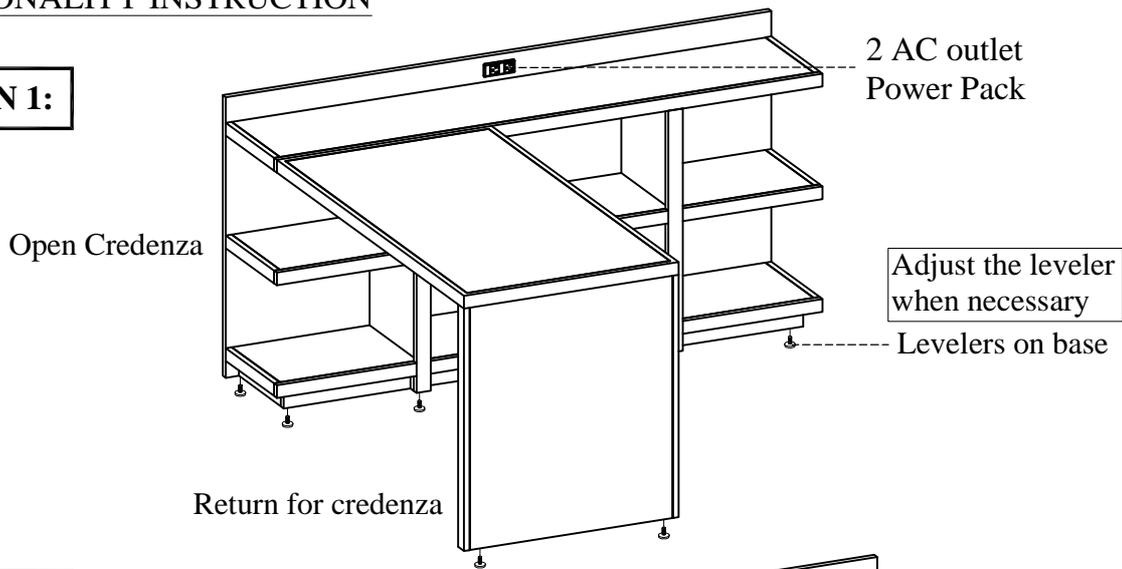

OPTION 2:

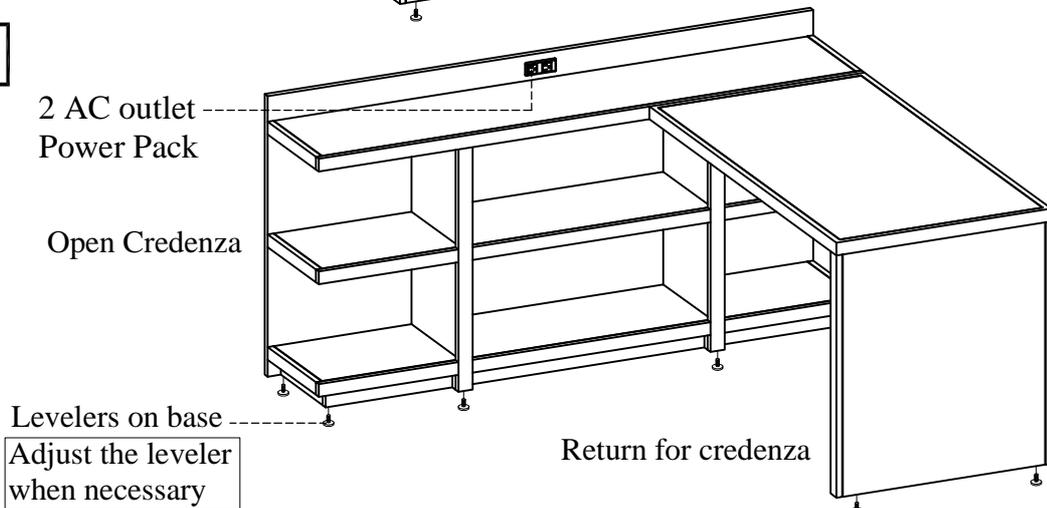

This product is manufactured by ASPN for

ROOMS TO GO

MADE IN VIETNAM

3 OF 3

ENGLISH

IMPORTANT SAFETY INSTRUCTIONS

WARNING

Misuse can result in **FIRE or DEATH** by **ELECTRICAL SHOCK**

120VAC 60Hz / 12A
HUGESUN LIGHTING CO.,LTD
HG2011-DK

Read all instructions before using this furnishing.

DANGER – To reduce the risk of electric shock:

- Always unplug this furnishing from the electrical outlet before cleaning or servicing.

WARNING – To reduce the risk of burns, fire, electric shock, or injury to persons:

- Unplug from outlet before putting on or taking off parts.
- Never operate this furnishing if it has a damaged electrical cord or plug, if it is not working properly, or if the electrical cord or plug has been damaged or dropped into water. Stop using this furnishing and call a service center for examination and repair.
- Keep the electrical cord and plug away from heated surfaces and other heat sources.
- To disconnect, turn all controls to the off position, then remove plug from outlet.
- When operating, ensure that electrical cord is not under the base, legs, or motion mechanism to avoid damage to electrical cord or plug.
- Do not strain or stretch electrical cord.
- Do not use extension cords or power strips.
- Keep out of reach of children. This is not a toy.
- Plug directly into a compatible electrical socket.
- Do not modify the plug or use any adapters.

SPANISH

INSTRUCCIONES DE SEGURIDAD IMPORANTES

WARNING

El mal uso puede provocar **INCENDIO o MUERTE por DESCARGA ELÉCTRICA**

120VAC 60Hz / 12A
HUGESUN LIGHTING CO.,LTD
HG2011-DK

Leer todas las instrucciones antes de usar este mobiliario.

PELIGRO – Para reducir el riesgo de descarga eléctrica:

- Siempre desenchufe este accesorio de la toma de corriente eléctrica antes de limpiarlo o repararlo.

ADVERTENCIA: para reducir el riesgo de quemaduras, incendios, descargas eléctricas o lesiones a personas:

- Desenchufe del tomacorriente antes de colocar o quitar partes.
- Nunca opere este accesorio si tiene un cable o enchufe eléctrico dañado, si no funciona correctamente, o si el cable o el enchufe eléctrico se ha dañado o se ha caído al agua. Deje de usar este equipamiento y llame a un centro de servicio para que lo examinen y lo reparen.
- Mantenga el cable eléctrico y el enchufe lejos de superficies calientes y otras fuentes de calor.
- Para desconectar, gire todos los controles a la posición de apagado, luego retire el enchufe del tomacorriente.
- Al operar, asegúrese de que el cable eléctrico no esté debajo de la base, las patas o el mecanismo de movimiento para evitar dañar el cable eléctrico o el enchufe.
- No fuerce ni estire el cable eléctrico.
- No utilice cables de extensión o tomas de corriente.
- Mantener fuera del alcance de los niños. Esto no es un juguete.
- Enchúfelo directamente a una toma de corriente compatible.
- No modifique el enchufe ni utilice adaptadores.