

TV Console

ASSEMBLY INSTRUCTIONS


MODEL No. 6649N 6649DFW

Important: Be sure to check all packing material carefully for small parts which may come loose inside carton during shipment. separate, identify and count all parts and metal hardware.


compare with parts list and hardware illustrations to be sure all parts are present. if any part(s) are missing or damage, contact your dealers customer services department. for efficient and fast service, please indicate the model number and the part needed.

ATTENTION: Some lettered parts listed on the instruction sheets may not be in the parts bag, they may already be assembled.


TOOLS REQUIRED (Not included) Phillips Screwdriver

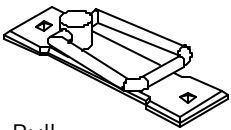


Pull
Part No. HBJ-3365
(2 Pcs) **Installed**

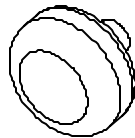


knob
Part No. HBJ-3566A
(2 Pcs) **Installed**

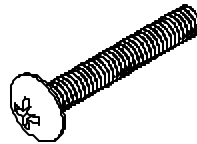

 Bolt 8/32 x 7/8
Part No.HCPP-07A
(2 Pcs) **Installed**



 
Bolt 8/32 x 5/8
Part No.HCPP-05A
(4 Pcs) **Installed**




SCREW PH. PAN 8X1/2
Part No.HCPF-074
(3 Pcs)



Anti-tip
Part No. HB-488
(1 Pcs)

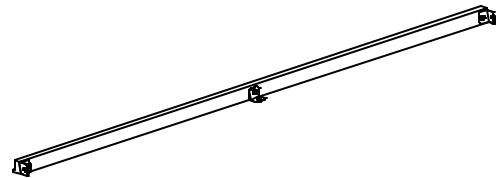

Support rail
Part No. SOPFIRPOP-36
(1 Pcs) **packed together shelf**

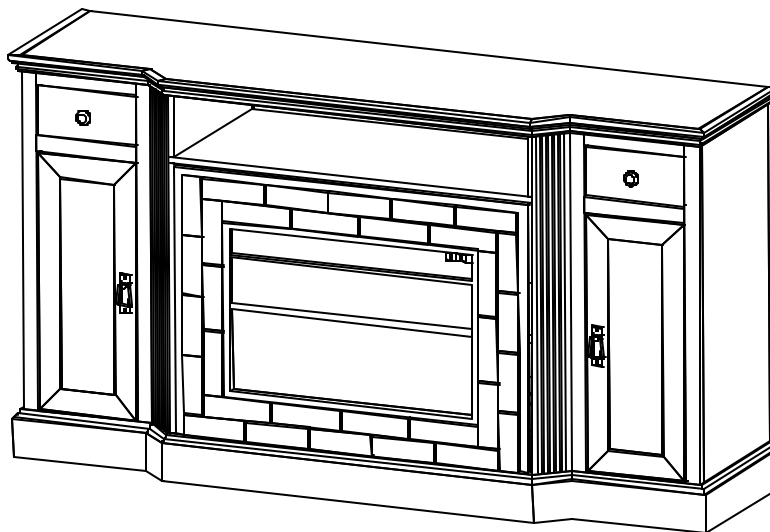


Anti-tip strap for Display Cabinet is included inside red hardware bag.
To install, please follow the Anti-Tip bag instructions carefully.

Fire Place Installation

For installation Fire Place remove the center back panel and Keep out the adjustable shelf as shown.

Step 1

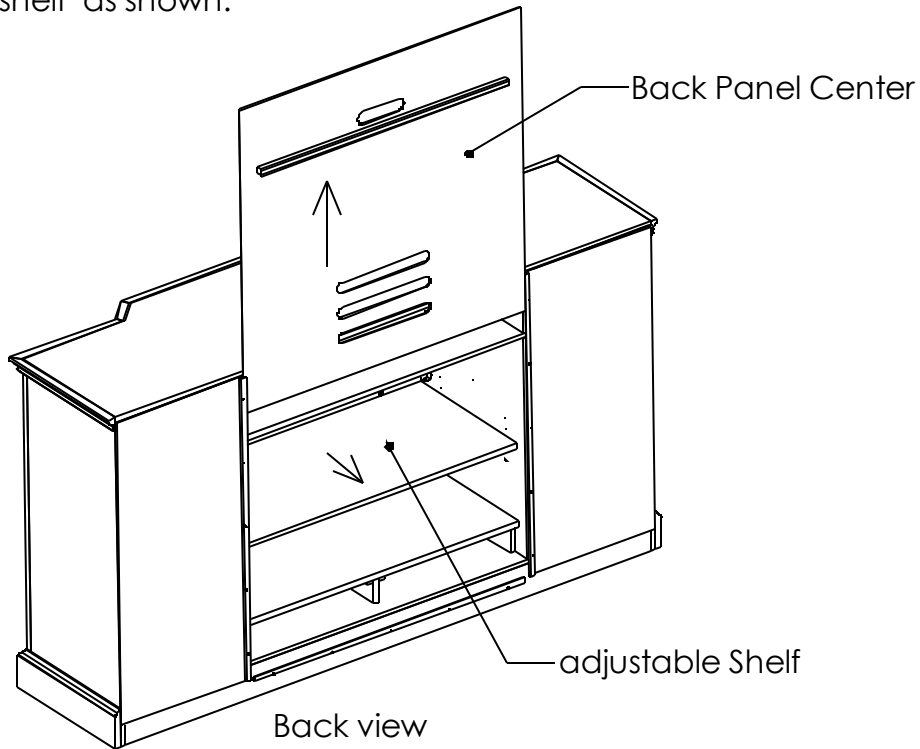

Step 2

Install Fire Place and attach the lower support with screw center and both sides as shown, Return the center back panel like first step.

