 




Assembly Instructions

LISI #SAG60DSKGO Saga Writing Desk Golden Oak
 LISI #SAG60DSKNT Saga Writing Desk Natural

SKU# 27020952
 SKU# 27020964

STEP	CODE	HARDWARE	Q'TY	
Pre-installed on Part 2	A	Allen Bolt (Ø1/4"x20x38mmL)		10 PCS
		Lock Washer (Ø1/4")		
		Flat Washer (Ø1/4")		
		Threaded Washer (Ø1/4"x20x10mmL)		
1	B	4 MM Hex Wrench		1 PC
2	C	Electric Cord Cap		1 PC
3	D	Tipping Restraint Hardware Kit		2 PCS

PARTS

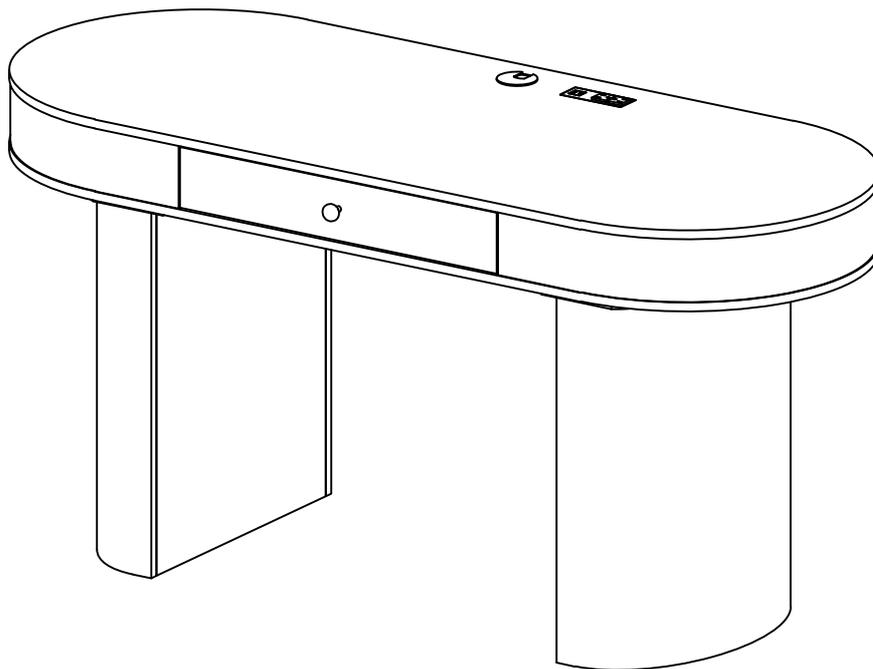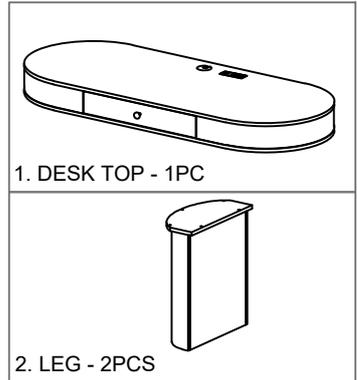

Hardware Pack Location(s):

Attached at the corner of frame.

LISI #SAG60DSKGO Saga Writing Desk Golden Oak
 LISI #SAG60DSKNT Saga Writing Desk Natural

SKU# 27020952
 SKU# 27020964

Assembly Instructions

LISI #SAG60DSKGO Saga Writing Desk Golden Oak

SKU# 27020952

LISI #SAG60DSKNT Saga Writing Desk Natural

SKU# 27020964

IMPORTANT SAFETY INSTRUCTIONS



WARNING

Misuse can result in FIRE or DEATH by ELECTRICAL SHOCK

[ELECTRICAL RATING (125V/12A; 5V/2.1A/10.5Watts)]

[Eyue Technology Co.,Ltd]

[EY-P552]


Read all instructions before using this furnishing.

DANGER - To reduce the risk of electric shock:

- Always unplug this furnishing from the electrical outlet before cleaning or servicing.

WARNING- To reduce the risk of burns, fire, electric shock, or injury to persons.

- Unplug from outlet before putting on or taking off parts.
- Never operate this furnishing if it has a damaged electrical cord or plug. If it is not working properly, or if the electrical cord or plug has been damaged or dropped into water. Stop using this furnishing and call a service center for examination and repair.
- Keep the electrical cord and plug away from heated surfaces and other heat sources.
- To disconnect, turn all controls to the off position, then remove plug from outlet.
- When operating, ensure that electrical cord is not under the base, legs, or motion mechanism to avoid damage to electrical cord or plug.
- Do not strain or stretch electrical cord.
- Do not use extension cords or power strips.
- Keep out of reach of children. This is not a toy.
- Plug directly into a compatible electrical socket.
- Do not modify the plug or use any adapters.

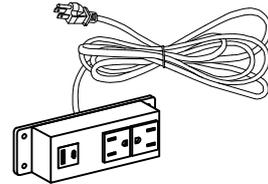

INSTRUCCIONES DE SEGURIDAD IMPORANTES



WARNING

El mal uso puede provocar INCENDIO o MUERTE por DESCARGA ELECTRICA

[ELECTRICAL RATING (125V/12A; 5V/2.1A/10.5Watts)]

[EY-P552]

[Eyue Technology Co.,Ltd]


Leer todas las instrucciones antes de usar este mobiliario.

PELIGRO - Para reducir el riesgo de descarga eléctrica:

- Siempre desenchufe este accesorio de la toma de corriente eléctrica antes de limpiarlo o repararlo.

ADVERTENCIA: para reducir el riesgo de quemaduras, incendios, descargas eléctricas o lesiones a personas:

- Desenchufe del tomacorriente antes de colocar o quitar partes.
- Nunca opere este accesorio si tiene un cable o enchufe eléctrico dañado, si no funciona correctamente, o si el cable o el enchufe eléctrico se ha dañado o se ha caído al agua. Deje de usar este equipamiento y llame a un centro de servicio para que lo examinen y lo reparen.
- Mantenga el cable eléctrico y el enchufe lejos de superficies calientes y otras fuentes de calor.
- Para desconectar, gire todos los controles a la posición de apagado, luego retire el enchufe del tomacorriente.
- Al operar, asegúrese de que el cable eléctrico no esté debajo de la base, las patas o el mecanismo de movimiento para evitar dañar el cable eléctrico o el enchufe.
- No fuerce ni estire el cable eléctrico.
- No utilice cables de extensión o tomas de corriente.
- Mantener fuera del alcance de los niños. Esto no es un juguete.
- Enchúfelo directamente a una toma de corriente compatible.
- No modifique el enchufe ni utilice adaptadores.

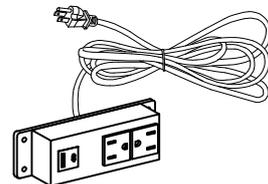

The product is manufactured by (LISI) for **ROOMS TO GO**


Assembly Instructions

LISI #SAG60DSKGO Saga Writing Desk Golden Oak
LISI #SAG60DSKNT Saga Writing Desk Natural

SKU# 27020952
SKU# 27020964



***Caution: Please read all instructions carefully before starting the assembly process. These parts are cumbersome and heavy. Therefore, two people are recommended in order to prevent personal injury and insure the parts are not damaged during the assembly.

STEP 1:

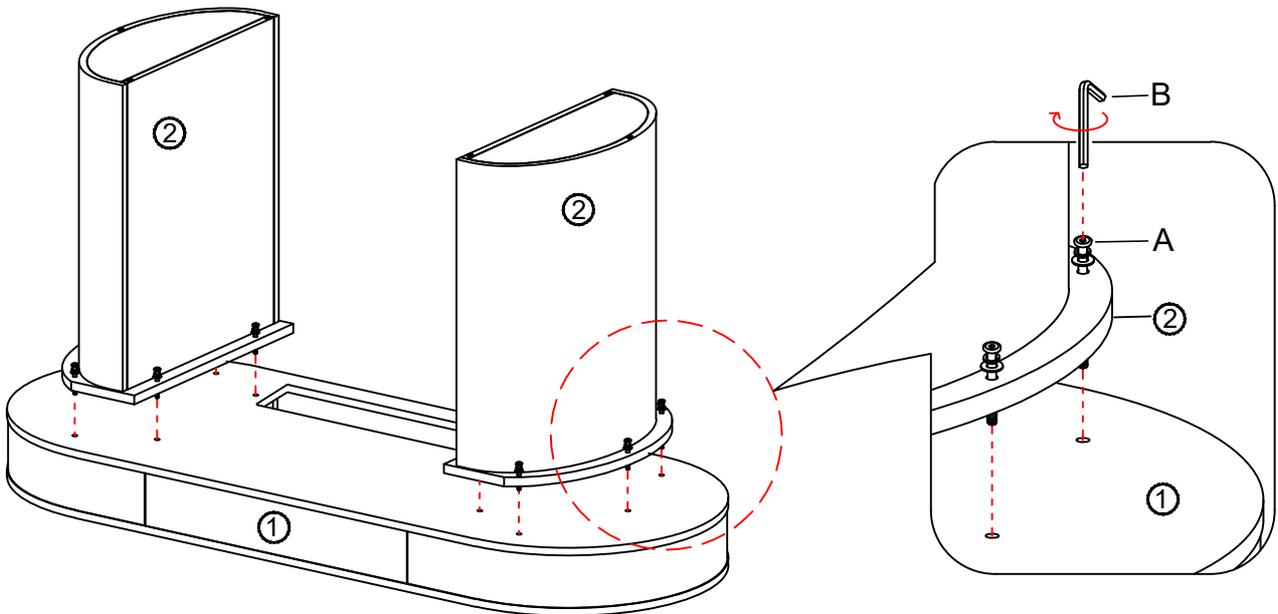

- 1.1 Unpack the unit and confirm that you have all the hardware and required parts. Assemble the unit on a carpeted floor or the empty carton to avoid any scratch.
- 1.2 Align and attach Legs (2) to Desk Top (1) using Allen Bolts (A) with the Lock/Flat Washers (A) pre-installed on the connecting panel. Tighten with Hex Wrench (B).

STEP 2:

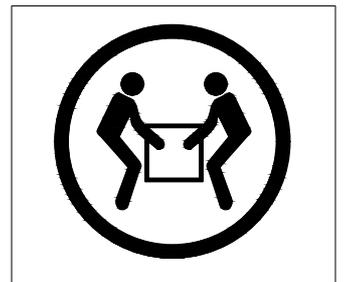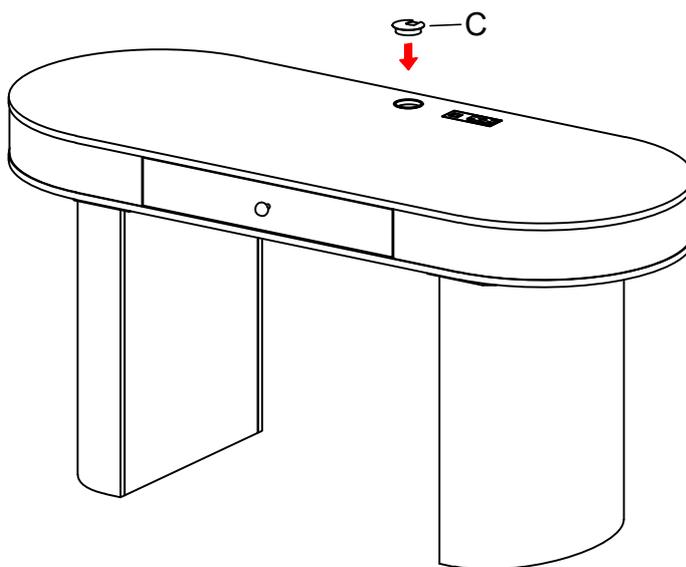

- 2.1 Ask for assistance to stand the unit upright near your desired location.
- 2.2 Place the Electric Cord Cap (C) onto the plastic ring on desk top.

The product is manufactured by (LISI) for **ROOMS TO GO**

Assembly Instructions

LISI #SAG60DSKGO Saga Writing Desk Golden Oak




SKU# 27020952

LISI #SAG60DSKNT Saga Writing Desk Natural

SKU# 27020964

***Caution: Please read all instructions carefully before starting the assembly process. These parts are cumbersome and heavy. Therefore, two people are recommended in order to prevent personal injury and insure the parts are not damaged during the assembly.

STEP 3

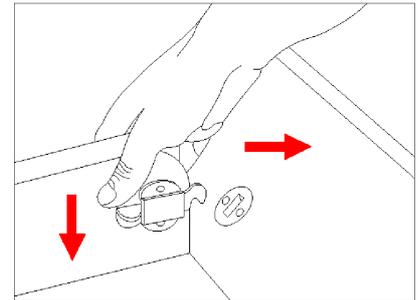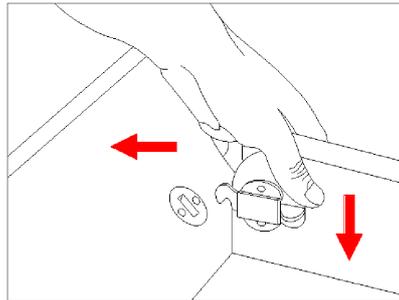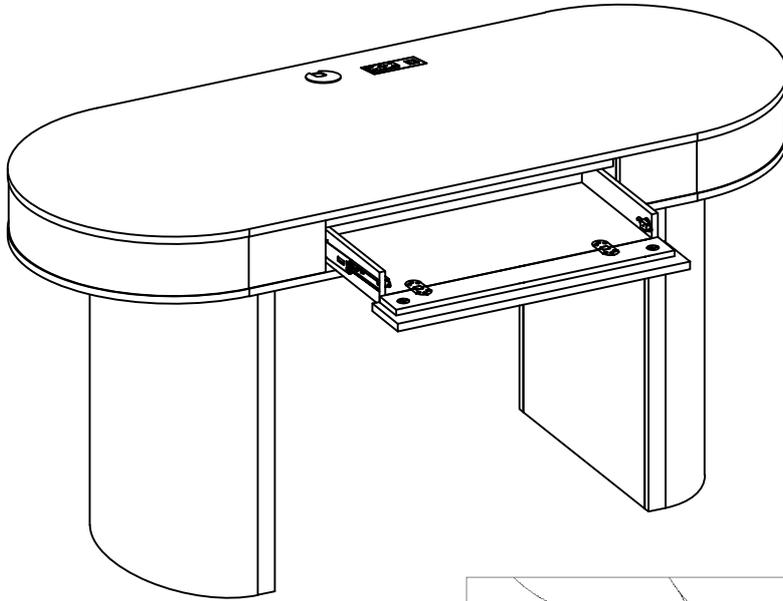

3.1 You can flip down the drawer front to convert it into a keyboard tray.

Assembly Instructions

LISI #SAG60DSKGO Saga Writing Desk Golden Oak

SKU# 27020952


LISI #SAG60DSKNT Saga Writing Desk Natural

SKU# 27020964

***Caution: Please read all instructions carefully before starting the assembly process. These parts are cumbersome and heavy. Therefore, two people are recommended in order to prevent personal injury and insure the parts are not damaged during the assembly.

STEP 4:

REMARK:
Anti-tip hardware
must be installed
by customer.

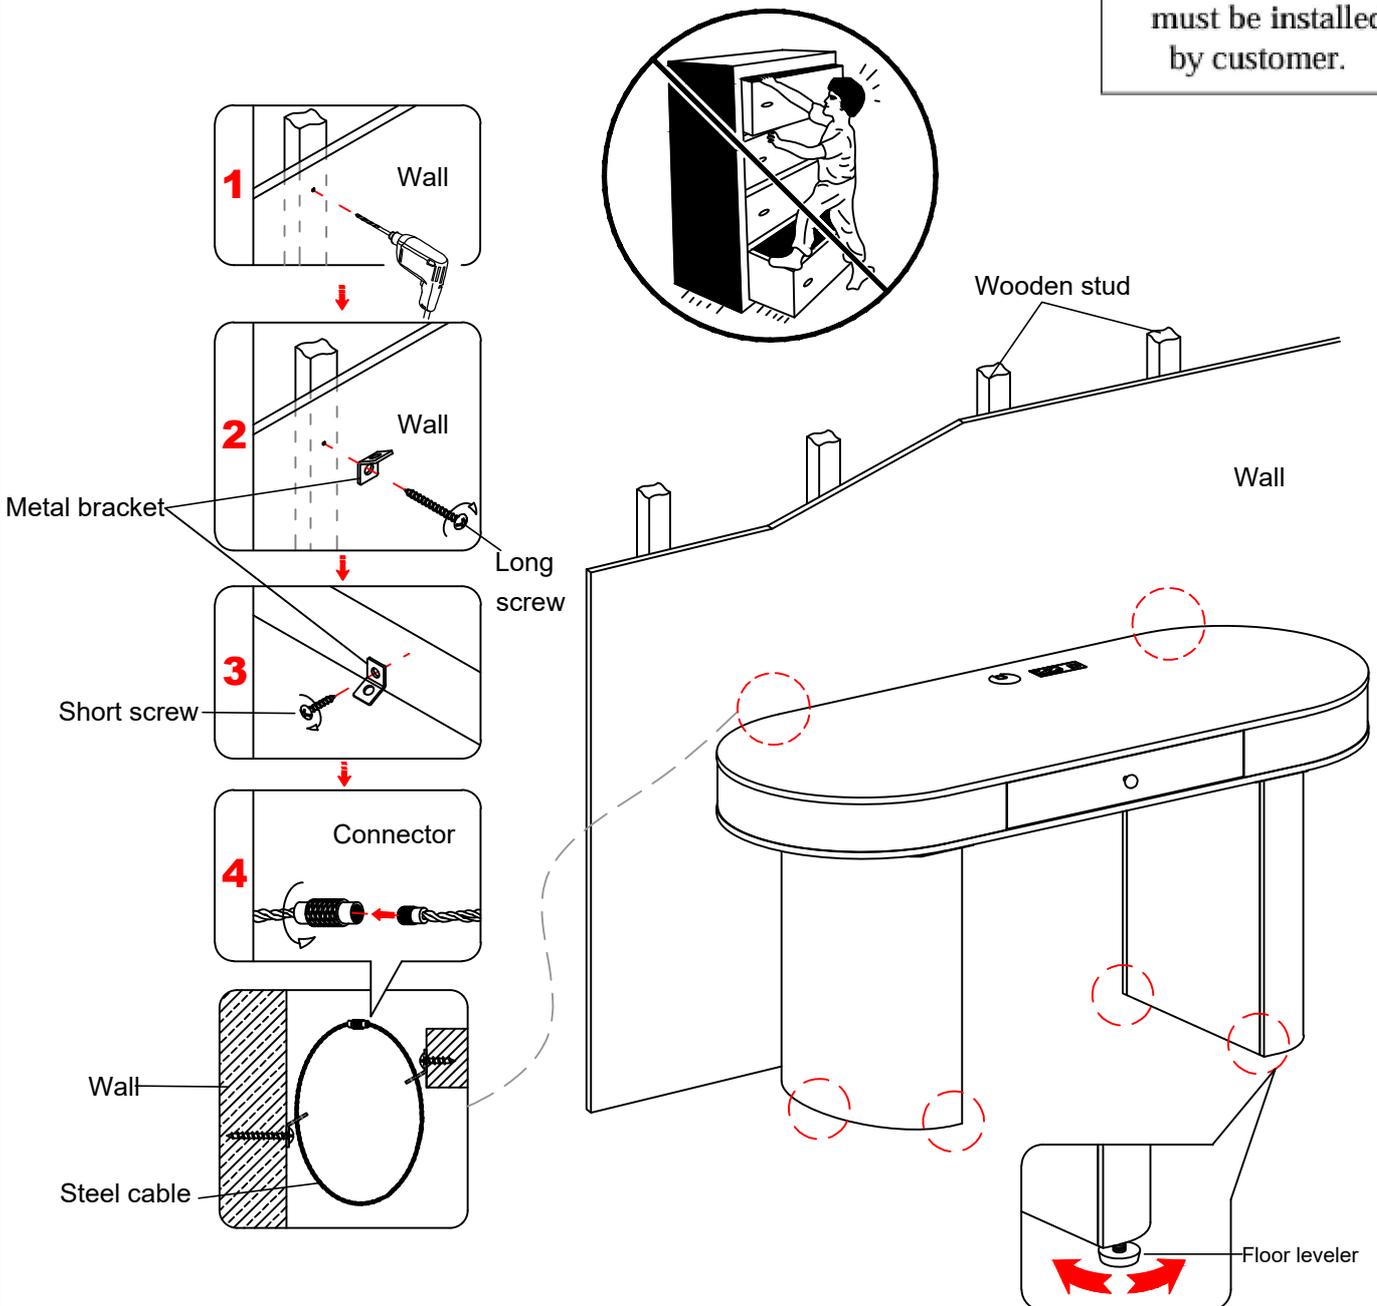

Tools required (not provided): Phillips screwdriver, stud finder, pencil, tape measure, power drill and 1/8" drill bit.

4.1 Adjust the floor levelers to level the unit against the wall.

4.2 Secure the unit to the wall with the tipping restraint hardware kit provided.

The product is manufactured by (LISI) for **ROOMS TO GO**

FURNITURE TIPPING RESTRAINT

YOUNG CHILDREN MAY BE INJURED BY TIPPING FURNITURE AND YOU MUST USE THIS TIPPING RESTRAINT TO ATTACH THIS UNIT TO THE WALL, TO PREVENT ACCIDENTS AND/OR INJURIES.

THIS HARDWARE MUST BE PROPERLY INSTALLED (FOLLOW ALL DIRECTIONS IN ORDER ON THIS INSTRUCTIONS), TO PROVIDE PROTECTION AGAINST THE UNEXPECTED TIPPING OF FURNITURE DUE TO IMPROPER USE.

THIS PRODUCT IS ONLY A DETERRENT. IT IS NOT A SUBSTITUTE FOR PROPER ADULT SUPERVISION. USE OF TIP-OVER RESTRAINTS MAY ONLY REDUCE, BUT NOT ELIMINATE, THE RISK OF TIP-OVER.

 WARNING	
	<p>Children have died from furniture tip-over. To reduce the risk of furniture tip-over:</p> <ul style="list-style-type: none">• ALWAYS install anti-tip device provided.• NEVER put a TV on this product.• NEVER allow children to stand, climb or hang on any drawers, doors, or shelves.• NEVER open more than one drawer at a time.• Place heaviest items in the lowest drawers.
	<p>Use of tip-over restraints may only reduce, but not eliminate, the risk of tip-over.</p>

CARING FOR YOUR FURNITURE

Protect your investment

The beauty of furniture care is that it helps to protect your investment, as fine furniture is an important purchase. Proper care will help maintain your furniture's finish and ensure that it looks great year after year.

Caring for furniture

Caring for furniture is easy. Following a few simple guidelines will help extend the life of your furniture.

- **Always dust with a cloth moistened with polish.** Polish cushions the cloth, eliminating the scratching that occurs with dry dusting. Dust will scratch furniture if not removed quickly. Use a soft, clean cloth that won't scratch the surface. Avoid coarse or scratchy materials or fabrics.
- **Avoid using soap and water on furniture.** Water can penetrate the finish and raise the grain on wood. Causing damage.

The Enemies of Furniture

Many common problems in furniture care are caused by the elements. If you are aware of these troublemakers, the resulting damage can easily be avoided.

- Sunlight's ultraviolet rays can damage wood finishes. Arrange furniture out of direct sunlight use sun screening drapes during intense sunlight hours, rotate furniture in place and room arrangement.
- Liquid spills will damage furniture if not removed promptly. Use coasters under beverage glasses and saucers under cups and flowerpots. If a spill occurs, immediately blot it gently without rubbing the surface.
- Heat creates a chemical change in the furniture finish, which can result in a white spot. Use protective mats under hot dishes, utensils or cooking appliances.
- Cyclic changes in temperature can damage furniture. Placing furniture near to central heating radiators and air ducts should be avoided because this causes extreme localized drying of the wood.

Tips for Better Dusting

- Be sure to use the same type of polish consistently. Your furniture will appear cloudy or streaky if oil based or wax based polishes are interchange.
- **Always use a fine furniture polish when dusting.** Never dry dust, as it could cause microscopic scratches on your furniture's surface. Remember to change dusting cloths frequently since a dirty cloth may scratch your furniture's surface.
- Spray your furniture surface evenly, but not too generously. Wipe in a circular motion with a soft, clean cloth to clean and loosen old polish.
- Then buff until completely dry for a beautiful shine and a smudge free finish. For wood trim spray polish on the cloth first, then dust.