

## ASSEMBLY INSTRUCTION SH275KBGE-1 & SH275KBLU-1 & SH275KGRY-1 & SH275KDGR-1 & SH275KPNK-1

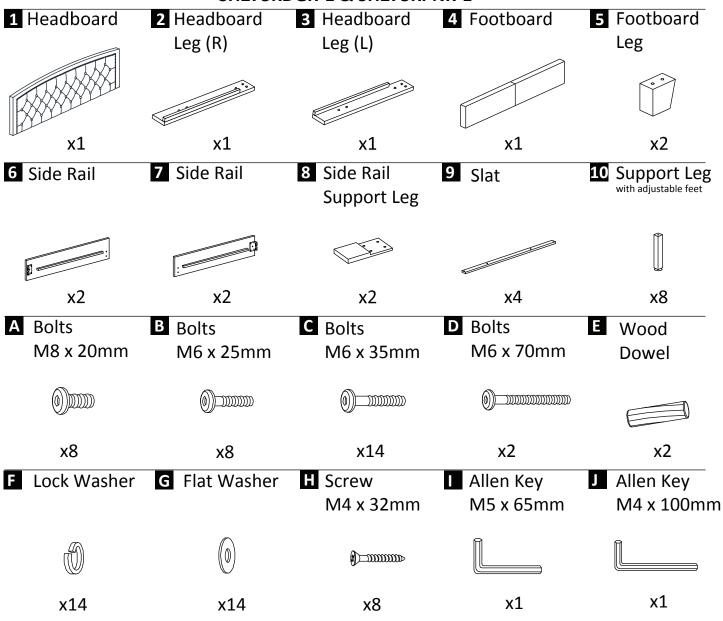

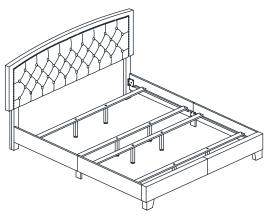


This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.


## ASSEMBLY INSTRUCTION SH275KBGE-1 & SH275KBLU-1 & SH275KGRY-1 & SH275KDGR-1 & SH275KPNK-1


Begin assembly by attaching each Headboard Leg (2) & (3) to the bottom of the Headboard (1) by aligning the hole and securing with 3 Allen Bolts (C), 3 Lock Washer (F), 3 Flat Washer (G) per leg using Allen Key (J).

(DO NOT FULLY TIGHTEN BOLTS FOR THIS STEP)

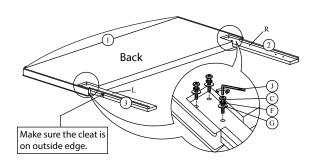

 
Attach each Footboard Legs (5) to the bottom of the Footboard (4) by inserting a Dowel (E) & securing with 1 Allen Bolt (D) per leg using Allen Key (J).




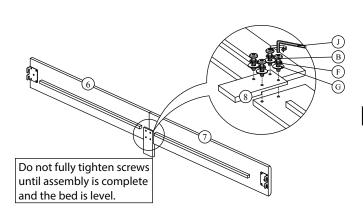


4 1 2 3 3

 Attach Side Rail to the Headboard Leg (2) & (3) and Footboard (4).
Aligning holes and securing with 2 Allen Bolts (A) per each and
using Allen Key (I).
(DO NOT FULLY TIGHTEN BOLTS FOR THIS STEP)



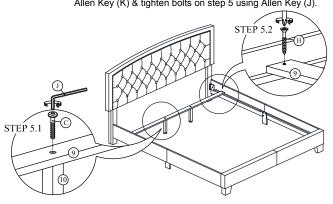

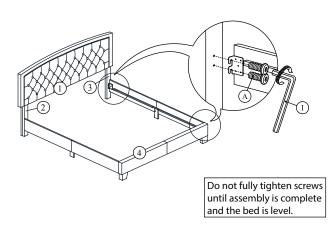

## Cleaning & Care

Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.