
ASSEMBLY INSTRUCTION SH275FBGE-1 & SH275FBLU-1 & SH275FGRY-1 & SH275FDGR-1 & SH275FPNK-1				
1 Headboard	2 Headboard	3 Headboard	4 Footboard	5 Footboard
	Leg (R)	Leg (L)		Leg
		•••		
x1	x1	x1	x1	x2
6 Side Rail	7 Side Rail	8 Side Rail	9 Slat	10 Support Leg
		Support Leg		with adjustable feet
				~
:				
		Ţ.		Ų
x2	x2	x2	x4	x4
A Bolts	B Bolts	C Bolts	D Bolts	E Wood
M8 x 20mm	M6 x 25mm	M6 x 35mm	M6 x 70mm	Dowel
	2		2	
		(0))	()) <u> </u>	
x8	x8	x10	x2	x2
F Lock Washer	G Flat Washer	H Screw	I Allen Key	J Allen Key
		M4 x 32mm	M5 x 65mm	M4 x 100mm
		()>		
x14	x14	x8	x1	x1

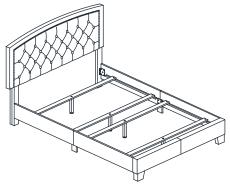


This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.


ASSEMBLY INSTRUCTION SH275FBGE-1 & SH275FBLU-1 & SH275FGRY-1 & SH275FDGR-1 & SH275FPNK-1

2


Begin assembly by attaching each Headboard Leg (2) & (3) to the bottom of the Headboard (1) by aligning the hole and securing with 3 Allen Bolts (C), 3 Lock Washer (F), 3 Flat Washer (G) per leg using Allen Key (J). (DO NOT FULLY TIGHTEN BOLTS FOR THIS STEP)

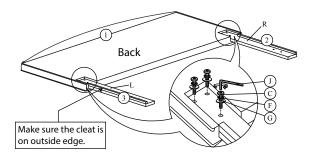


Attach each Footboard Legs (5) to the bottom of the Footboard (4) by inserting a Dowel (E) & securing with 1 Allen Bolt (D) per leg using Allen Key (J).

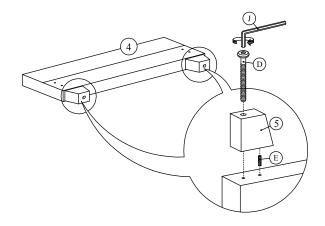



Attach Side Rail Support Leg (8) to the join of the Side Rail (6) and Side Rail (7) by securing with 4 Allen Bolts (B) , 4 Lock Washer (F) , 4 Flat washer (G) per support using Allen Key (J).

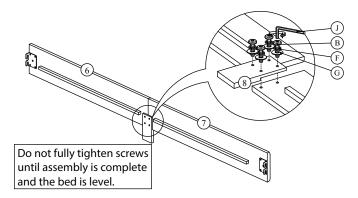

 Attach Support Legs (10) to Slat (9) by securing with 1 Allen Bolt (C) per support leg. Attach Slat (9) to Side Rail by securing with 1 Screw (H) per each side. Tighten all screws using philips head screw



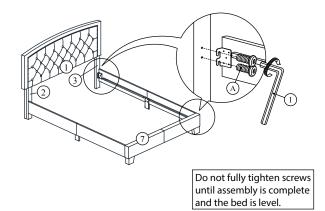

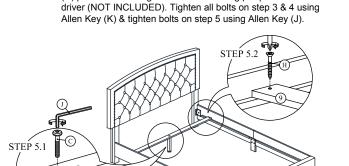

Cleaning & Care

6

5

3

Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.