


ASSEMBLY INSTRUCTION


DVDR HD1619-352C DRESSER


Manufactured by (DVDR) for ROOMS TO GO

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts. which may have come loose inside the carton during shipment. Identify and count all parts and compare with the parts list below:

	No.	Picture	Description	Dimension	Qty
			JCBC (M6) with Spring Washer and Washer	M6 x P1.0 x 40mm	8 Pcs
	2	\sim	Allen Key (M4)	4 x 65mm	1 Pc
Hardware List	3		Phillips Screwdriver	-	Not Provided
	No.	Description			Qty
	Α	Dresser			1 Pc
	В	Front Left Leg (Packed Inside Drawer)			1 Pc
Part List	С	Front Right Leg (Packed Inside Drawer)			1 Pc
	D	Back Left Leg (Packed Inside Drawer)			1 Pc
	Е	Back Right Leg (Packed Inside Drawer)			1 Pc
	F	Support Leg Center (packed Inside Drawer)			1 Pc
	G	Tipping Restraint (Packed Inside Drawer)			1 Pc

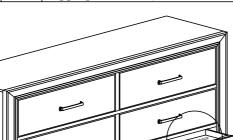

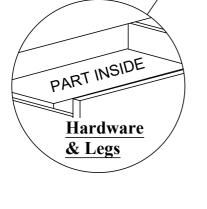

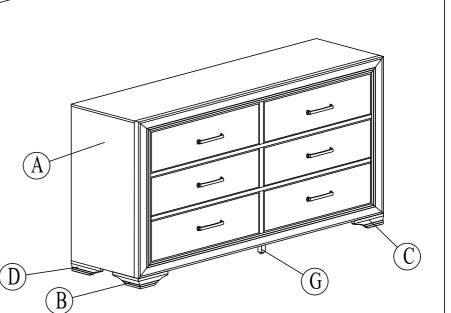

Hardware Pack Location (s) : Bolts pack inside bottom drawer (Leg inner carton)

Dresser SKU # 32116217

Version #1-2023/10/02

PAGE 1 OF 2

SKU# 32116217



ASSEMBLY INSTRUCTION

DVDR HD1619-352C DRESSER

Manufactured by (DVDR) for ROOMS TO GO

ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast and easy assembly.

A WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.

