





ASSEMBLY INSTRUCTION


RHHL

2095 - 110 DRESSER

 SKU 32120951

 Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts which may have come loose inside the carton during shipment. Identify and count all parts and compare with the parts list below.

HARDWARE LIST	NO.	Picture	Description	Dimension	Q'TY
	1		Flat Washer	1/4" x 16mm x 2mm	12 pcs
			Spring Washer	1/4" x 1.1mm	12 pcs
			Bolt	1/4" x 20 x 1-1/2"	12 pcs
	2		Allen Key	4 x 2-3/8"	1 pc
	3		Furniture Tipping Restraint		1 Set
COMPONENT LIST	4		Tool Required (not provided)		
	NO.	Description			Q'TY
	A	Dresser			1 pc
	B	Legs			2 Sets
	C	Support Leg			1 pc

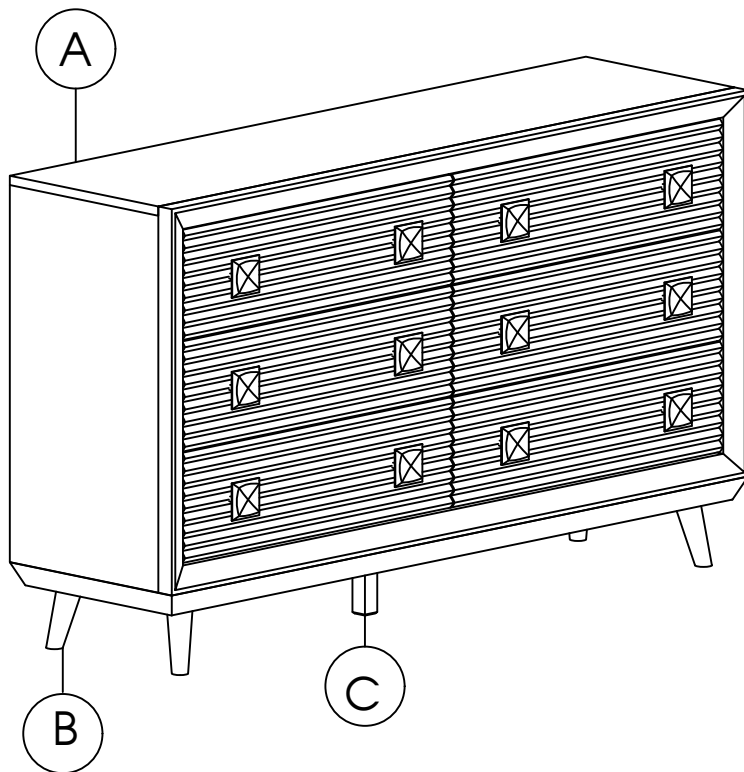

Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install tipover restraint provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

Hardware pack locations
2095 - 110 DRESSER, SKU#32120951

PARTS DETAILS

This product is manufactured **RHHL** for

ROOMS TO GO®

ASSEMBLY INSTRUCTION

RHHL


2095 - 110 DRESSER

SKU 32120951

ASSEMBLY STEP


STEP 1 To assemble leg to the dresser

Place Dresser on a clean and smooth surface such as a rug or carpet to avoid the dresser surface from being scratched

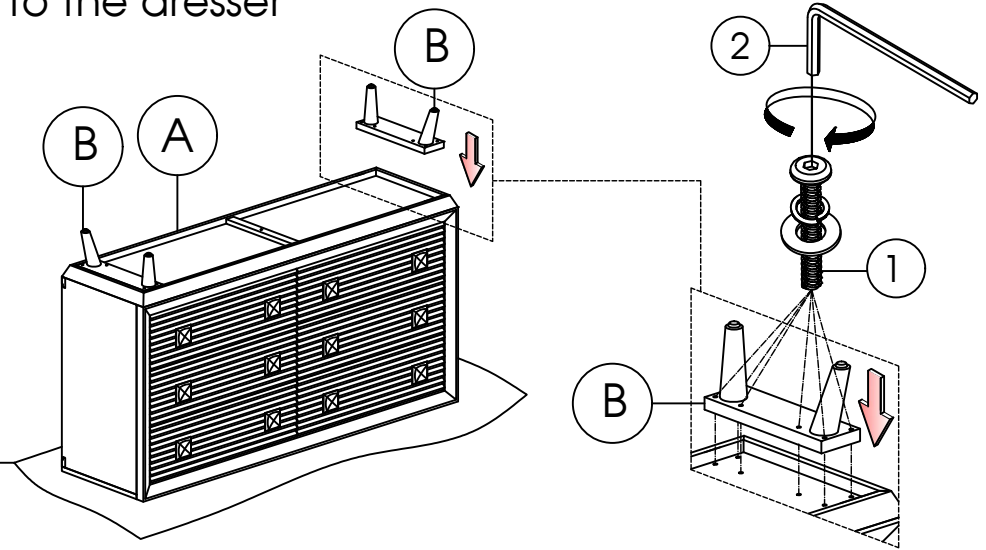


STEP 2 To assemble Support Leg to the dresser

Adjustable leveler

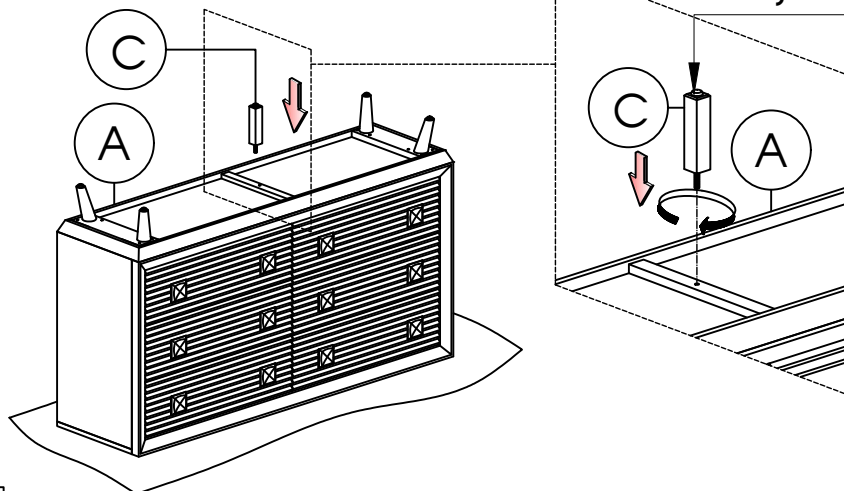

STEP 3 Attached the anti-tipping kit to the wall

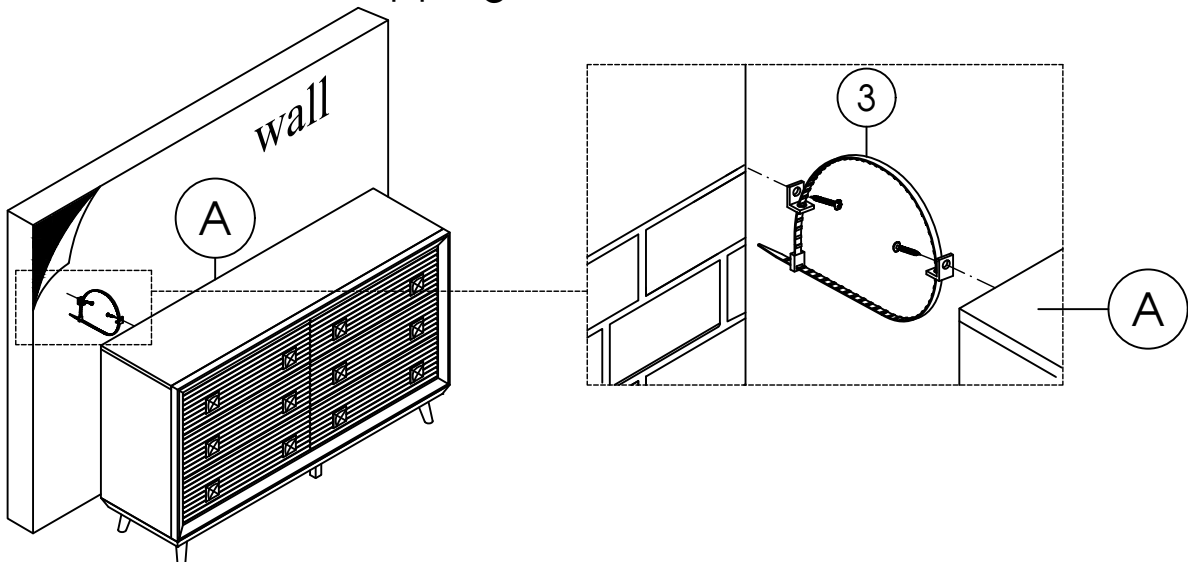

This product is manufactured **RHHL** for

ROOMS TO GO®