

ROOMS TO GO

 
 
Assembly Instructions

Manufactured by AUGR for Rooms To Go

AUGR RTG5888-01 MIRROR W/TOUCH LIGHT SKU# 32258899


AUGR RTG5888-10N DRESSER SKU# 32158897

*** Caution: Please read all instructions carefully before starting the assembly process. These parts are cumbersome and heavy. Therefore, two people are recommended in order to prevent personal injury and ensure the parts are not damaged during the assembly

CODE		PARTS LIST:	
A	Dresser		1 pc
B	Mirror		1 pc
C	Mirror Supports (Packed in Mirror Carton)		2 pcs

CODE		HARDWARE LIST		
1		Allen Wrench M4 x 2-1/4"		1 pc
2	PRE-INSTALLED ON PART C	Flat Washer Ø5/16"*19mm*2mm		8 pcs
		Spring Washer Ø5/16"*12*2		8 pcs
		Bolt Ø5/16"- 18*45mm		8 pcs
		Theaded Wassher Ø5/16*Ø9*10		8 pcs
3		Tipping Restraint		1 Set
TOOLS REQUIRED (NOT PROVIDED)				
Phillips Screwdriver 				

NOTE:1. BOLTS ARE PRE-INSTALLED ON THE MIRROR SUPPORT (C).
2. DO NOT FULLY TIGHTEN THE BOLTS UNTIL THE ENTIRE UNIT IS COMPLETELY ASSEMBLED .

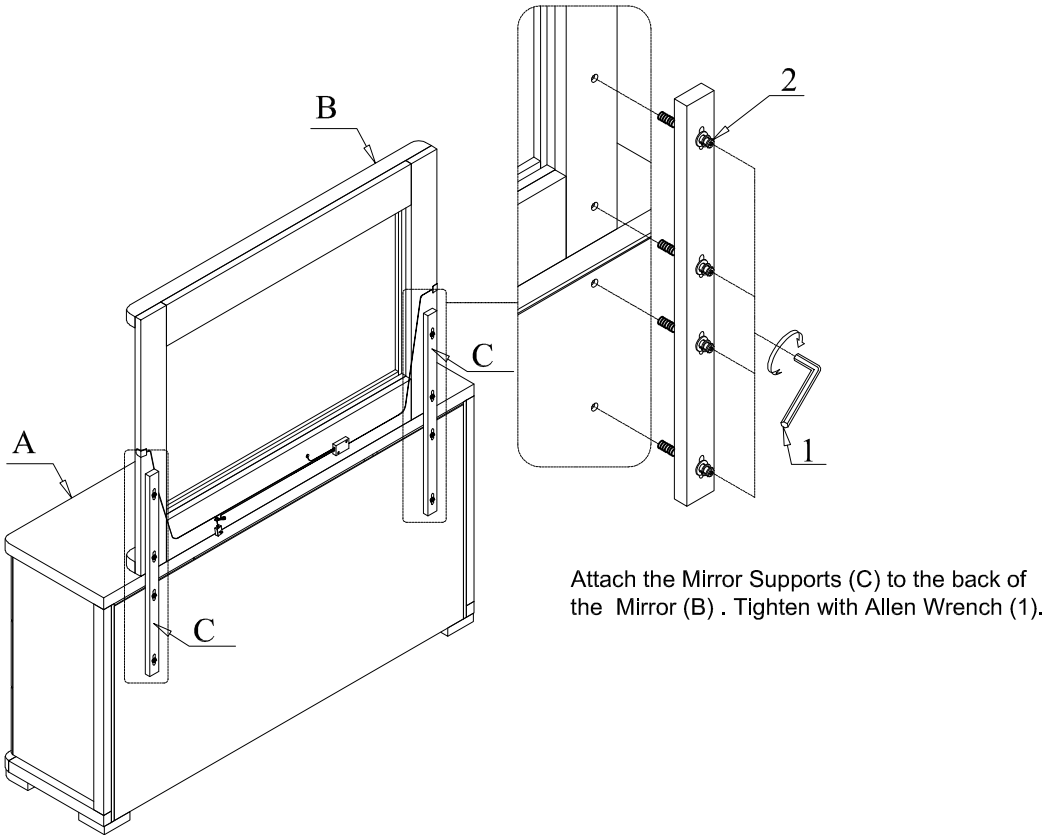

Hardware Pack Location (s):

AUGR RTG5888-01 MIRROR W/TOUCH LIGHT SKU# 32258899

AUGR RTG5888-10N DRESSER SKU# 32158897

Manufactured by AUGC for Rooms To Go


AUGC RTG5888-01 MIRROR W/TOUCH LIGHT

SKU# 32258899

AUGC RTG5888-10N DRESSER


SKU# 32158897

*** Caution: Please read all instructions carefully before starting the assembly process. These parts are cumbersome and heavy. Therefore, two people are recommended in order to prevent personal injury and ensure the parts are not damaged during the assembly

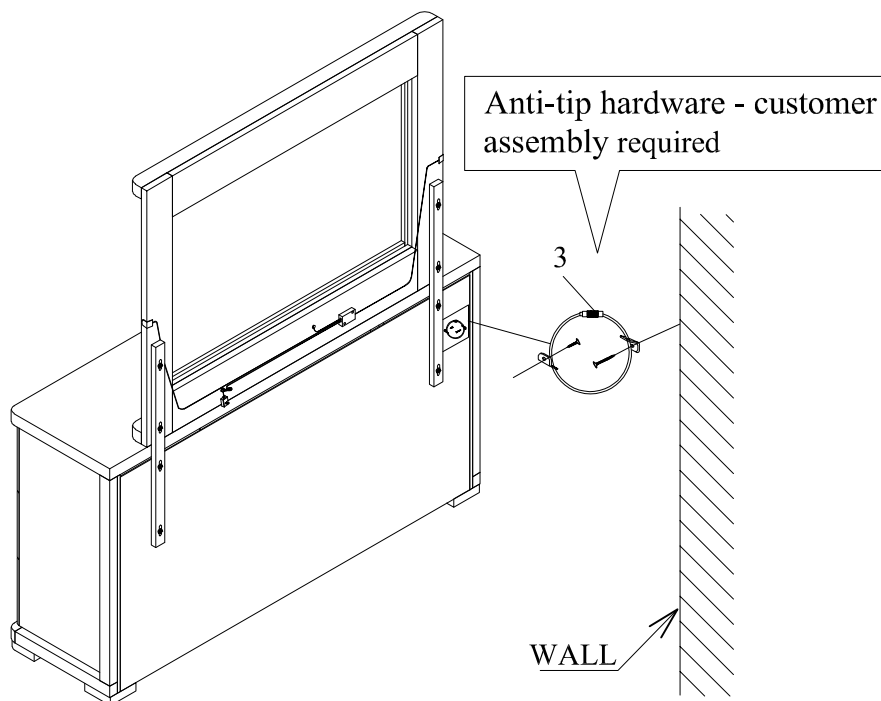

Your Touch is the Switch

Touch 1-Night light
Touch 2-Energy saver light
Touch 3-Bright reading light
Touch 4-Off

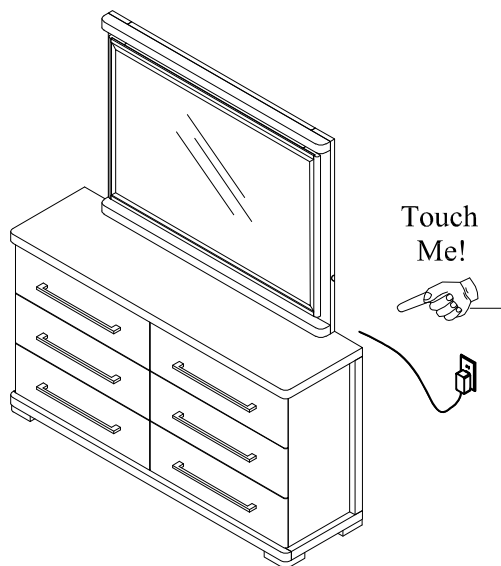

COMPLETE

ELECTRICAL SAFETY INSTRUCTIONS

WARNING: DO not use extension cords or surge protectors unless they meet the following requirements:

- Cords must be 3rd party listed and rated for at least 15 amps at 120 V Third party listing symbol examples.
- Use the minimum length extension cord possible.
- Check the cord for fraying, cuts, melted areas, or other damage.
- Never plug an extension cord into another extension cord.
- Household outlets should be GFCI protected, otherwise a GFCI protected extension cord should be used.

Hardware Pack Location (s):

AUGC RTG5888-01 MIRROR W/TOUCH LIGHT
AUGC RTG5888-10N DRESSER

SKU# 32258899
SKU# 32158897

IMPORTANT SAFETY INSTRUCTIONS



Misuse can result in FIRE or DEATH by ELECTRICAL SHOCK

12V/2.5A/30W
VANTAGE CITY GROUP LIMITED
VAN-USAD-3012-F-AJC

Read all instructions before using this furnishing.

DANGER - To reduce the risk of electric shock: persons:

WARNING - To reduce the risk of burns, fire, electric shock, or injury to

- Always unplug this furnishing from the electrical outlet before cleaning or servicing.
- Unplug from outlet before putting on or taking off parts.
- Never operate this furnishing if it has a damaged electrical cord or plug, if it is not repair.
- water. Stop using this furnishing and call a service center for examination and working properly, or if the electrical cord or plug has been damaged or dropped into
- Keep the electrical cord and plug away from heated surfaces and other heat sources.
- To disconnect, turn all controls to the off position, then remove plug from outlet.
- When operating, ensure that electrical cord is not under the base, legs, or motion mechanism to avoid damage to electrical cord or plug.
- Do not strain or stretch electrical cord.
- Do not use extension cords or power strips.
- Keep out of reach of children. This is not a toy.
- Plug directly into a compatible electrical socket.
- Do not modify the plug or use any adapters.

INSTRUCCIONES DE SEGURIDAD IMPORTANTES



El mal uso puede provocar INCENDIO o MUERTE por DESCARGA ELÉCTRICA

12V/2.5A/30W
VANTAGE CITY GROUP LIMITED
VAN-USAD-3012-F-AJC


Leer todas las instrucciones antes de usar este mobiliario.

PELIGRO - Para reducir el riesgo de descarga eléctrica:


- Siempre desenchufe este accesorio de la toma de corriente eléctrica antes de limpiarlo o repararlo.

ADVERTENCIA: Para reducir el riesgo de quemaduras, incendios, descargas eléctricas o lesiones a personas:

- Desenchufe del tomacorriente antes de colocar o quitar partes.
- Nunca opere este accesorio si tiene un cable o enchufe eléctrico dañado, si no funciona correctamente, o si el cable o el enchufe eléctrico se ha dañado o se ha caído al agua. Deje de usar este equipamiento y llame a un centro de servicio para que lo examinen y lo reparen.
- Mantenga el cable eléctrico y el enchufe lejos de superficies calientes y otras fuentes de calor.
- Para desconectar, gire todos los controles a la posición de apagado. Luego retire el enchufe del tomacorriente.
- Al operar, asegúrese de que el cable eléctrico no esté debajo de la base, las patas o el mecanismo de movimiento para evitar dañar el cable eléctrico o el enchufe.
- No fuerce ni estire el cable eléctrico.
- No utilizar cables de extensión o tomas de corriente.
- Mantener fuera del alcance de los niños. Esto no es un juguete.
- Enchufe directamente a una toma de corriente compatible.
- No modifique el enchufe ni utilice adaptadores.

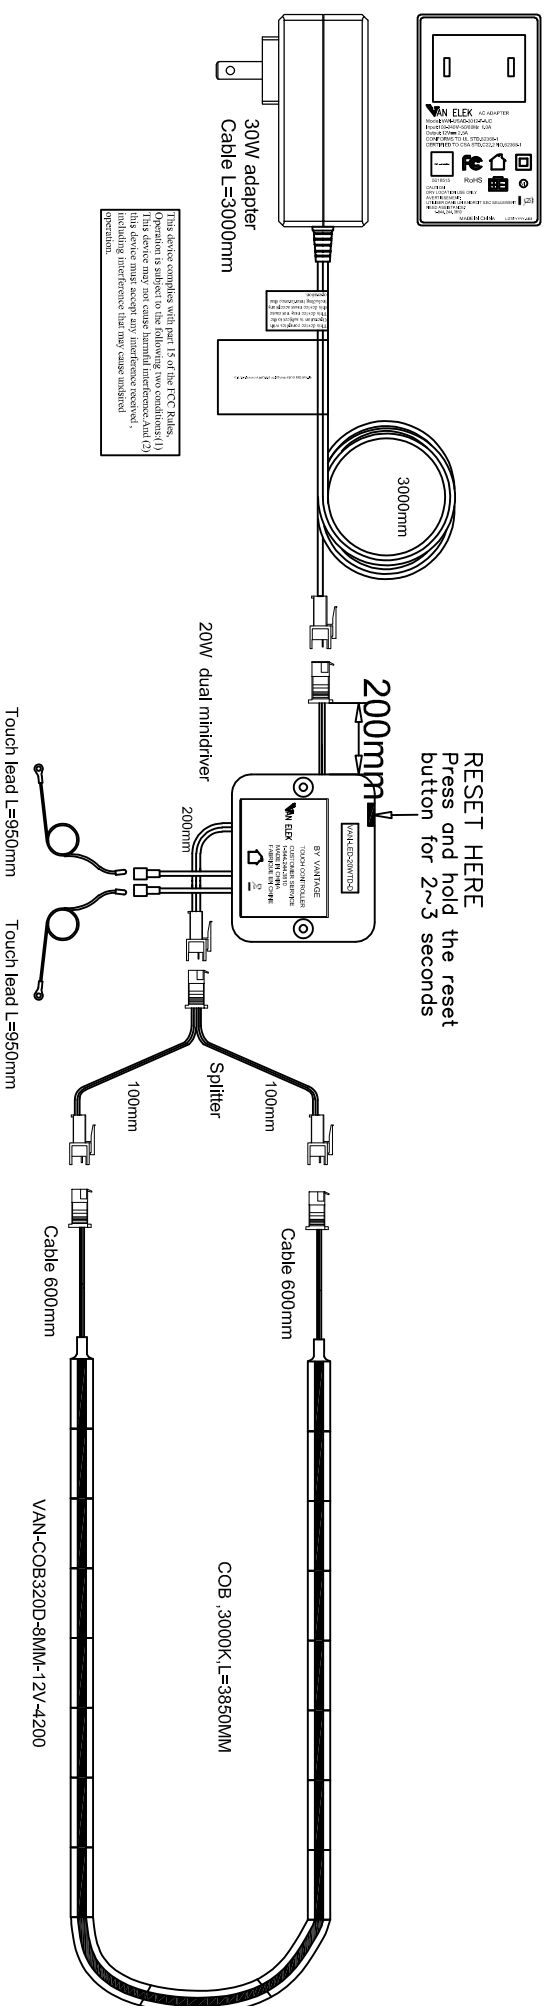

PART LIST		
#	ITEM CODE	QTY
1	VAN-USAD-3012-F-AJC	1pc
2	VAN-LED - 20W/TD - D	1pc
3	DLC - 600	2pos
4	Y-C-07	1pc
5	VAN-COB320D-8MM-12V-4200	1pc

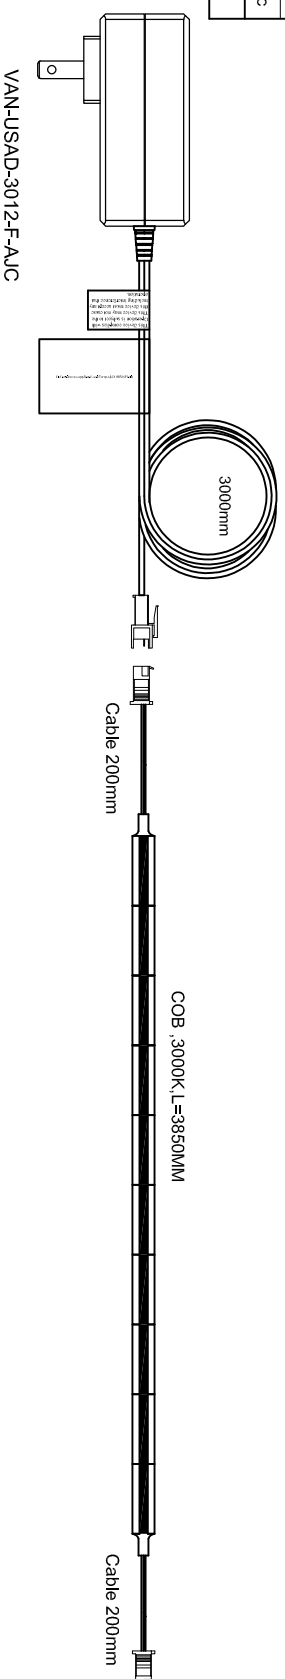

1. Inspect wiring for any signs of cut wires or loose connections.
2. To make sure all connections are securely fastened, disconnect and then reconnect all connections.
3. Press and hold reset button located on the top edge of the Mini Driver for 2-3 seconds.

4. If the LED Strip Light still does not turn on, unplug the Mini Driver from Adapter, unplug the LED Strip Light from the Mini Driver, then directly connect the LED strip light connection to the Adapter.
5. If the LED Strip Light turns on, the Mini Driver must be replaced.

CARING FOR YOUR FURNITURE

• Protect your investment

- The beauty of furniture care is that it helps to protect your investment, as fine furniture is an important purchase
- Proper care will help maintain your furniture's finish and ensure that it looks great year after year

• Caring for furniture

- Caring furniture is easy. Following a few simple guidelines will help extend the life of your furniture
- Always dust with a cloth moistened with polish. Polish cushions the cloth, eliminating the scratching that occurs with dry dusting. Dust will scratch furniture if not removed quickly. Use a soft clean cloth that won't scratch the surface. Avoid coarse or scratchy materials or fabrics
- Avoid using soap and water on furniture. Water can penetrate the finish and raise the grain on wood that cause damage to furniture.

• The Enemies Of Furniture

- Many common problems in furniture care are caused by the elements. If you are aware of these trouble makers the resulting damage can easily be avoided
- Sunlight's ultraviolet rays can damage wood finishes. Arrange furniture out of direct sunlight use sun screening intense sunlight hours rotate furniture in place and room arrangement
- Liquid spills will damage furniture if not removed promptly. Use coasters under beverage glasses and saucers under cups and flowerpots. If a spill occurs. Immediately blot it gently without rubbing the surface.
- Heat creates a chemical change in the furniture finish. Which can result in a white spot. Use protective mats under hot dishes, utensils or cooking appliances
- Cyclic changes in temperature can damage furniture. Placing furniture near to central heating radiator and air duct should be avoided because this causes extreme localized drying of the wood

• Tips For Better Dusting

- Be sure to use the same type of polish consistently. Your furniture will appear cloudy or streaky if oil based or wax based polishes are interchange
- Always use a fine furniture polish when dusting. Never dry dust as it could cause scratches on your furniture's surface. Remember to change dusting cloths frequently since a dirty cloth may scratch your furniture's surface.
- Spray your furniture surface evenly but not too generously. Wipe in a circular motion with a soft clean cloth.
- Then buff until completely dry for a beautiful shine and smudge free finish. For wood trim spray polish on the cloth first then dust.

CARING AND CLEANING INSTRUCTIONS FOR GLASS AND MIRROR

- Always use a soft, lint-free or microfiber cloth to clean glass or mirror surfaces.
- Apply glass cleaner directly onto the cloth — do not spray directly onto the surface, especially around edges or frames.
- Wipe gently in a circular or vertical motion to avoid streaks.
- For regular cleaning, use a mixture of water and a mild glass cleaner.
- Do not use ammonia-based, acid-based, or abrasive cleaners, as they may scratch or damage the surface.
- Do not use rough sponges, steel wool, or scouring pads.
- Do not allow excess liquid to seep into the edges of mirrors, as this may cause de-silvering or frame damage.
- Do not place mirrors or glass panels near high humidity areas or heat sources without proper sealing.