

Assembly instructions for

Dresser & Mirror 9592-110 & 120

Dresser & Mirror 9594-110 & 120

 
Dresser & Mirror 9596-110 & 120

32195922 & 32295924
RIEE : 32195946 & 32295948
32195960 & 32295962


Caution: Please read instructions thoroughly before unpacking assembly parts. Sharp, exposed staple tips can cause injury, therefore, for your protection, please remove any exposed staples used in packing.

1. We recommend that you should assemble this product with the assistance of another person; this will make assembly easier, and will help to eliminate damage to the product or injury to persons during assembly.
2. Be sure to check all packing materials carefully for small parts that may have come loose inside the carton during shipment.
3. Please do not over tighten screws or bolts.
4. Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

- Do not allow children to climb on furniture.
- Do not place television sets on top of chests, door chests and/or dressers.
- Please place heaviest objects in the lowest drawers.
- Please have no more than one drawer open at a time.

PARTS LIST FOR MIRROR (9592,9594,9596-120)			
A		Mirror Back Support Rails	2 pieces

NO.:	HARDWARE LIST FOR DRESSER (9592,9594,9596-110)		Q'TY
1		TIPPING RESTRAINT KIT	1 set

HARDWARE LIST FOR MIRROR (9592,9594,9596-120)			
2		(L110x4MM) ALLEN KEY	1 piece
3		(Ø1/4*20*1-1/2"L) BOLT	8 pieces
		(Ø1/4*10*1.2MM) SPRING WASHER	8 pieces
		(Ø1/4*19*2MM) FLAT WASHER	8 pieces

