 
 



DVDR
9294-351 Dresser SKU#32192940 / 9394-351 Dresser SKU#32193942
9294-422 Mirror SKU#32292942 / 9394-422 Mirror SKU#32293944

WARNING: The bolts are pre-assembled. To avoid alignment issue, please don't tighten the screws unless all legs are adjusted at the same level.

Step	Code	HARDWARE LIST	Q'ty
2	1	Allen Key Z 4mm 	1 Pc
3	2	Tipping Restraint (Customer to assemble) 	1 Pc
TOOLS REQUIRED (NOT PROVIDED)			
Description		Sketch	
Phillips screwdriver			

HARDWARE LIST			Q'ty
Pre-installed on B	Allen Bolt Ø5/16" x 18 x 1 1/3" Pre-install		8 Pcs
	Spring Washer Ø5/16" Pre-install		8 Pcs
	Flat Washer Ø5/16" Pre-install		8 Pcs
	Threaded Washer Ø5/16" x 21.5 x 10mm Pre-install		8 Pcs

Code	PARTS LIST	Q'TY
A	MIRROR 	1 PC
B	MIRROR SUPPORT 	2 PCS
C	DRESSER (Sold Separately) 	1 PC

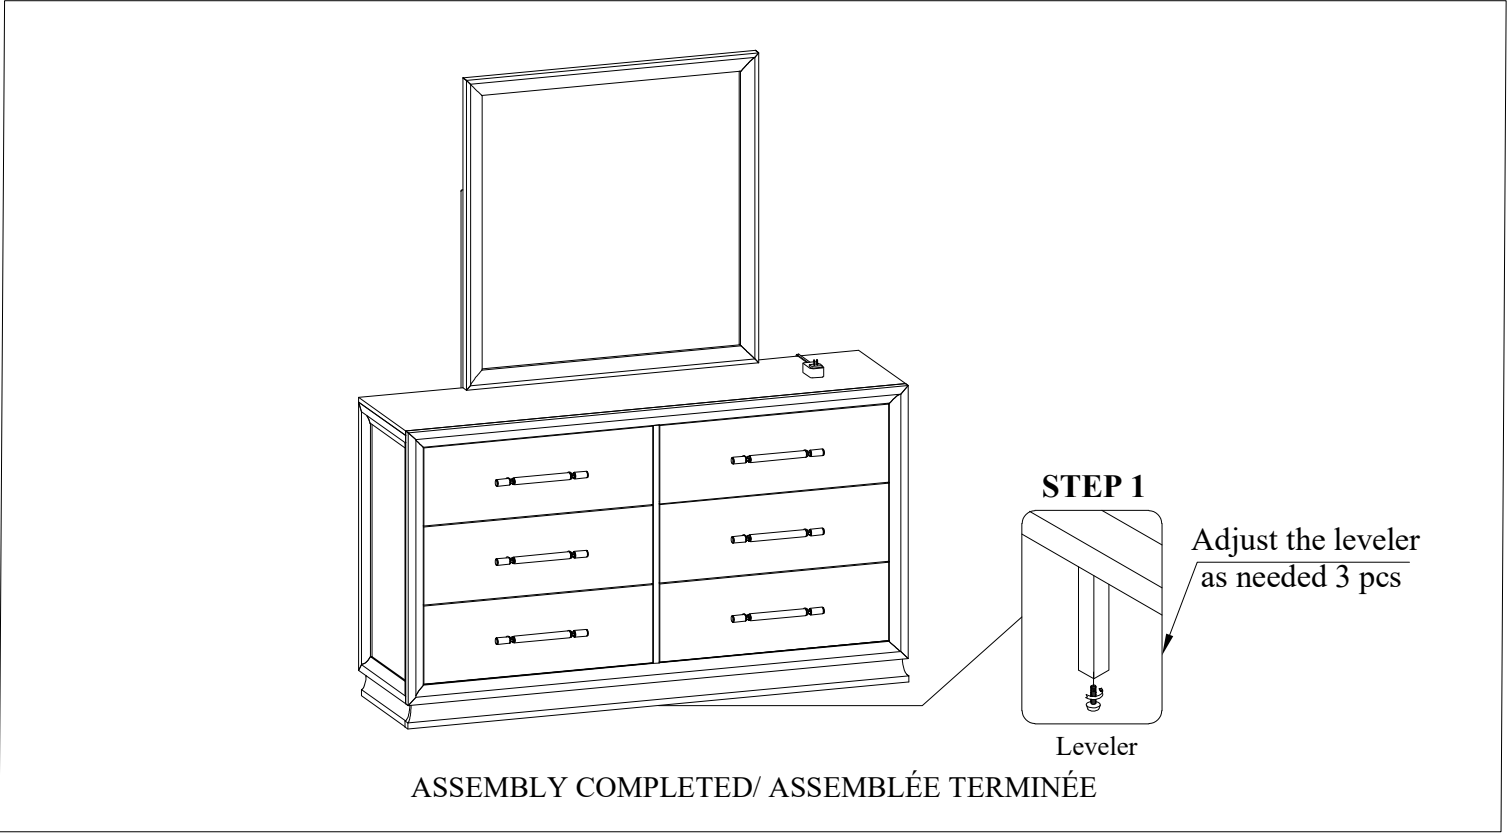

Hardware Pack Location (s): DVDR 9294-422 Mirror SKU#32292942 / 9394-422 Mirror SKU#32293944
DVDR 9294-351 Dresser SKU#32192940 / 9394-351 Dresser SKU#32193942


DVDR

9294-351 Dresser SKU#32192940 / 9394-351 Dresser SKU#32193942
9294-422 Mirror SKU#32292942 / 9394-422 Mirror SKU#32293944

WARNING: The bolts are pre-assembled. To avoid alignment issue, please don't tighten the screws unless all legs are adjusted at the same level.

STEP 1: Attached the Mirror (A) to the Dresser (C) with Mirror support (B). Use the Allen key (1) from the Hardware package to tighten the allen bolts to the mirror. Allen bolt is already attached to the mirror support.

STEP 2: Please use a screwdriver (not provided) to install the tipping restraint kit

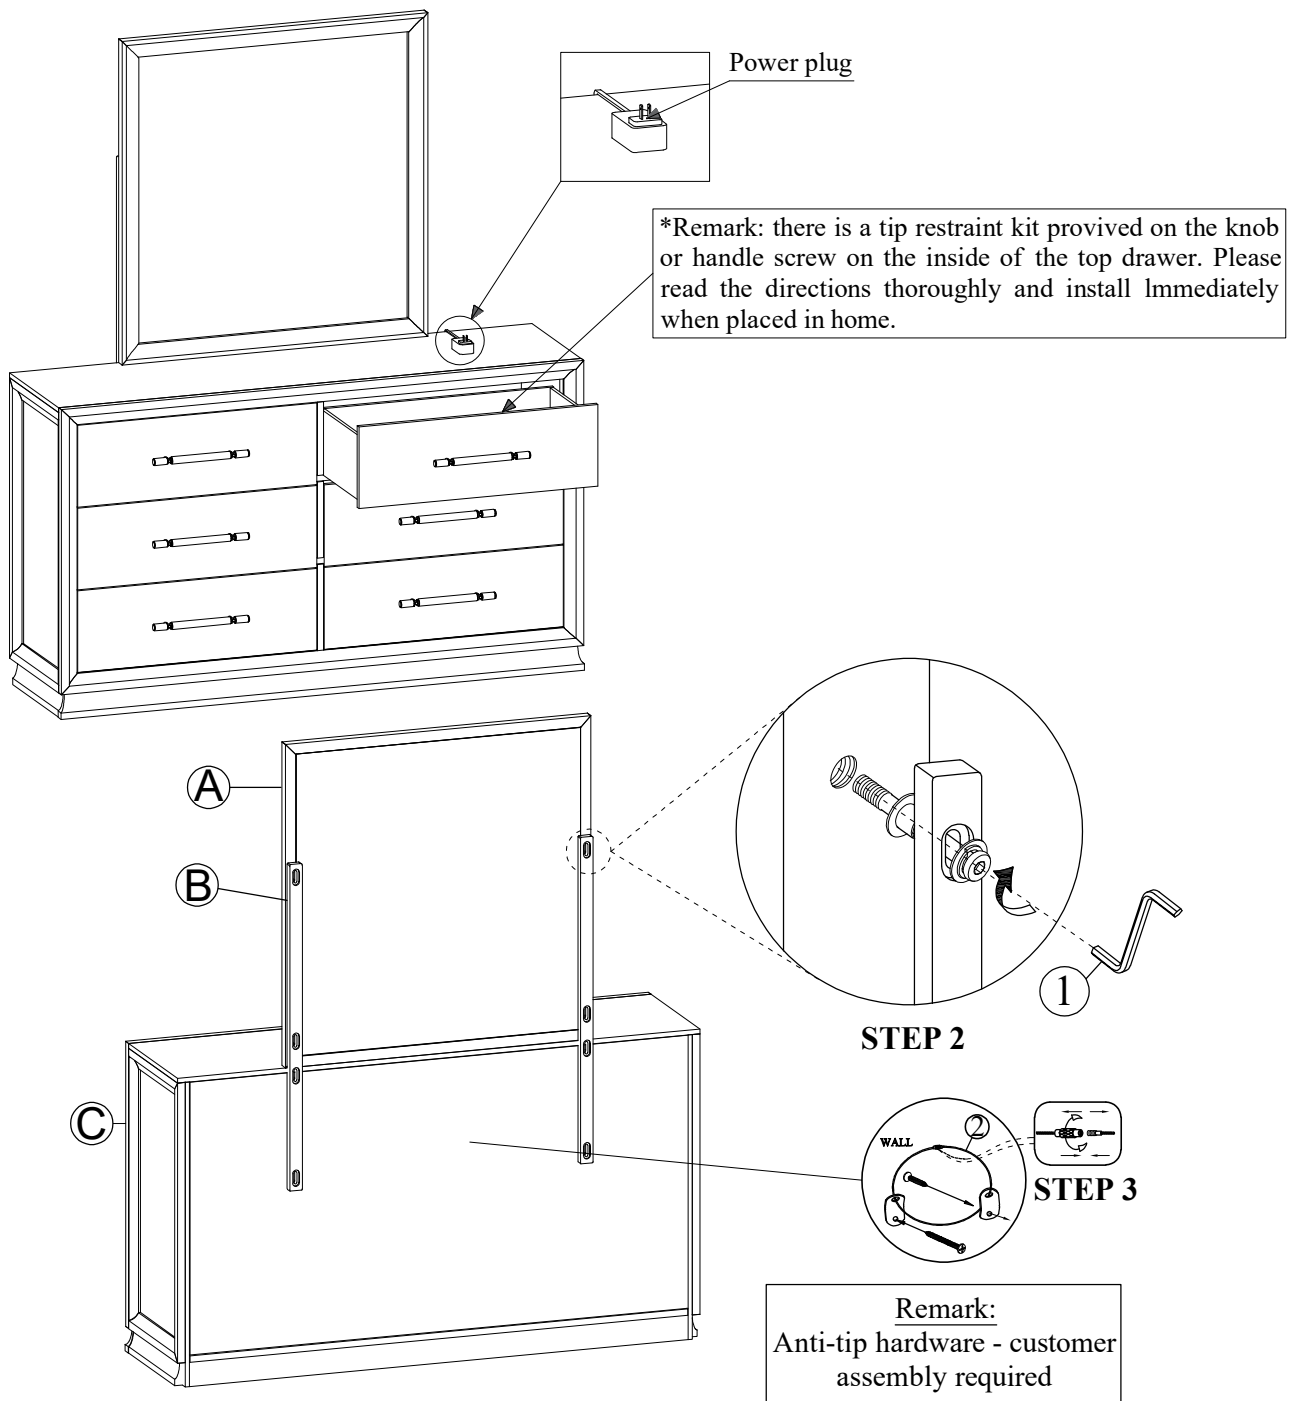

Hardware Pack Location (s): DVDR 9294-422 Mirror SKU#32292942 / 9394-422 Mirror SKU#32293944
DVDR 9294-351 Dresser SKU#32192940 / 9394-351 Dresser SKU#32193942

IMPORTANT SAFETY INSTRUCTIONS



WARNING

Misuse can result in FIRE or DEATH by ELECTRICAL SHOCK

ELECTRICAL RATING (12VDC / 1.0 AMPERES)

Dongguan Shijie Hua Xu Electronics Factory

PART NUMBER (HX13-1201000-AU-001)

Read all instructions before using this furnishing.

DANGER - To reduce the risk of electric shock:

1. Always unplug this furnishing from the electrical outlet before cleaning or servicing.

WARNING - To reduce the risk of burns, fire, electric shock, or injury to persons:

1. Unplug from outlet before putting on or taking off parts.
2. Never operate this furnishing if it has a damaged electrical cord or plug, if it is not working properly, or if the electrical cord or plug has been damaged or dropped into water. Stop using this furnishing and call a service center for examination and repair.
3. Keep the electrical cord and plug away from heated surfaces and other heat sources.
4. To disconnect, turn all controls to the off position, then remove plug from outlet.
5. When operating, ensure that electrical cord is not under the base, legs, or motion mechanism to avoid damage to electrical cord or plug.
6. Do not strain or stretch electrical cord.
7. Do not use extension cords or power strips.
8. Keep out of reach of children. This is not a toy.
9. Plug directly into a compatible electrical socket.
10. Do not modify the plug or use any adapters.

INSTRUCCIONES DE SEGURIDAD IMPORTANTES



WARNING

El mal uso puede provocar INCENDIO o MUERTE por DESCARGA ELÉCTRICA

CLASIFICACION ELECTTRICA (12VDC/ 1.0AMPERES)

Dongguan Shijie Hua Xu Electronics Factory
PART NUMBER (HX13-1201000-AU-001)

Leer todas las instrucciones antes de usar este mobiliario.

PELIGRO - Para reducir el riesgo de descarga electrica:

1. Siempre desenchufe este accesorio de la toma de corriente eléctrica antes de limpiarlo o repararlo.

ADVERTENCIA : para reducir el riesgo de quemaduras, incendios, descargas eléctricas o lesiones a personas:

1. Desenchufe del tomacorriente antes de colocar o quitar partes.
2. Nunca opere este accesorio si tiene un cable o enchufe eléctrico dañado, si no funciona correctamente, o si el cable o el enchufe eléctrico se ha dañado o se ha caído al agua. Deje de usar este equipamiento y llame a un centro de servicio para que lo examinen y lo reparen.
3. Mantenga el cable eléctrico y el enchufe lejos de superficies calientes y otras fuentes de calor.
4. Para desconectar, gire todos los controles a la posición de apagado, luego retire el enchufe del tomacorriente.
5. Al operar, asegúrese de que el cable eléctrico no esté debajo de la base, las patas o el mecanismo de movimiento para evitar dañar el cable eléctrico o el enchufe.
6. No fuerce ni estire el cable eléctrico.
7. No utilizar cables de extensión o tomas de corriente.
8. Mantener fuera del alcance de los niños. Esto no es un juguete.
9. Enchúfelo directamente a una toma de corriente compatible.
10. No modifique el enchufe ni utilice adaptadores.

CARING FOR YOUR FURNITURE

Protect your investment

The beauty of furniture care is that it helps to protect your investment, as fine furniture is an important purchase.

Proper care will help maintain your furniture's finish and ensure that it looks great year after year.

Caring for furniture

Caring for furniture is easy. Following a few simple guidelines will help extend the life of your furniture.

- Always dust with a cloth moistened with polish. Polish cushions the cloth, eliminating the scratching that occurs with dry dusting. Dust will scratch furniture if not removed quickly. Use a soft clean cloth that won't scratch the surface. Avoid coarse or scratchy materials or fabrics.
- Avoid using soap and water on furniture. Water can penetrate the finish and raise the grain on wood. Causing damage.

The Enemies of Furniture

Many common problems in furniture care are caused by the elements. If you are aware of these troublemakers, the resulting damage can easily be avoided.

- Sunlight's ultraviolet rays can damage wood finishes. Arrange furniture out of direct sunlight use sun screening drapes during intense sunlight hours, rotate furniture in place and room arrangement.
- Liquid spills will damage furniture if not removed promptly. Use coasters under beverage glasses and saucers under cups and flowerpots. If a spill occurs, immediately blot it gently without rubbing the surface.
- Heat creates a chemical change in the furniture finish, which can result in a white spot. Use protective mats under hot dishes, utensils or cooking appliances.
- Cyclic changes in temperature can damage furniture. Placing furniture near to central heating radiators and air ducts should be avoided because this causes extreme localized drying of the wood.

Tips for Better Dusting

- Be sure to use the same type of polish consistently. Your furniture will appear cloudy or streaky if oil based or wax based polishes are interchange.
- Always use a fine furniture polish when dusting. Never dry dust, as it could cause microscopic scratches on your furniture's surface. Remember to change dusting cloths frequently since a dirty cloth may scratch your furniture's surface.
- Spray your furniture surface evenly, but not too generously. Wipe in a circular motion with a soft clean cloth to clean and loosen old polish.
- Then buff until completely dry for a beautiful shine and a smudge free finish. For wood trim spray polish on the cloth first, then dust.

ELECTRICAL SAFETY INSTRUCTIONS

WARNING: DO not use extension cords or surge protectors unless they meet the following requirements:

- Cords must be 3rd party listed and rated for at least 15 amps at 120 V *Third party listing symbol examples.*
- Use the minimum length extension cord possible.
- Check the cord for fraying, cuts, melted areas, or other damage.
- Never plug an extension cord into another extension cord.
- Household outlets should be GFCI protected, otherwise a GFCI protected extension cord should be used.