



ASSEMBLY INSTRUCTION

SLAW 1414-050 2 DRAWER NIGHTSTAND - SKU# 32514146

Manufactured by SLAW for Rooms To Go

Version#1 - 04/15/2025

*** Caution: Please read all instructions carefully before starting the assembly process. These parts are cumbersome and heavy. Therefore, two people are recommended in order to prevent personal injury and ensure the parts are not damaged during the assembly

 
PARTS LIST :

No.	Description	Sketch	Q'ty
1	Nightstand		1Pc
2	Front Leg		2Pcs
3	Back Left Leg		1Pc
4	Back Right Leg		1Pc

HARDWARE LIST:

No.	Description	Size	Sketch	Q'ty
A	Allen Key	4mm		1Pc
B	Furniture Tipping Restraint			1 Set

TOOL REQUIRED (NOT PROVIDED)


Description	Sketch
Phillip Screwdriver	

STEP 1: Take the feet box out of the bottom drawer. Use allen key (A) to assemble 4 Legs (Front & Back) in the correct position under the nightstand (see illustration below). Do not tighten all bolts until the nightstand is fully assembled.

STEP 2: Plug the adapter into the socket.

STEP 3: Position the nightstand in its desired location. Refer to the assembly instructions of anti-tipping kit to secure the nightstand to the wall. If any feet are not firmly touching the ground, unscrew adjustable levelers on 2 front legs until the nightstand is stable.

STEP 1

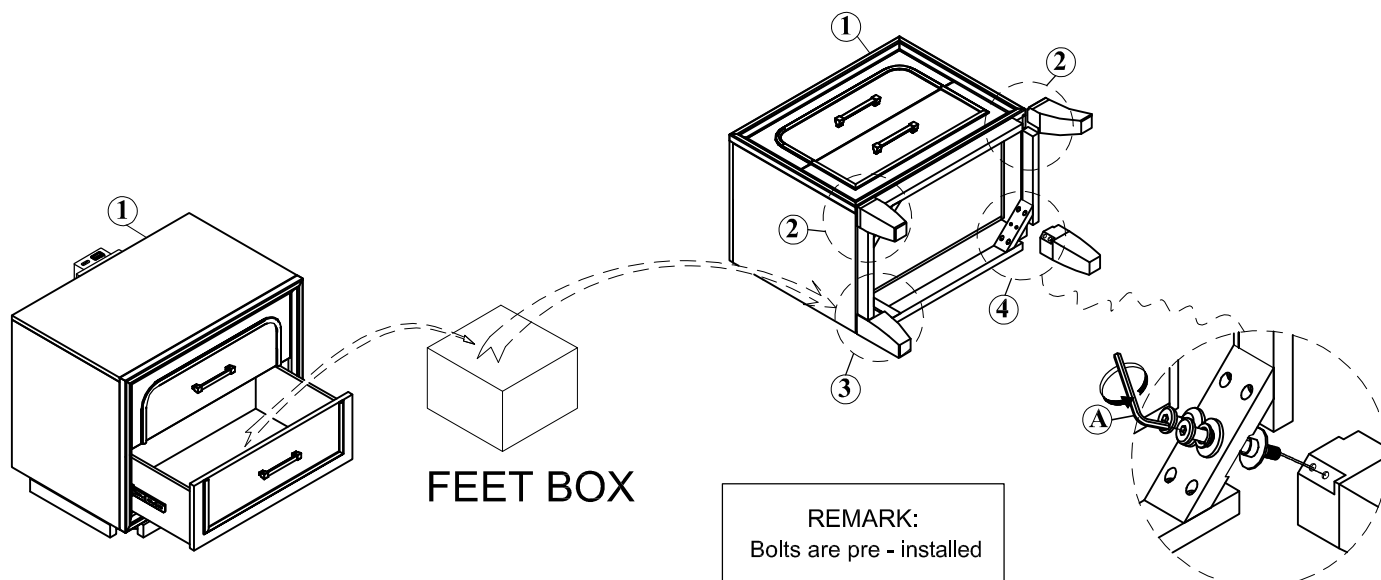

Hardware Pack Location (S): 1414-050 2 DRAWER NIGHTSTAND - SKU# 32514146



ASSEMBLY INSTRUCTION


SLAW 1414-050 2 DRAWER NIGHTSTAND - SKU# 32514146

Manufactured by SLAW for Rooms To Go

Version#1 - 04/15/2025


*** Caution: Please read all instructions carefully before starting the assembly process. These parts are cumbersome and heavy. Therefore, two people are recommended in order to prevent personal injury and ensure the parts are not damaged during the assembly

STEP 2

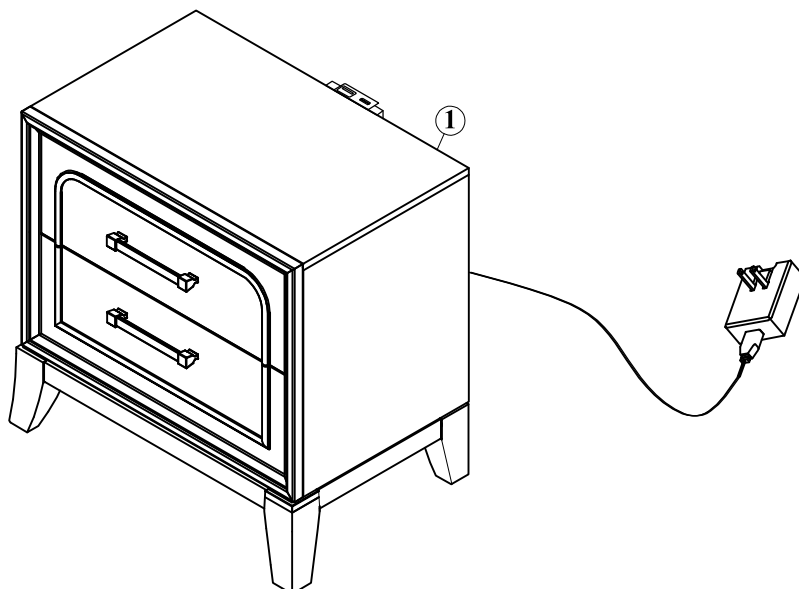

STEP 3

REMARK:
Anti-tip hardware - customer
assembly required

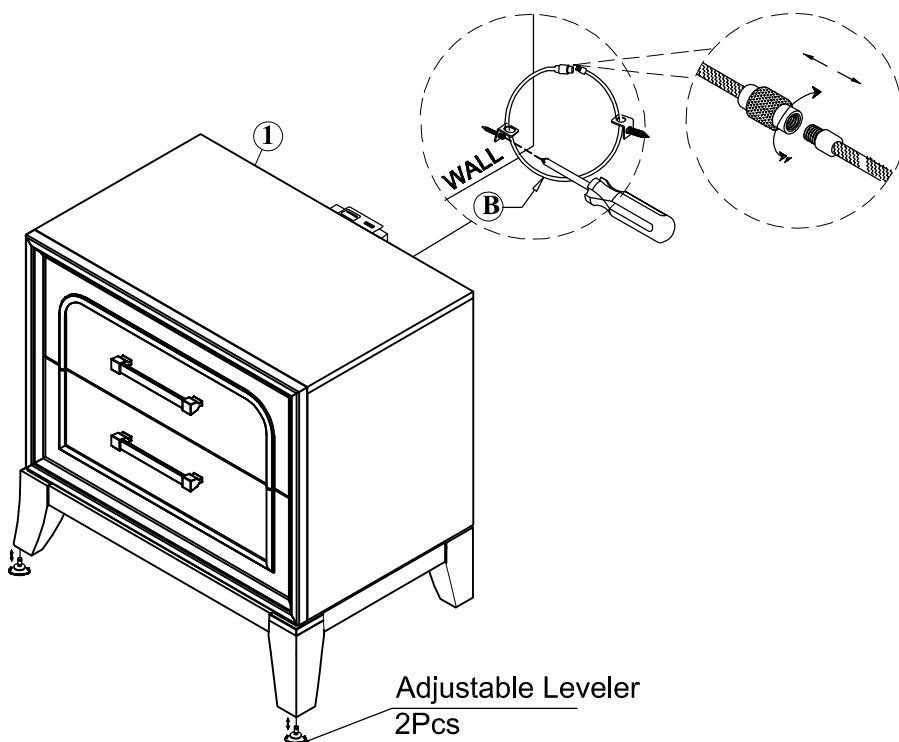

Hardware Pack Location (S): 1414-050 2 DRAWER NIGHTSTAND - SKU# 32514146

IMPORTANT SAFETY INSTRUCTIONS



WARNING

Misuse can result in FIRE or DEATH by ELECTRICAL SHOCK

I/P: 100-240Vac, 50/60Hz, 0,5A, O/P: 5V-3A
[IDEAL ENTERPRISE CO., LTD]
IDL20-1216-01

Read all instructions before using this furnishing.

DANGER – To reduce the risk of electric shock:

- . Always unplug this furnishing from the electrical outlet before cleaning or servicing.

WARNING – To reduce the risk of burns, fire, electric shock, or injury to persons:

- . Unplug from outlet before putting on or taking off parts.
- . Never operate this furnishing if it has a damaged electrical cord or plug, if it is not working properly, or if the electrical cord or plug has been damaged or dropped into water. Stop using this furnishing and call a service center for examination and repair.
- . Keep the electrical cord and plug away from heated surfaces and other heat sources.
- . To disconnect, turn all controls to the off position, then remove plug from outlet
- . When operating, ensure that electrical cord is not under the base, legs, or motion mechanism to avoid damage to electrical cord or plug.
- . Do not strain or stretch electrical cord.
- . Do not use extension cords or power strips.
- . Keep out of reach of children. This is not a toy.
- . Plug directly into a compatible electrical socket.
- . Do not modify the plug or use any adapters.

INSTRUCCIONES DE SEGURIDAD IMPORTANTES



WARNING

El mal uso puede provocar INCENDIO o MUERTE por DESCARGA ELÉCTRICA

I/P: 100-240Vac, 50/60Hz, 0,5A, O/P: 5V-3A
[IDEAL ENTERPRISE CO., LTD]
IDL20-1216-01

Leer todas las instrucciones antes de usar este mobiliario.

PELIGRO – Para reducir el riesgo de descarga eléctrica:

- Siempre desenchufe este accesorio de la toma de corriente eléctrica antes de limpiarlo o repararlo.

ADVERTENCIA: para reducir el riesgo de quemaduras, incendios, descargas eléctricas o lesiones a personas:

- Desenchufe del tomacorriente antes de colocar o quitar partes.
- Nunca opere este accesorio si tiene un cable o enchufe eléctrico dañado, si no funciona correctamente, o si el cable o el enchufe eléctrico se ha dañado o se ha caído al agua. Deje de usar este equipamiento y llame a un centro de servicio para que lo examinen y lo reparen.
- Mantenga el cable eléctrico y el enchufe lejos de superficies calientes y otras fuentes de calor.
- Para desconectar, gire todos los controles a la posición de apagado, luego retire el enchufe del tomacorriente.
- Al operar, asegúrese de que el cable eléctrico no esté debajo de la base, las patas o el mecanismo de movimiento para evitar dañar el cable eléctrico o el enchufe.
- No fuerce ni estire el cable eléctrico.
- No utilizar cables de extensión o tomas de corriente.
- Mantener fuera del alcance de los niños. Esto no es un juguete.
- Enchúfelo directamente a una toma de corriente compatible.
- No modifique el enchufe ni utilice adaptadores.