

CHESSER DRAWER BOTTON 68.02A
CHESSER DRAWER TOP 68.02B

VENDOR CODE: INDD


SKU 33171769
33171834
33171264
33171581
33171769
33171733



01 Place Chesser Drawer top
on top of Chesser Drawer bottom.




Ax04

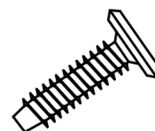


Width: 1/4"
Lenght: 1"
TPI: 20

Bx02

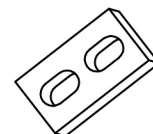

Cx01

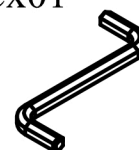

02 Use 2 metal plates and 4 screws to
secure Chesser Drawer Top on
Chesser Drawer Bottom.
Place metal plates on the back.

